


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

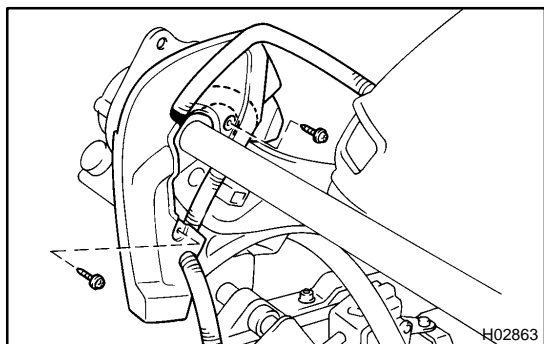

1. INSTALL SEATBACK ASSEMBLY

- (a) Install the wire harness to the seat cushion inside covers as shown in the illustration.

NOTICE:

Be careful not to damage the wire harness.

- (b) Install the seat cushion inside cover with the 2 screws.

HINT:

Do the same for LH and RH.

- (c) Install the seatback assembly with the 4 bolts.


Torque: 61 N·m (622 kgf-cm, 45 ft-lbf)

- (d) Install new hog rings.

HINT:

When installing hog rings, take care to prevent wrinkles as least as possible.

- (e) Install the seatback board with the 2 screws to the seat-back assembly.

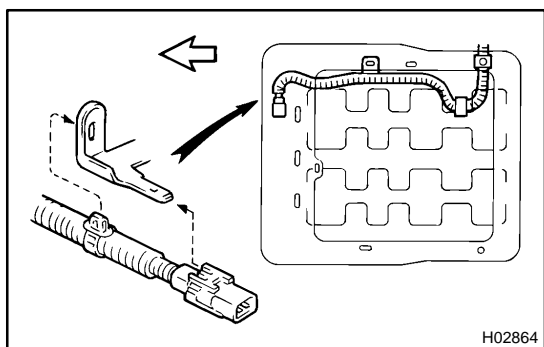

2. INSTALL SEAT CUSHION ASSEMBLY

- (a) Install the seat cushion assembly with the 4 bolts to the seat adjuster.

- (b) Install the wire harness to the seat cushion, as shown in the illustration.

Torque: 19 N·m (194 kgf-cm, 14 ft-lbf)

3. INSTALL FRONT SEAT INNER CUSHION COVER

4. INSTALL FRONT SEAT CUSHION SHIELD

5. INSTALL NO.1 FRONT SEAT CUSHION SHIELD

6. INSTALL POWER SEAT SWITCH KNOBS

7. INSTALL HEADREST


8. INSTALL FRONT SEAT

- (a) Mount the front seat to the vehicle.
 (b) Connect the connectors.
 (c) Slide the front seat to the rearmost position.
 (d) Tighten the bolts on the rear side temporarily, from the bolt on the outer side tighten them completely.

Torque: 37 N·m (375 kgf-cm, 27 ft-lbf)

- (e) Slide the front seat to the most front position.

- (f) Tighten the bolts on the rear side temporarily, from the bolt on the outer side tighten them completely.
Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)
- (g) Install the 4 seat track covers.

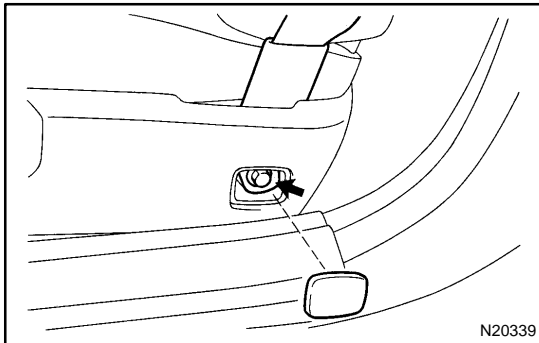

9. INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR

- (a) Install the front seat outer belt floor anchor.
Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)
- (b) Install the seat belt anchor cover cap.