


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

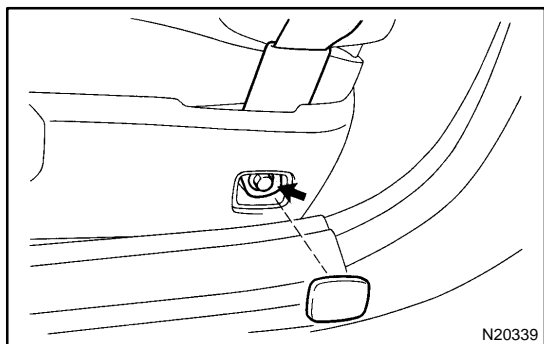

1. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR

- Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape the screwdriver tip before use.


- Remove the front seat outer belt floor anchor.

2. REMOVE FRONT SEAT

- Using a screwdriver, remove the 4 seat track covers.

HINT:

Tape the screwdriver tip before use.

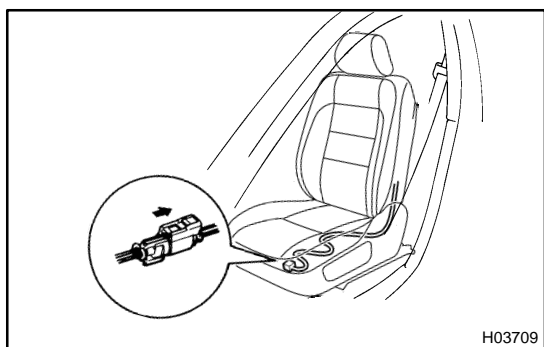

- Remove the 4 bolts, then disconnect the airbag connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- Remove the front seat.

3. REMOVE HEADREST

4. REMOVE POWER SEAT SWITCH KNOBS

5. REMOVE FRONT SEAT CUSHION SHIELD

6. REMOVE FRONT SEAT INNER CUSHION COVER

7. REMOVE SIDE AIRBAG ASSEMBLY WIRE HARNESS

- Remove the connector from the bracket.
- Remove the 5 clamps and wire harness from the seat cushion frame

8. REMOVE SEAT CUSHION ASSEMBLY


- Remove the wire harness from the seat cushion assembly.
- Remove the 4 bolts and seat cushion assembly from the seat adjuster.

9. REMOVE SEATBACK ASSEMBLY

- (a) Remove the 2 screws and pull the seatback board downward to remove it.
- (b) Remove the hog rings.
- (c) Disconnect the connectors.
- (d) Remove the 4 bolts and seatback assembly.

NOTICE:

Be careful not to damage the wire harness.

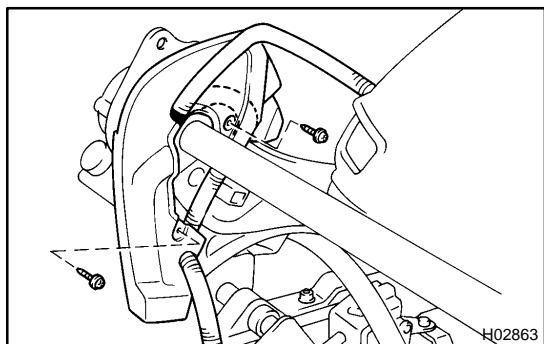

- (e) Remove the 2 screws and seat cushion inside cover then disconnect the wire harness from the seat cover.

HINT:

Do the same for LH and RH.