

## REMOVAL

REMOVE STEERING WHEEL AND SPIRAL CABLE (See page [SR-11](#))