

## INSTALLATION

Installation is in the reverse order of removal (See page [SA-10](#)).

AFTER INSTALLATION, CHECK ABS SPEED SENSOR SIGNAL (See page [DI-484](#)) AND FRONT WHEEL ALIGNMENT (See page [SA-4](#))