

INSTALLATION

Installation is in the reverse order or removal (See page [SA-18](#)).

HINT:

After installation, check the ABS speed sensor signal (See page [DI-484](#)) and front wheel alignment (See page [SA-4](#)).