



## DISASSEMBLY

### REMOVE SUSPENSION SUPPORT AND COIL SPRING

- (a) Using SST, compress the coil spring.  
SST 09727-30021

#### NOTICE:

**Do not use an impact wrench. It will damage the SST.**

- (b) Remove the suspension support nut.
- (c) Remove these parts from the shock absorber:
- Washer
  - 2 cushions
  - Collar
  - Suspension support
  - Upper insulator
  - Lower cup
  - Spring bumper
  - Coil spring