


## REMOVAL

1. **REMOVE REAR WHEEL**  
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. **REMOVE LUGGAGE COMPARTMENT TRIM FRONT COVER** (See page [BO-28](#))
3. **REMOVE REAR SUSPENSION ARM NO.2**  
(See page [SA-98](#))

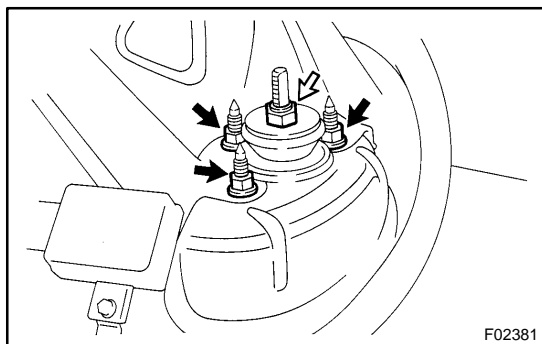

4. **REMOVE SHOCK ABSORBER WITH COIL SPRING**  
(a) Loosen the nut in the center of the suspension support.


**NOTICE:**

**Do not remove it.**

**Torque: 27 N·m (280 kgf·cm, 20 ft·lbf)**

- (b) Remove the 3 nuts.

**Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)**

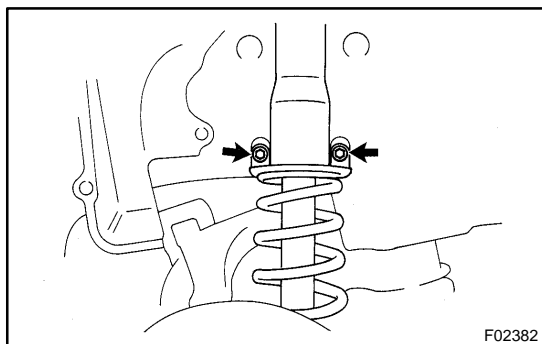

- (c) Remove the 2 bolts and shock absorber with the coil spring.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**