


## REMOVAL

### 1. REMOVE BOTH STABILIZER BAR LINKS

- (a) Remove the bolt and nut.  
**Torque: 30 N·m (305 kgf-cm, 22 ft-lbf)**
- (b) Remove the nut and stabilizer bar link.  
**Torque: 65 N·m (660 kgf-cm, 48 ft-lbf)**
- (c) Employ the same manner described above to the other side.

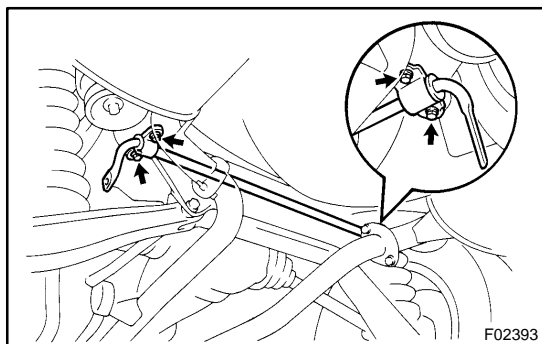

### 2. REMOVE STABILIZER BAR

- (a) Remove the 4 bolts and 2 stabilizer bar brackets from the suspension member.  
**Torque: 18 N·m (185 kgf-cm, 13 ft-lbf)**
- (b) Remove the stabilizer bar.
- (c) Remove the 2 bushings from the stabilizer bar.