

## INSTALLATION

Installation is in the reverse order of removal (See page [SA-94](#)).

**AFTER INSTALLATION, CHECK ABS SPEED SIGNAL (See page [DI-484](#)) AND REAR WHEEL ALIGNMENT (See page [SA-7](#))**