


REMOVAL


1. **REMOVE REAR WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. **REMOVE DRIVE SHAFT** (See page [SA-52](#))
3. **REMOVE SHOCK ABSORBER** (See page [SA-87](#))
4. **REMOVE UPPER SUSPENSION ARM**
 - (a) Remove the nut.
Torque: 108 N·m (1,100 kgf·cm, 80 ft·lbf)

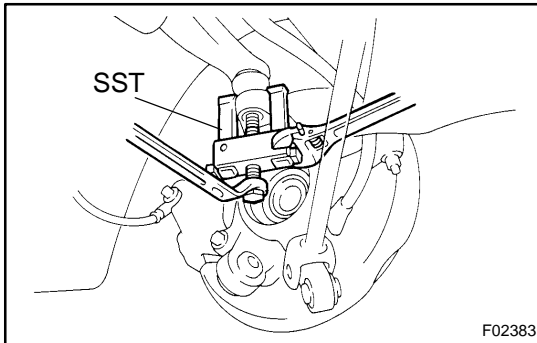

- (b) Using SST, disconnect the upper suspension arm from the axle carrier.
SST 09628-62011

NOTICE:

- Be careful not to damage the dust cover.
- Support the axle carrier.

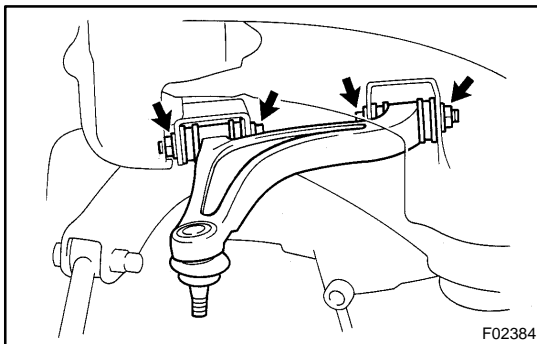

- (c) Remove the 2 bolts, nuts, washers and upper suspension arm.
Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the nuts.