


# FUEL TANK AND LINE COMPONENTS

SF0NH-06

## CAUTION:

- Always use new gaskets when replacing the fuel tank or component parts.
- Apply the proper torque to all parts tightened

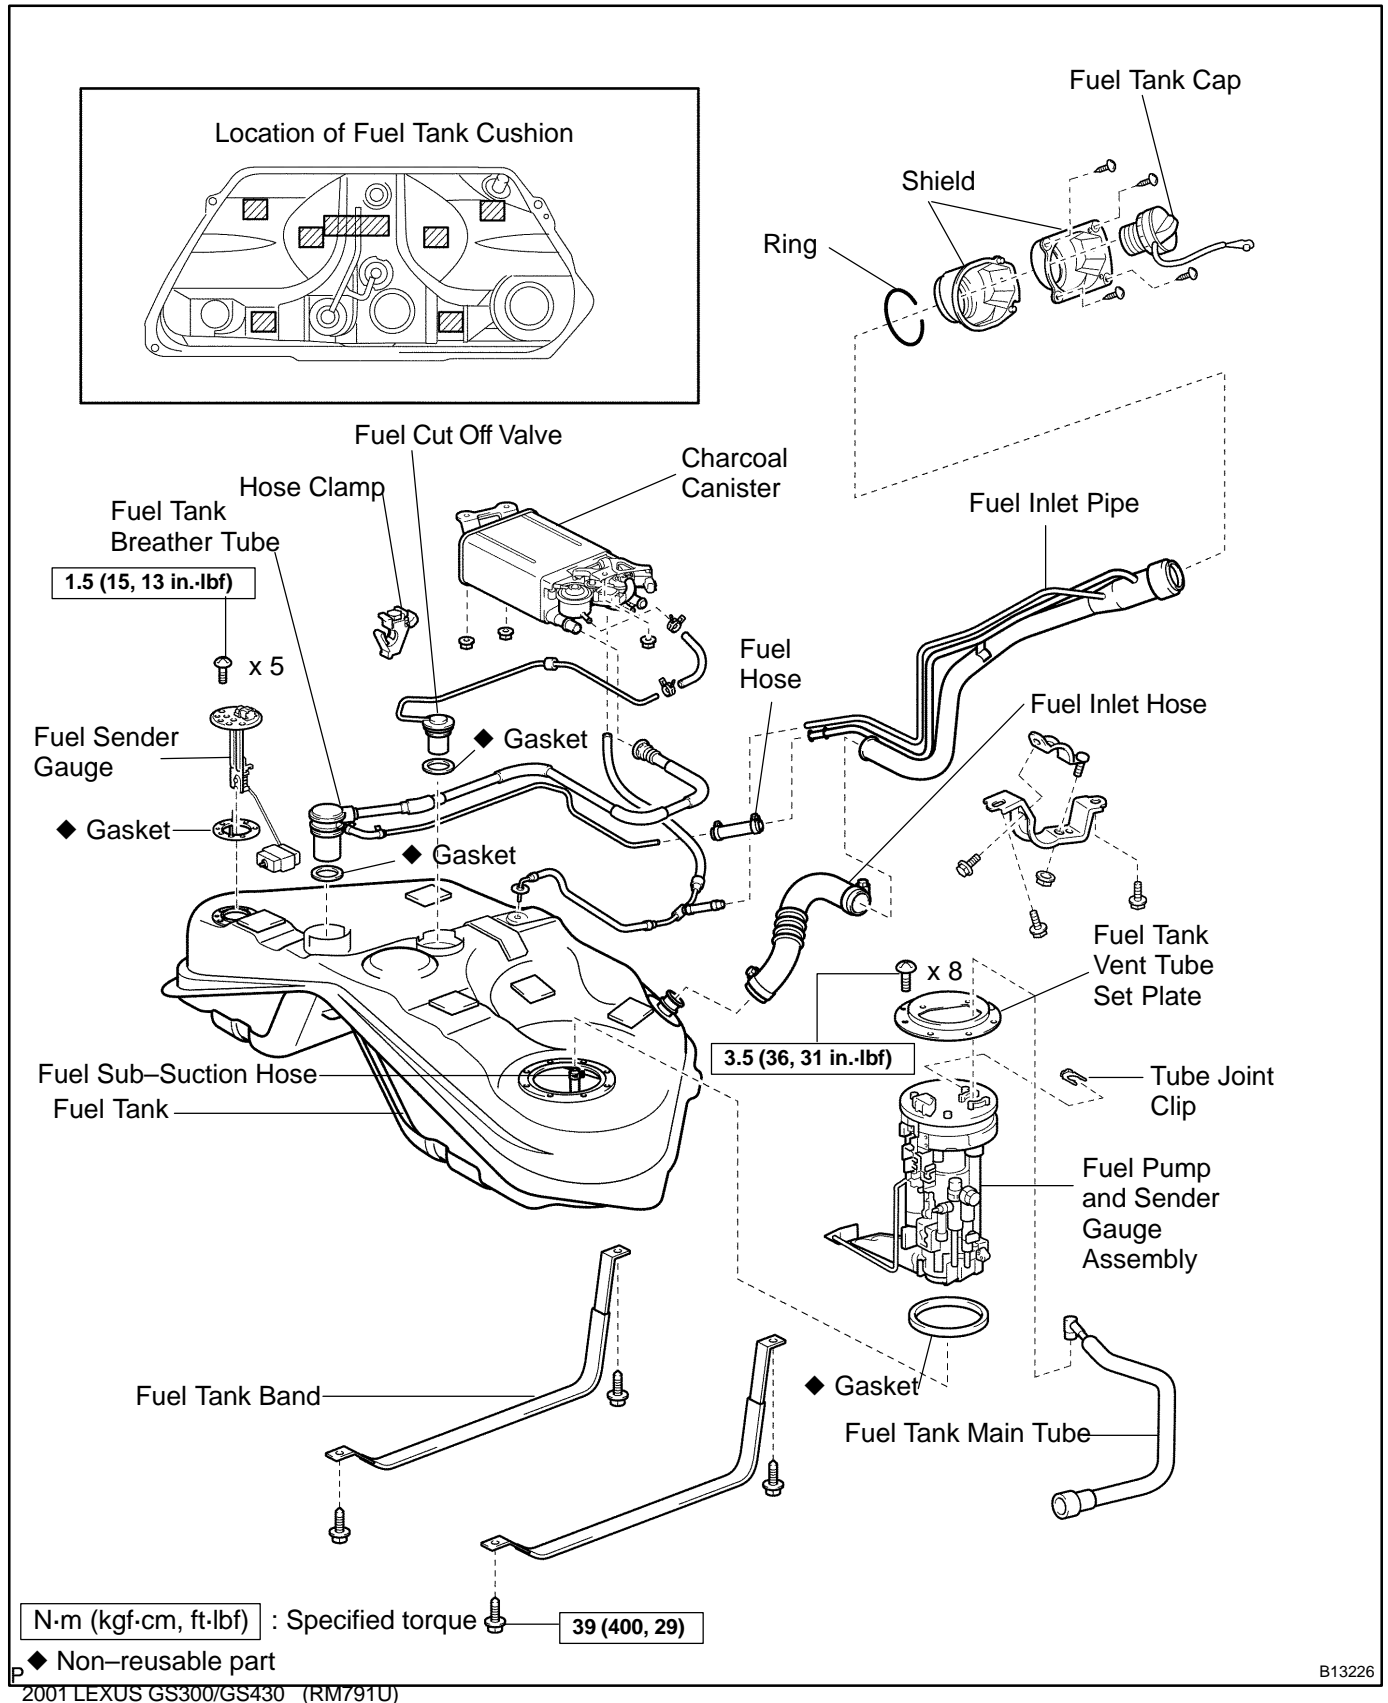

B13226