

INSPECTION

1. REMOVE ECM
2. INSPECT ECM (See page [DI-190](#))
3. REINSTALL