

INSPECTION

1. Bank 1, 2 Sensor 1:

INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSOR


- Disconnect the oxygen sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance: 11 – 16 Ω at 20°C (68°F)

If the resistance is not as specified, replace the sensor.

Torque: 44 N·m (450 kgf-cm, 32 ft-lbf)

- Reconnect the oxygen sensor connector.

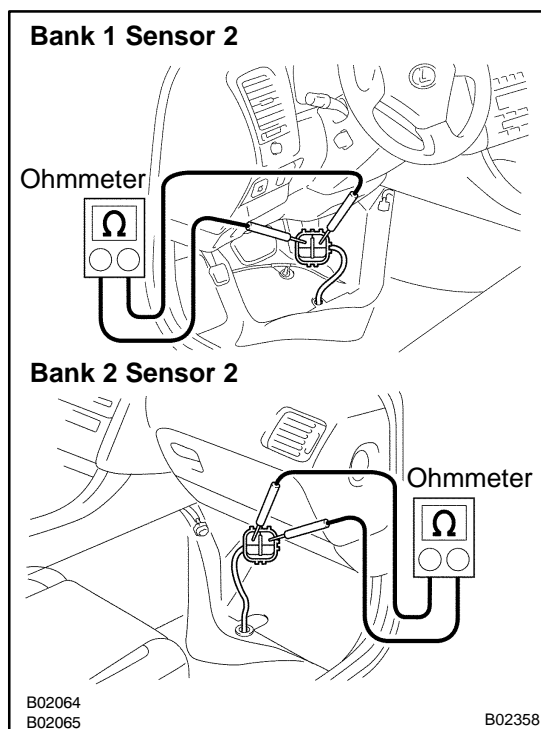

2. Bank 1, 2 Sensor 2:

INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSOR

- Take out the floor carpet.
- Disconnect the oxygen sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance: 11 – 16 Ω at 20°C (68°F)

If the resistance is not as specified, replace the sensor.

Torque: 44 N·m (450 kgf-cm, 32 ft-lbf)

- Reconnect the oxygen sensor connector.
- Install the floor carpet.

3. INSPECT OPERATION OF HEATED OXYGEN SENSOR (See page [DI-220](#))