


INSPECTION

1. INSPECT STEERING LOCK OPERATION

Check that the steering lock mechanism operates properly.

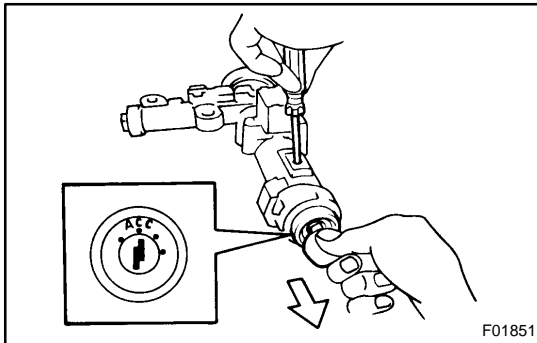

2. IF NECESSARY, REPLACE KEY CYLINDER

- Place the ignition key at the ACC position.
- Push down the stop pin with a screwdriver, and pull out the key cylinder.
- Install a new key cylinder.

HINT:

Make sure the ignition key is at the ACC position.

3. INSPECT IGNITION SWITCH (See page [BE-31](#))

4. IF NECESSARY, REPLACE IGNITION SWITCH

- Remove the 2 screws and ignition switch.
- Install a new ignition switch with the 2 screws.

5. INSPECT KEY UNLOCK WARNING SWITCH (See page [BE-31](#))

6. INSPECT KEY INTERLOCK SOLENOID (See page [AT-16](#))

7. IF NECESSARY, REPLACE KEY UNLOCK WARNING SWITCH WITH KEY INTERLOCK SOLENOID

- Remove the 2 screws and key unlock warning switch with key interlock solenoid.
- Install a new key unlock warning switch with key interlock solenoid with the 2 screws.

8. INSPECT TRANSPONDER KEY COIL (See page [BE-255](#))

9. IF NECESSARY, REPLACE TRANSPONDER KEY COIL

10. IF NECESSARY, REPLACE TRANSPONDER KEY AM- PLIFIER

- Remove the screw and transponder key amplifier.
- Install a new transponder key amplifier with the bolt.