
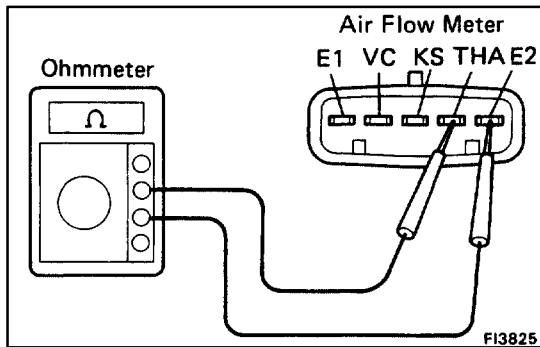


AIR INDUCTION SYSTEM

Air Flow Meter

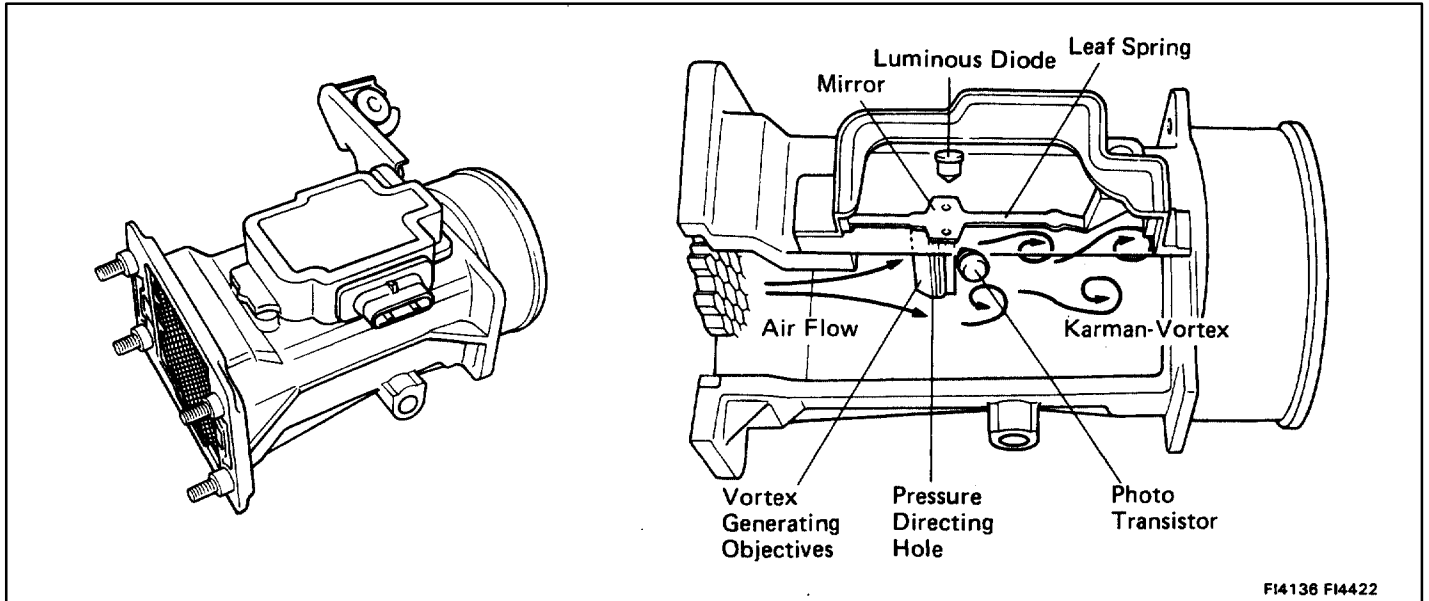

ON-VEHICLE INSPECTION

INSPECTION OF AIR FLOW METER RESISTANCE

- (a) Disconnect the connector from the air flow meter.
- (b) Using an ohmmeter, measure the resistance between terminals THA and E2.

Terminals	Resistance (kΩ)	Temp. (°C/°F)
THA-E2	10-20	-20 (-4)
	4-7	0 (32)
	2-3	20 (68)
	0.9-1.3	40 (104)
	0.4-0.7	60 (140)

If the resistance is not as specified, replace the air flow meter.

- (c) Connect the connector to the air flow meter.