



STARTING AND IGNITION

SERVICE HINTS

C 4 COLD START INJECTOR

2-1 : APPROX. 12 VOLTS WHILE START INJECTOR TIME SW IS CLOSED AND STARTER CRANKING

I16 IGNITION SW

11-6 : CLOSED WITH IGNITION SW AT **ON** POSITION

11-5 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

N 1 NEUTRAL START SW

3-2 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

S 4 (A), S 5 (B) STARTER

POINTS CLOSED WITH NEUTRAL START SW ON AND IGNITION SW AT **ST** POSITION

○ : PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| C 3 | 24 | I 2 | 25 | N 1 | 25 |
| C 4 | 24 | I 3 | 25 | N 2 | 25 |
| E 8 | C 26 | I 4 | 25 | S 3 | 25 |
| E 9 | A 26 | I 5 | 25 | S 4 | A 25 |
| E10 | B 26 | I15 | 26 | S 5 | B 25 |
| F13 | 24 | I16 | 26 | | |

○ : RELAY BLOCKS

| CODE | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION) |
|------|----------|-------------------------------------|
| 7 | 18 | R/B NO.7 (RIGHT SIDE OF J/B NO.1) |

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|--|
| ID | 18 | COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE) |
| IG | | |
| 2A | 20 | ENGINE ROOM MAIN WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT) |
| 2B | 20 | COWL WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT) |

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|---|
| EA1 | 32 | COWL WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FENDER) |
| EA2 | | |
| EA3 | | |
| ED2 | 32 | ENGINE WIRE AND ENGINE NO.4 WIRE (FRONT SIDE OF CYLINDER HEAD COVER LH) |
| EE1 | 32 | ENGINE WIRE AND ENGINE NO.4 WIRE, FOR COLD START INJECTOR (REAR SIDE OF AIR INTAKE CHAMBER) |
| EF1 | 32 | ENGINE NO.2 WIRE AND ENGINE WIRE (REAR SIDE OF AIR INTAKE CHAMBER) |
| IL1 | 36 | ENGINE WIRE AND COWL WIRE (UNDER THE GLOVE BOX) |
| IL2 | | |
| IP1 | 36 | COWL WIRE AND A/C NO.2 WIRE (BEHIND GLOVE BOX) |

▽ : GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|------------------------|
| IE | 34 | LEFT KICK PANEL |
| IH | 34 | RIGHT KICK PANEL |

○ : SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E 34 | 32 | ENGINE ROOM MAIN WIRE | I115 | 36 | COWL WIRE |
| E 41 | | | I118 | | |
| E 42 | | | I124 | | |
| E 48 | | | I125 | | |
| E 56 | | | I162 | | |
| E 69 | 32 | ENGINE NO.4 WIRE | I163 | 36 | ENGINE WIRE |
| I 21 | | | I167 | | |
| I 43 | | | I172 | | |
| I 81 | | | I176 | | |
| I113 | 36 | COWL WIRE | | | |

