

# FOREWORD

To assist you in your service activities, this manual explains the main characteristics of the new SC400, in particular providing a technical explanation of the construction and operation of new mechanisms and new technology used.

Applicable models: UZZ30 series

This manual is divided into 4 sections.

- 1. Introduction** — Development objectives of the new model and model line-up.
- 2. New Model Outline** — Explanation of the product to give a general understanding of its features.
- 3. Technical Description** — Technical explanation of the construction and operation of each new system and component.
- 4. Appendix** — Major technical specifications of the vehicle.

**CAUTION**, **NOTICE**, **REFERENCE** and **NOTE** are used in the following ways:

<b>CAUTION</b>	A potentially hazardous situation which could result in injury to people may occur if instructions on what to do or not do are ignored.
<b>NOTICE</b>	Damage to the vehicle or components may occur if instructions on what to do or not do are ignored.
<b>REFERENCE</b>	Explains the theory behind mechanisms and techniques.
<b>NOTE</b>	Notes or comments not included under the above 3 titles.

For detailed service specifications and repair procedures, refer to the following Repair Manuals:

Manual Name	Pub. No.
• LEXUS SC400 Repair Manual Volume 1 Volume 2	RM 221 U1 RM 221 U2
• A340E, A341E Automatic Transmission Repair Manual	RM 235 U
• LEXUS SC400 Electrical Wiring Diagram	EWD 120 U

All information contained herein is the most up-to-date at the time of publication. We reserve the right to make changes without prior notice.

**TOYOTA MOTOR CORPORATION**

© 1991 TOYOTA MOTOR CORPORATION

All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.