


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

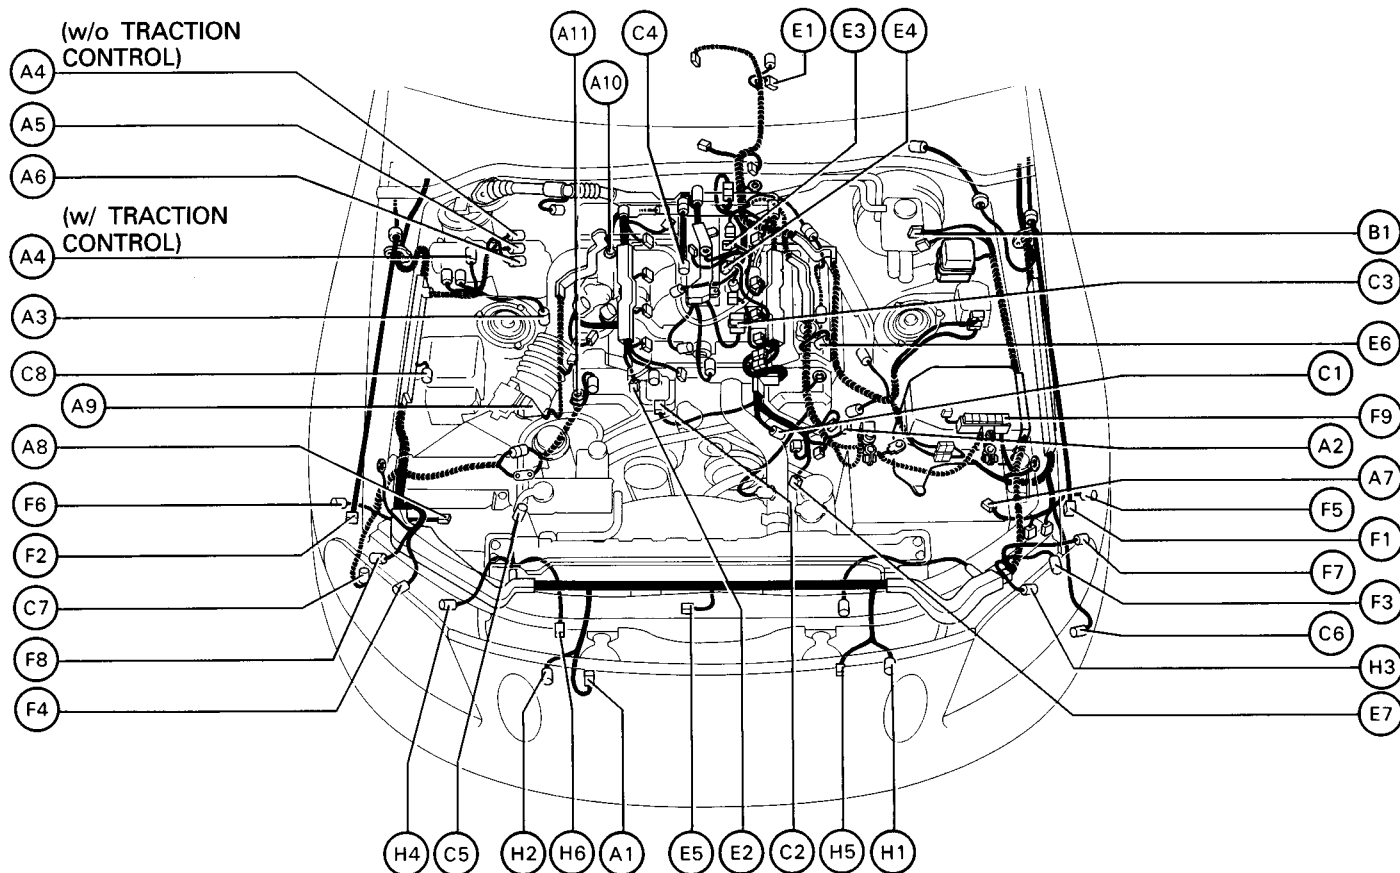

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Lock Sensor and A/C Magnetic Clutch
- A 3 A/C Pressure SW and A/C High Pressure SW
- A 4 ABS Actuator
- A 5 ABS Actuator
- A 6 ABS Actuator
- A 7 ABS Speed Sensor Front LH
- A 8 ABS Speed Sensor Front RH
- A 9 Air Flow Meter
- A 10 Alternator
- A 11 Alternator

- B 1 Brake Fluid Level SW

- C 1 Cam Position Sensor No. 1 (on Left Bank)
- C 2 Cam Position Sensor No. 2 (on Right Bank)
- C 3 Check Connector
- C 4 Cold Start Injector
- C 5 Coolant Level Warning SW
- C 6 Cornering Light LH
- C 7 Cornering Light RH
- C 8 Cruise Control Actuator


- E 1 ECT Solenoid
- E 2 EFI Water Temp. Sensor
- E 3 EGR Gas Temp. Sensor (for California)
- E 4 EGR Valve (for California)

- E 5 Engine Hood Courtesy SW
- E 6 Engine Oil Level Warning SW
- E 7 Engine Speed Sensor

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Clearance Light LH
- F 4 Front Clearance Light RH
- F 5 Front Side Marker Light LH
- F 6 Front Side Marker Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Fuse Block

- H 1 Headlight Hi LH
- H 2 Headlight Hi RH
- H 3 Headlight Lo LH
- H 4 Headlight Lo RH
- H 5 Horn LH
- H 6 Horn RH

Position of Parts in Engine Compartment

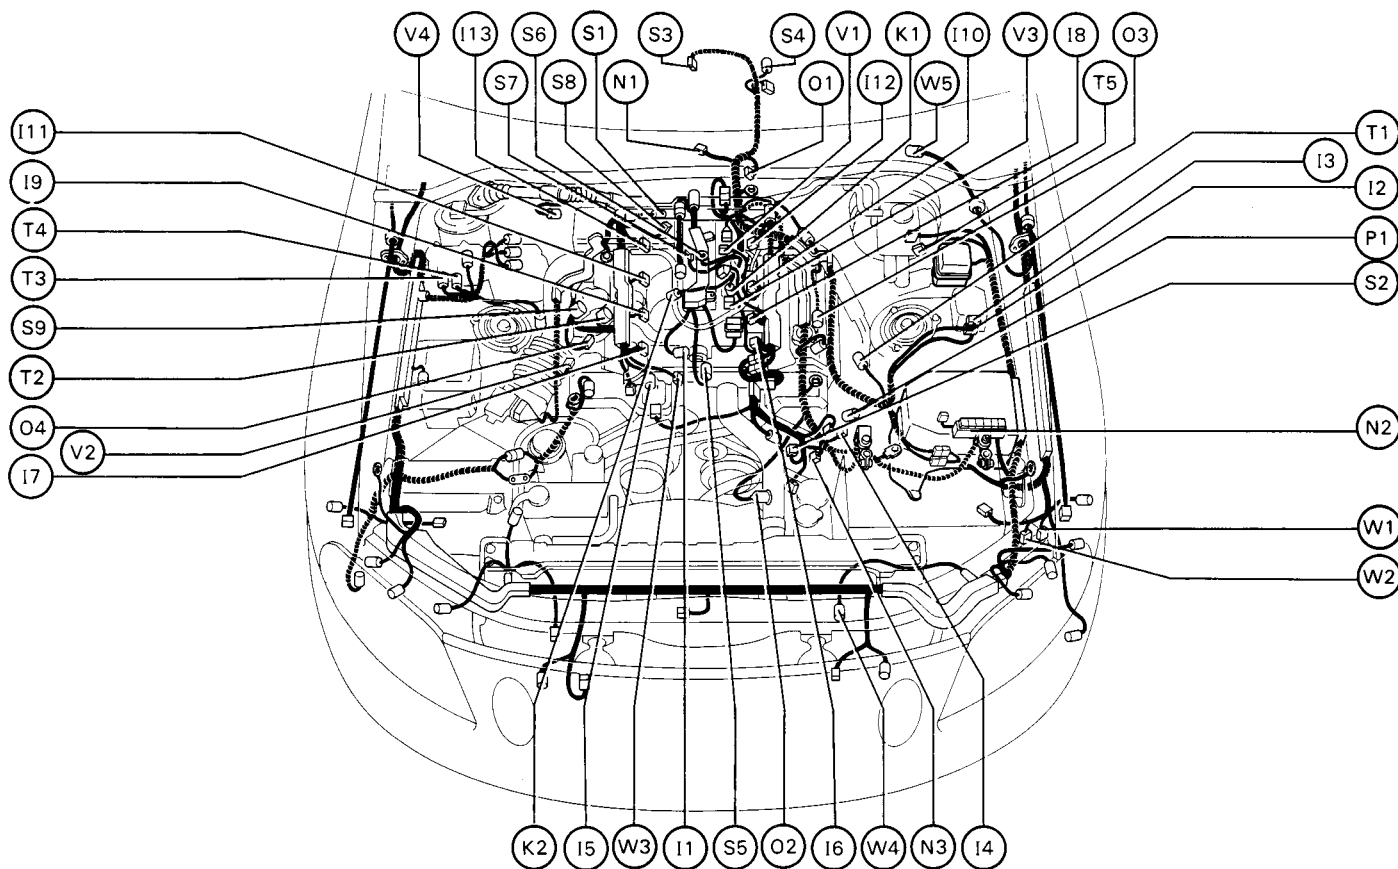

- I 1 ISC Valve
- I 2 Igniter No. 1
- I 3 Igniter No. 2
- I 4 Ignition Coil No. 1
- I 5 Ignition Coil No. 2
- I 6 Injector No. 1
- I 7 Injector No. 2
- I 8 Injector No. 3
- I 9 Injector No. 4
- I 10 Injector No. 5
- I 11 Injector No. 6
- I 12 Injector No. 7
- I 13 Injector No. 8

- K 1 Knock Sensor No. 1 (on Left Bank)
- K 2 Knock Sensor No. 2 (on Right Bank)

- N 1 Neutral Start SW, Back-Up Light SW and A/T Indicator SW
- N 2 Noise Filter (for Defogger System)
- N 3 Noise Filter (for Ignition System)

- O 1 O/D Direct Clutch Speed Sensor
- O 2 Oil Pressure SW
- O 3 Oxygen Sensor Main (on Left Bank)
- O 4 Oxygen Sensor Main (on Right Bank)

- P 1 PPS Solenoid

- S 1 Short Connector
- S 2 Solenoid Valve (for Cooling Fan)
- S 3 Speed Sensor No. 1
- S 4 Speed Sensor No. 2 (for ECT)
- S 5 Start Injector Time SW
- S 6 Starter
- S 7 Starter
- S 8 Sub Throttle Actuator
- S 9 Sub Throttle Position Sensor


- T 1 Theft Deterrent Horn
- T 2 Throttle Position Sensor
- T 3 Traction Brake Actuator
- T 4 Traction Brake Actuator
- T 5 Traction Pump and Motor

- V 1 VSV (for EGR) (Ex. California)
- V 2 VSV (for EVAP)
- V 3 VSV (for Fuel Pressure Up)
- V 4 VSV (for Water Valve)

- W 1 Washer Level SW
- W 2 Washer Motor
- W 3 Water Temp. Sender
- W 4 Water Temp. Sensor (for Cooling Fan)
- W 5 Wiper Motor

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

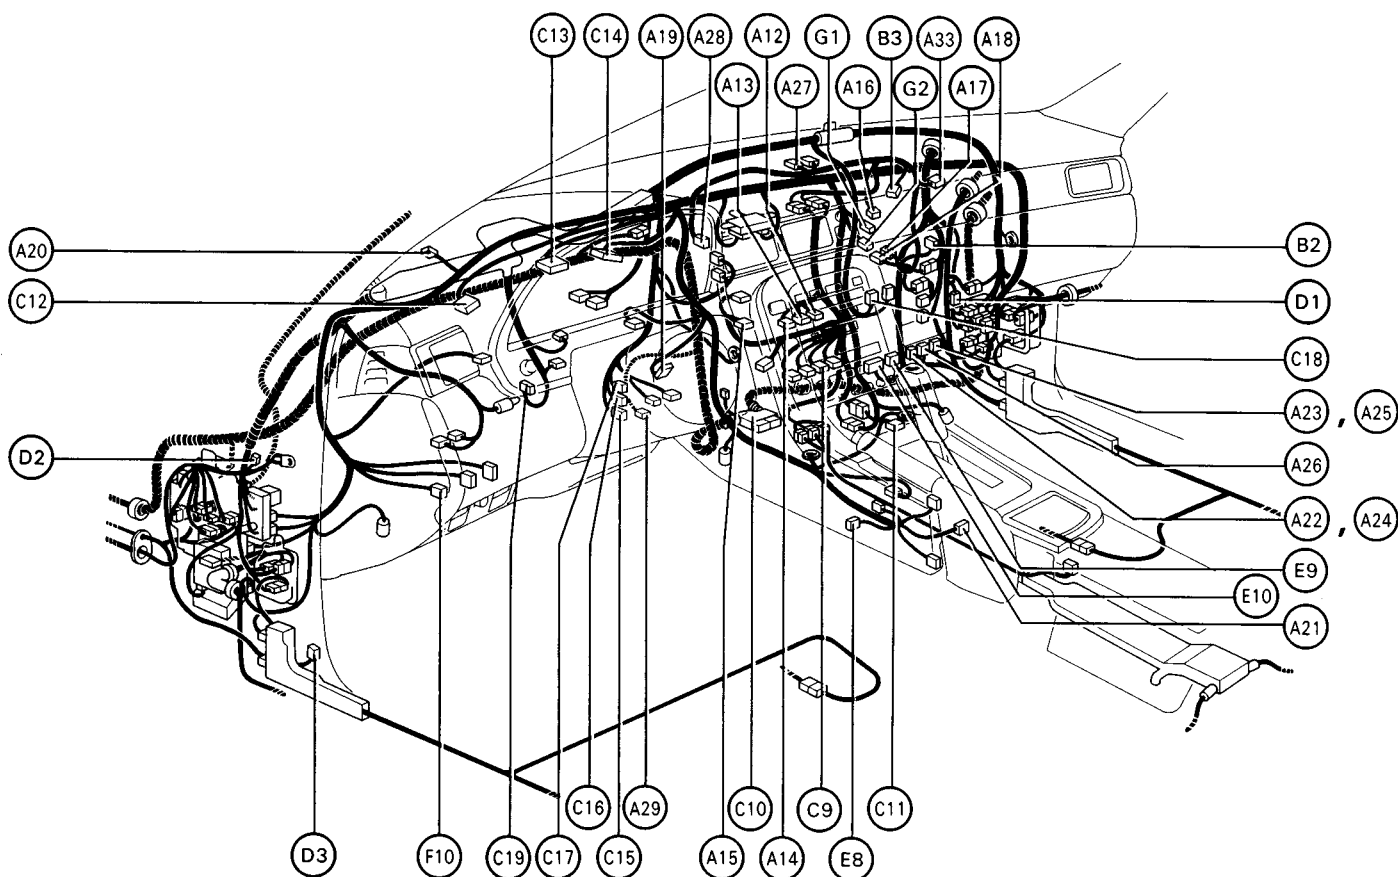

- A 12 A/C Control Assembly
- A 13 A/C Control Assembly
- A 14 A/C Control Assembly
- A 15 A/C Control SW and Radio SW
- A 16 A/C Evaporator Temp. Sensor
- A 17 A/C Power Transistor
- A 18 A/C Power Transistor
- A 19 A/C Room Temp. Sensor
- A 20 A/C Solar Sensor
- A 21 A/T Indicator Light (for Shift Lever)
- A 22 ABS ECU (w/o Traction Control)
- A 23 ABS ECU (w/o Traction Control)
- A 24 ABS and Traction ECU
- A 25 ABS and Traction ECU
- A 26 ABS and Traction ECU
- A 27 Air Mix Control Servo Motor
- A 28 Air Vent Mode Control Servo Motor
- A 29 Airbag Squib
- A 33 Air Inlet Control Servo Motor

- B 2 Blower Motor
- B 3 Blower Resistor (for Low Speed)

- C 9 CD Player
- C 10 Center Airbag Sensor Assembly
- C 11 Cigarette Lighter
- C 12 Combination Meter
- C 13 Combination Meter
- C 14 Combination Meter
- C 15 Combination SW
- C 16 Combination SW
- C 17 Combination SW
- C 18 Cooling Fan ECU
- C 19 Cruise Control ECU


- D 1 Diode (for Brake Fluid Level)
- D 2 Diode (for Parking Brake)
- D 3 Diode (for Tension Reducer)

- E 8 ECT Pattern Select SW
- E 9 Engine and ECT ECU
- E 10 Engine and ECT ECU

- F 10 Fuel Lid Opener SW

- G 1 Glove Box Light
- G 2 Glove Box Light SW


Position of Parts in Instrument Panel

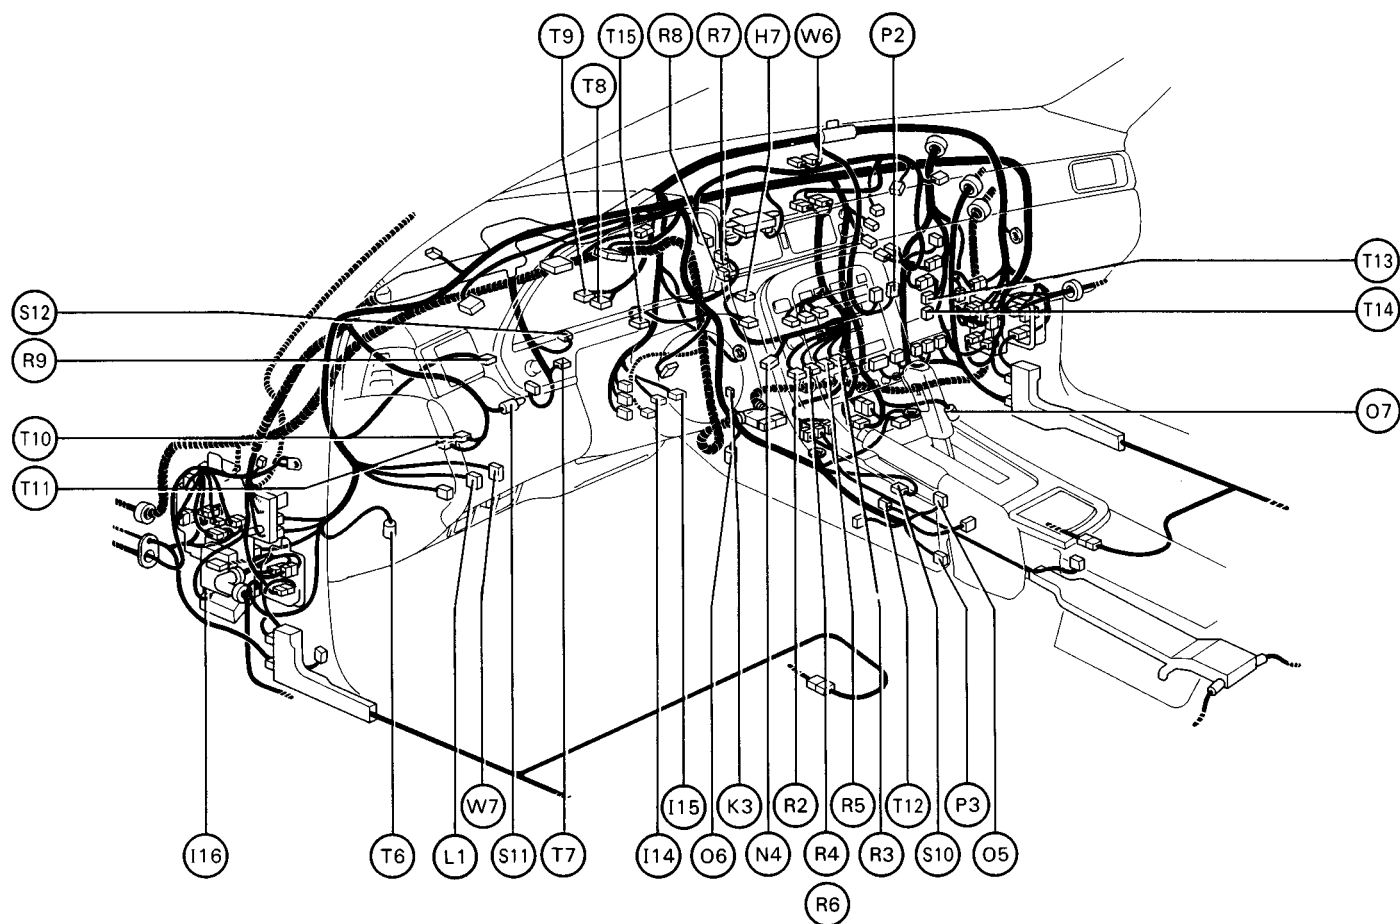

H 7	Hazard SW	R 6	Radio and Player (w/o CD Player)
I 14	Ignition Key Cylinder Light	R 7	Remote Control Mirror ECU
I 15	Ignition SW, Unlock Warning SW and Key Interlock Solenoid	R 8	Remote Control Mirror ECU
I 16	Integration Relay	R 9	Rheostat
K 3	Kick Down SW	S 10	Shift Lock ECU
L 1	Luggage Compartment Door Open SW	S 11	Step Light
N 4	Noise Filter (for A/C System)	S 12	Stop Light SW
O 5	O/D Main SW	T 6	TDCL (Total Diagnostic Communication Link)
O 6	Oxygen Sensor Sub (on Left Bank)	T 7	Telescopic Position Sensor
O 7	Oxygen Sensor Sub (on Right Bank)	T 8	Theft Deterrent and Door Lock ECU
P 2	PPS ECU	T 9	Theft Deterrent and Door Lock ECU
P 3	Parking Brake SW	T 10	Tilt and Power Telescopic ECU
R 2	Radio and Player	T 11	Tilt and Power Telescopic ECU
R 3	Radio and Player	T 12	Traction Cut SW and Seat Heater SW
R 4	Radio and Player (w/ CD Player)	T 13	Traction ECU
R 5	Radio and Player (w/o CD Player)	T 14	Traction ECU
		T 15	Trip SW and Theft Deterrent Indicator Light
		W 6	Water Temp. Sensor (for A/C System)
		W 7	Wireless Door Lock Main SW

ELECTRICAL WIRING ROUTING

Position of Parts in Body

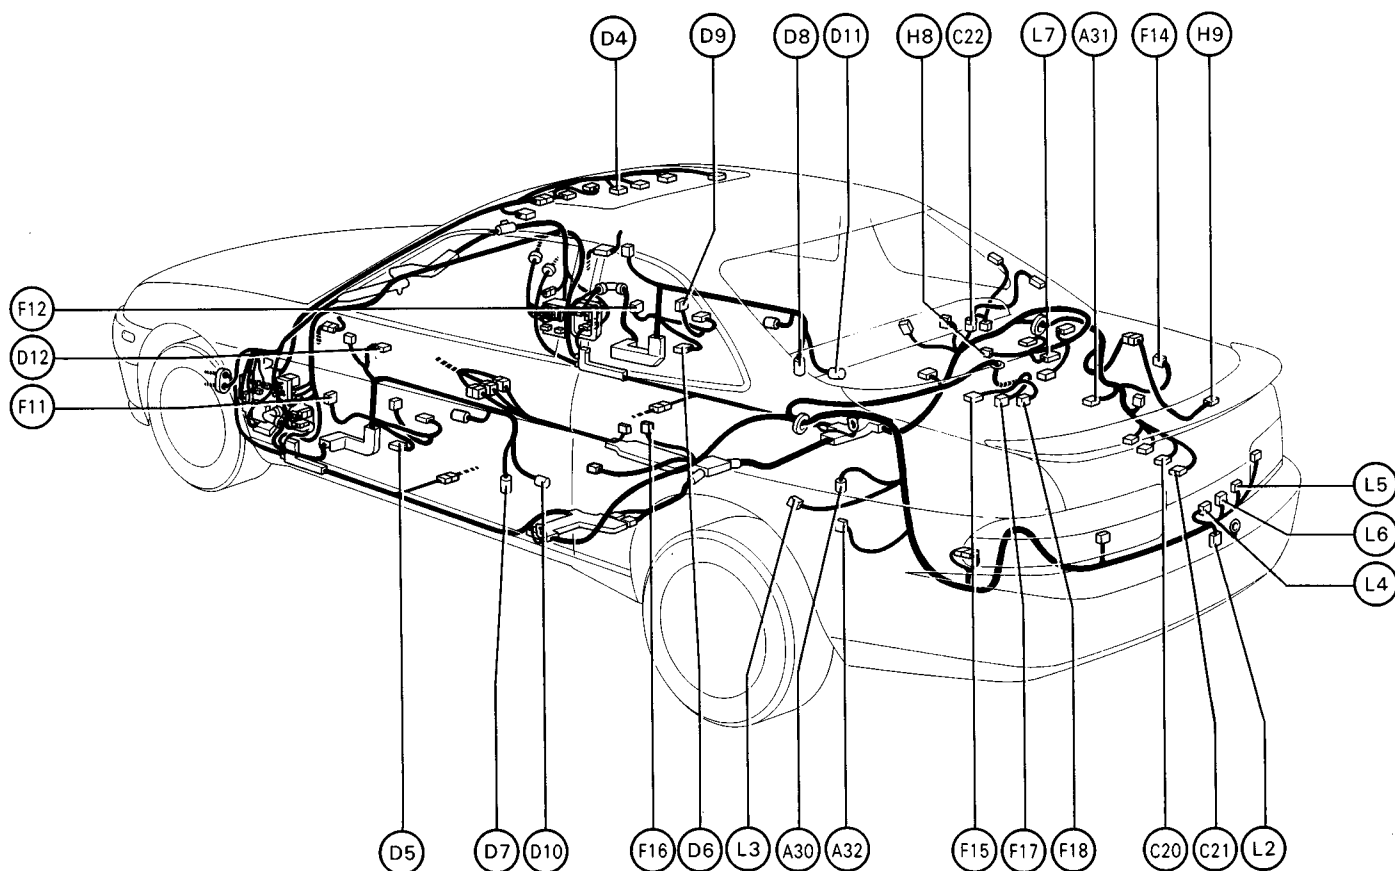

A 30 ABS Speed Sensor Rear LH
 A 31 ABS Speed Sensor Rear RH
 A 32 Auto Antenna Motor and Relay

C 20 CD Automatic Changer
 C 21 CD Automatic Changer
 C 22 Choke Coil

D 4 DAY/NIGHT Shift SW
 D 5 Door Courtesy Light LH
 D 6 Door Courtesy Light RH
 D 7 Door Key Lock and Unlock SW LH
 D 8 Door Key Lock and Unlock SW RH
 D 9 Door Lock Control SW RH

D 10 Door Lock Motor, Door Unlock Detection SW and Door Open Detection SW LH
 D 11 Door Lock Motor, Door Unlock Detection SW and Door Open Detection SW RH
 D 12 Driving Position Memory and Return SW


F 11 Front Door Speaker LH
 F 12 Front Door Speaker RH
 F 14 Fuel Lid Opener Solenoid
 F 15 Fuel Pump
 F 16 Fuel Pump ECU
 F 17 Fuel Sender
 F 18 Fuel Sender

H 8 High Mount Stop Light (w/o Rear Spoiler)
 H 9 High Mount Stop Light (w/ Rear Spoiler)

L 2 Licence Plate Light
 L 3 Light Failure Sensor
 L 4 Luggage Compartment Door Opener Motor
 L 5 Luggage Compartment Key Unlock SW
 L 6 Luggage Compartment Light SW
 L 7 Luggage Compartment Light

Position of Parts in Body

*1: with CD Player of PIONEER
 *2: with CD Player of NAKAMICHI

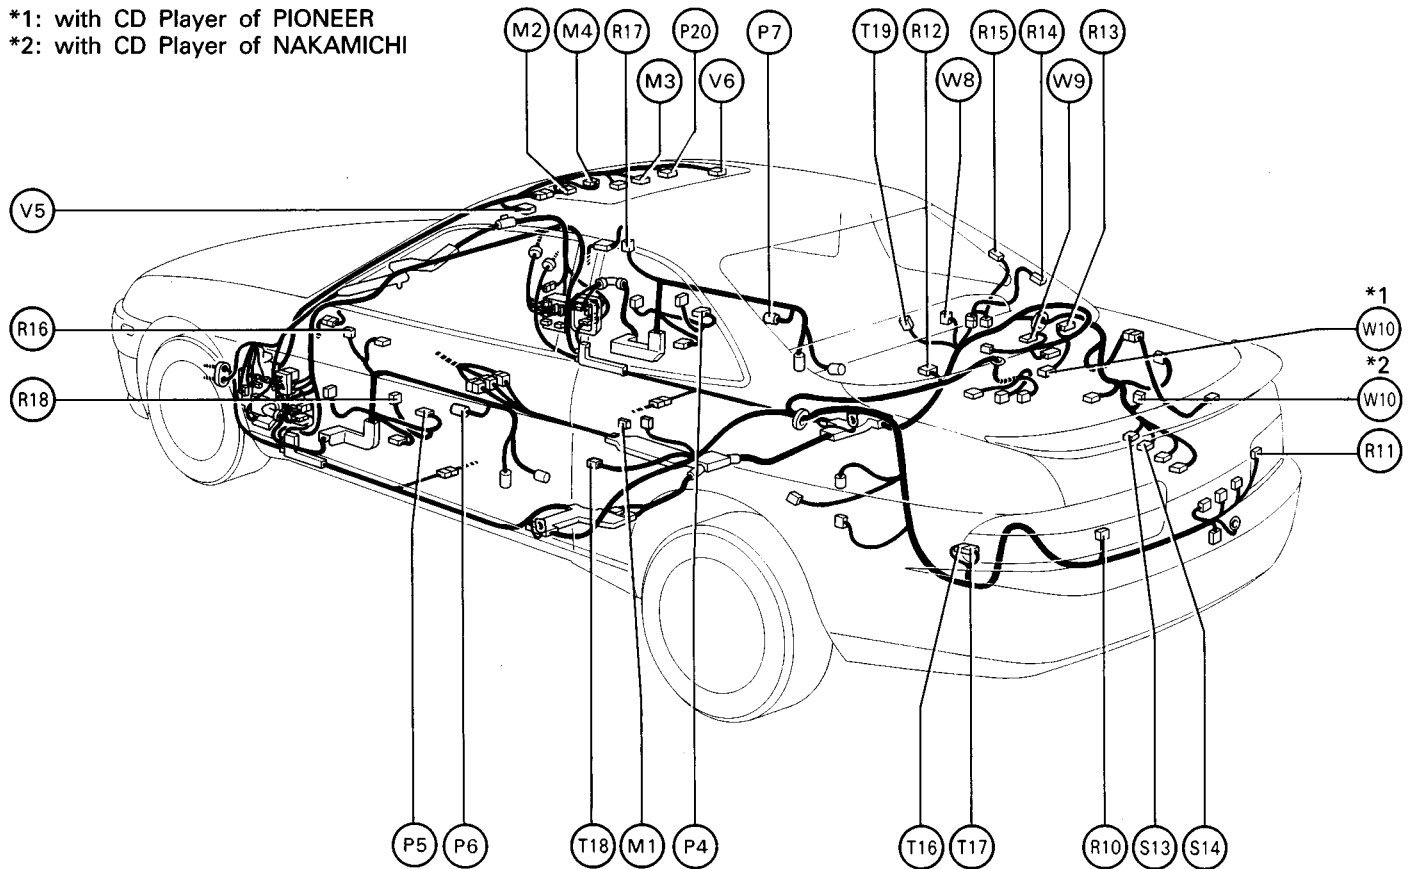

M 1 Mobilephone
 M 2 Moon Roof Control Relay
 M 3 Moon Roof Control SW
 M 4 Moon Roof Motor and Limit SW

P 4 Power Window Control SW RH
 P 5 Power Window Master SW and Door Lock Control SW LH
 P 6 Power Window Motor LH
 P 7 Power Window Motor RH
 P 20 Personal Light

R 10 Rear Combination Light LH
 R 11 Rear Combination Light RH
 R 12 Rear Speaker LH
 R 13 Rear Speaker RH
 R 14 Rear Window Defogger (+)
 R 15 Rear Window Defogger (-)

R 16 Remote Control Mirror LH
 R 17 Remote Control Mirror RH
 R 18 Remote Control Mirror SW


S 13 Stereo Power Amplifier
 S 14 Stereo Power Amplifier
 T 16 Telephone Transceiver and Speaker Relay
 T 17 Telephone Transceiver and Speaker Relay
 T 18 Tension Reducer Solenoid LH
 T 19 Tension Reducer Solenoid RH

V 5 Vanity Light LH
 V 6 Vanity Light RH

W 8 Wireless Door Lock ECU
 W 9 Woofer Speaker
 W 10 Woofer Speaker Amplifier

ELECTRICAL WIRING ROUTING

Position of Parts in Seat

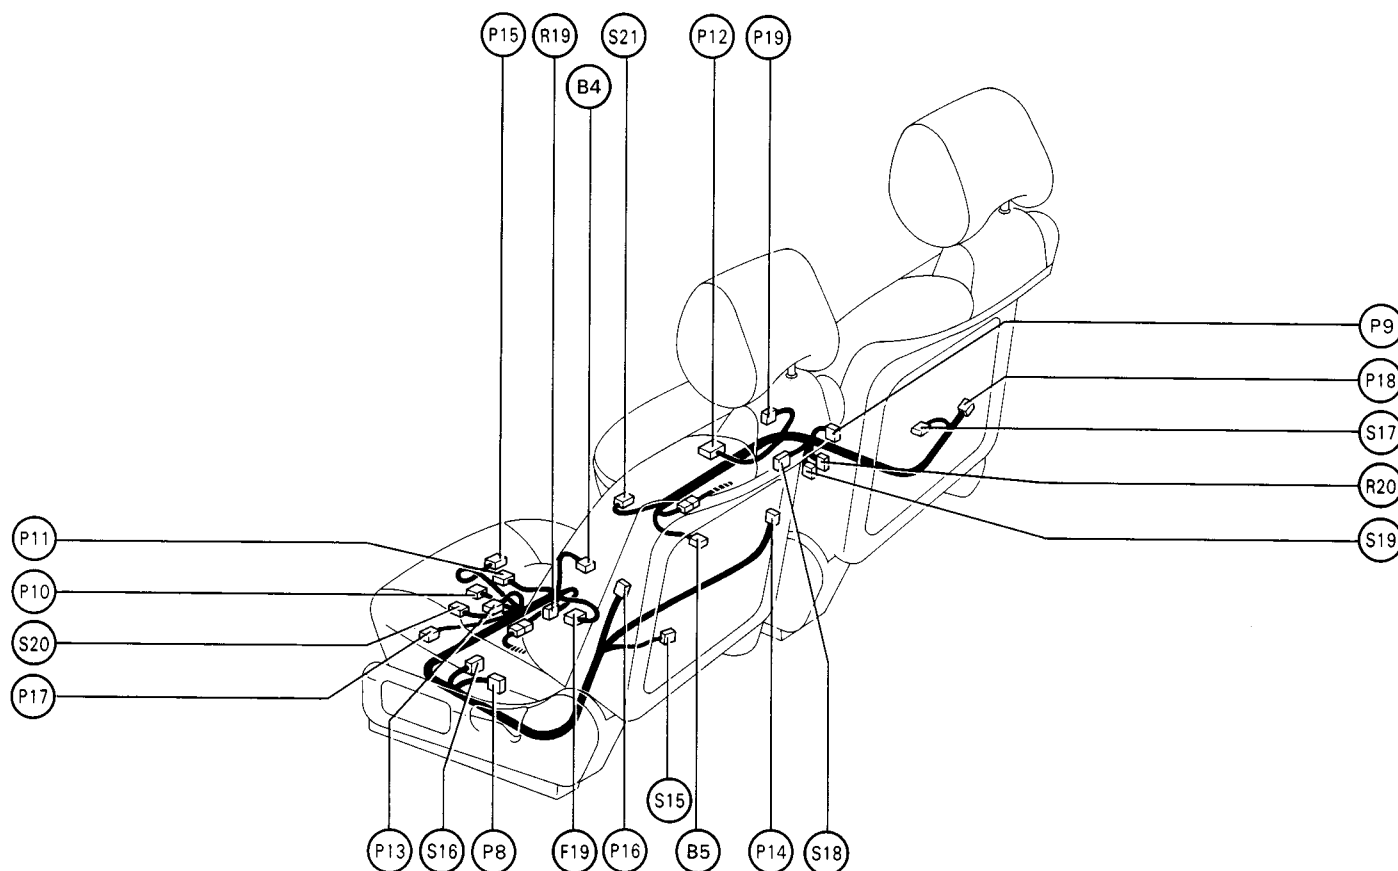

- B 4 Buckle SW LH
- B 5 Buckle SW RH
- F 19 Front Vertical Position Sensor
- P 8 Power Seat Control SW (for Driver's Seat)
- P 9 Power Seat Control SW (for Passenger's Seat)
- P 10 Power Seat ECU (for Driver's Seat)
- P 11 Power Seat ECU (for Driver's Seat)
- P 12 Power Seat ECU (for Passenger's Seat)
- P 13 Power Seat Motor (for Driver's Seat Front Vertical Control)
- P 14 Power Seat Motor (for Driver's Seat Lumber Support Control)

- P 15 Power Seat Motor (for Driver's Seat Rear Vertical Control)
- P 16 Power Seat Motor (for Driver's Seat Reclining Motor Control)
- P 17 Power Seat Motor (for Driver's Seat Slide Control)
- P 18 Power Seat Motor (for Passenger's Seat Reclining Control)
- P 19 Power Seat Motor (for Passenger's Seat Slide Control)
- R 19 Rear Vertical Position Sensor
- R 20 Reclining Limit SW
- S 15 Seat Heater (for Driver's Seat Back)
- S 16 Seat Heater (for Driver's Seat Cushion)
- S 17 Seat Heater (for Passenger's Seat Back)
- S 18 Seat Heater (for Passenger's Seat Cushion)
- S 19 Slide Limit SW
- S 20 Slide Position Sensor (for Driver's Seat)
- S 21 Slide Position Sensor (for Passenger's Seat)

