



# ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

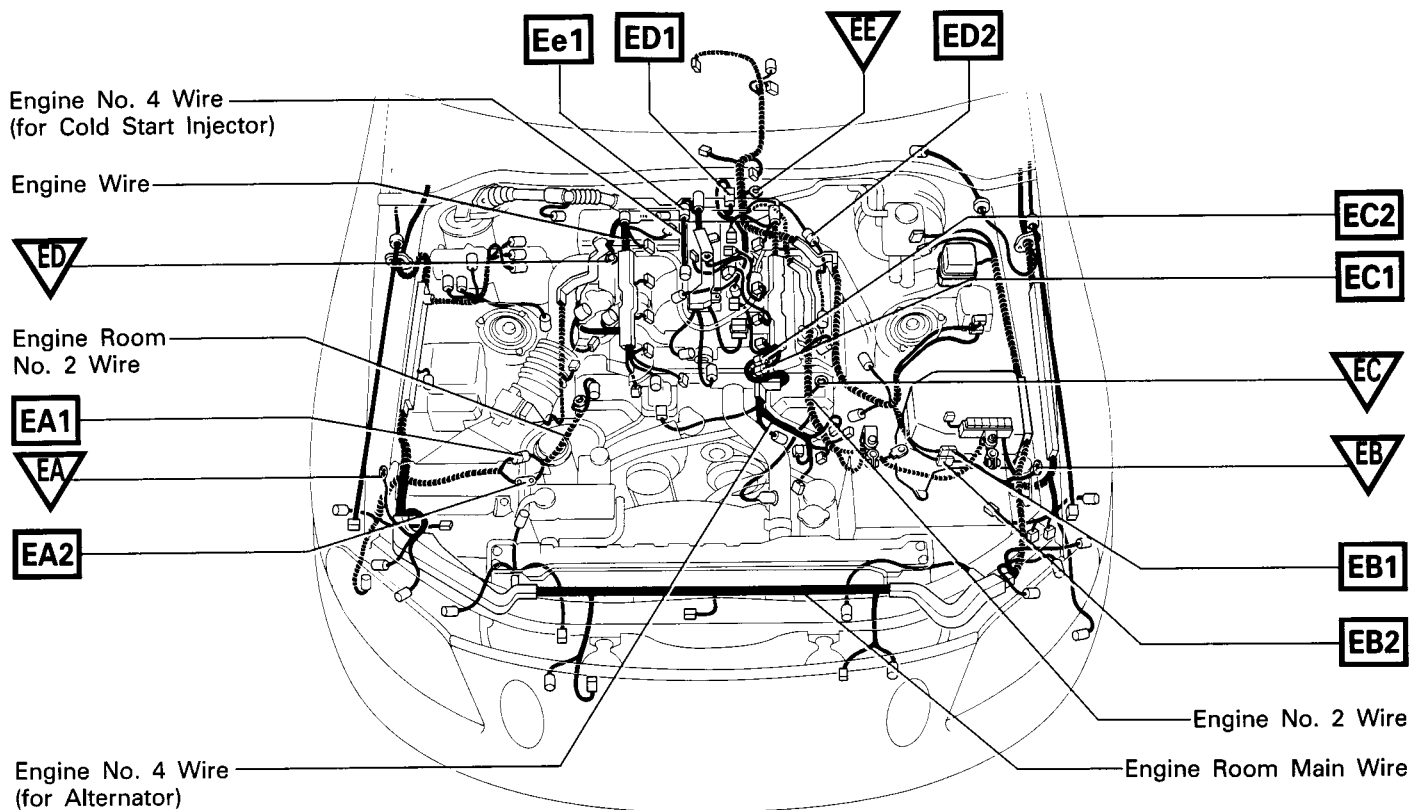

○ : Location of Splice Points

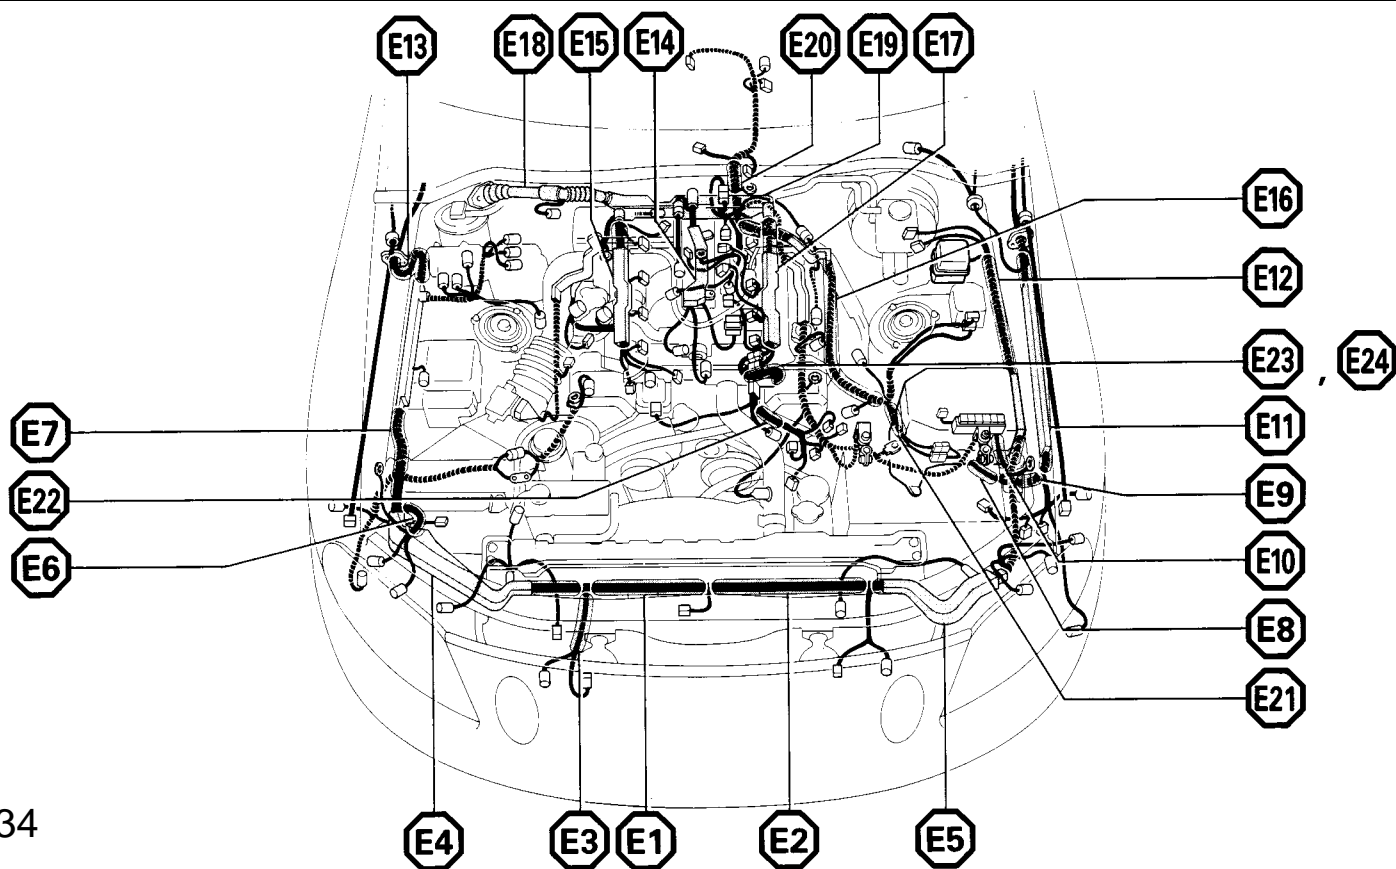


## Connector Joining Wire Harness and Wire Harness

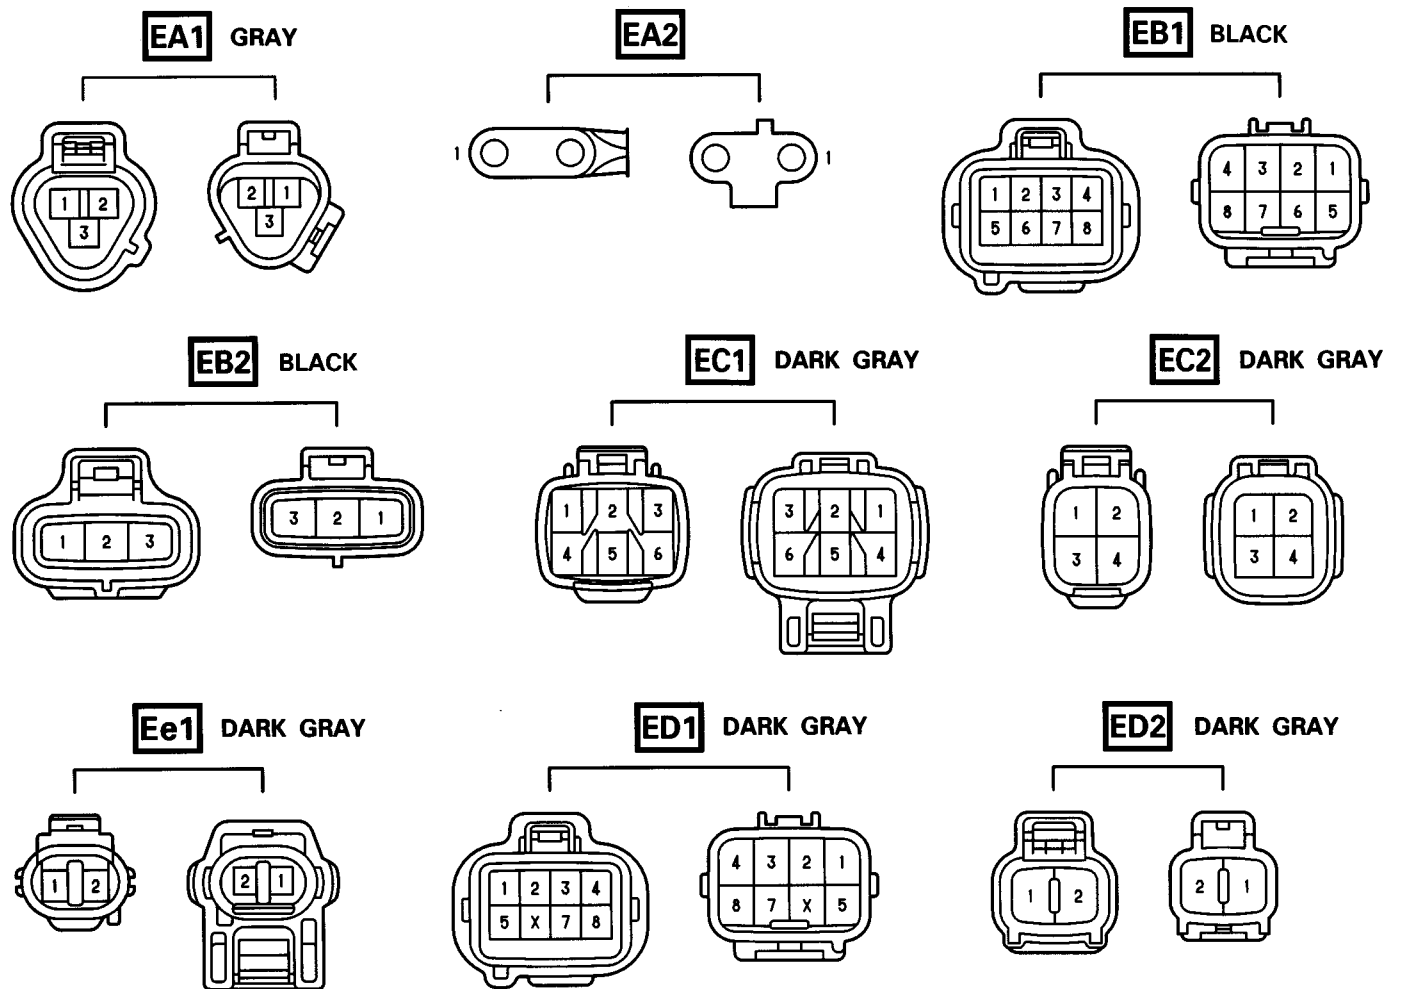


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	ENGINE ROOM NO.2 WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FENDER APRON)
EA2	ENGINE ROOM NO.2 WIRE AND ENGINE ROOM MAIN WIRE (UNDER THE AIR FLOW METER)
EB1	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO.2)
EB2	
EC1	ENGINE WIRE AND ENGINE NO.4 WIRE (FRONT SIDE OF CYLINDER HEAD COVER LH)
EC2	
ED1	ENGINE NO.2 WIRE AND ENGINE WIRE (REAR SIDE OF AIR INTAKE CHAMBER)
ED2	
Ea1	ENGINE WIRE AND ENGINE NO. 4 WIRE (REAR SIDE OF AIR INTAKE CHAMBER)

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

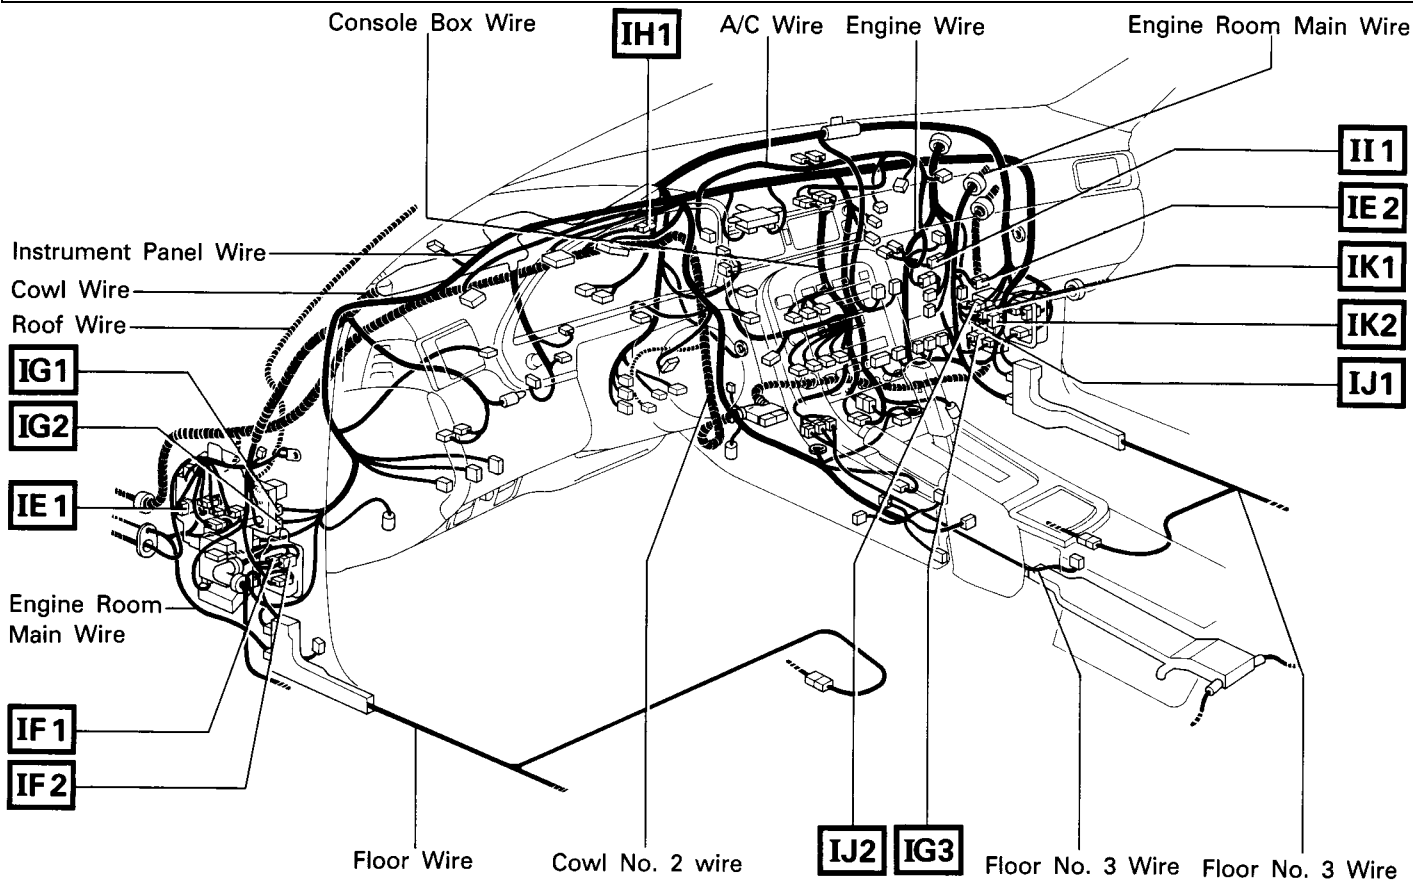

▽ : Location of Ground Points

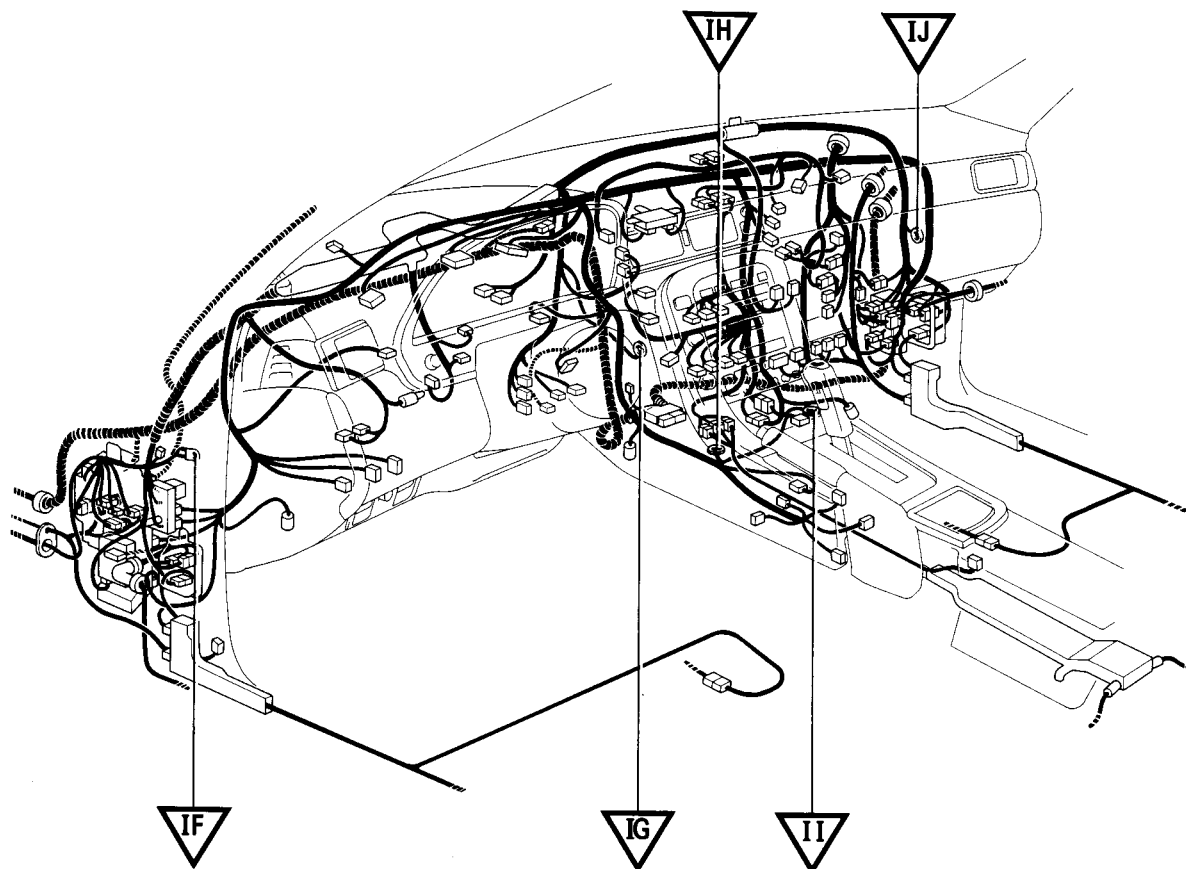


## Connector Joining Wire Harness and Wire Harness

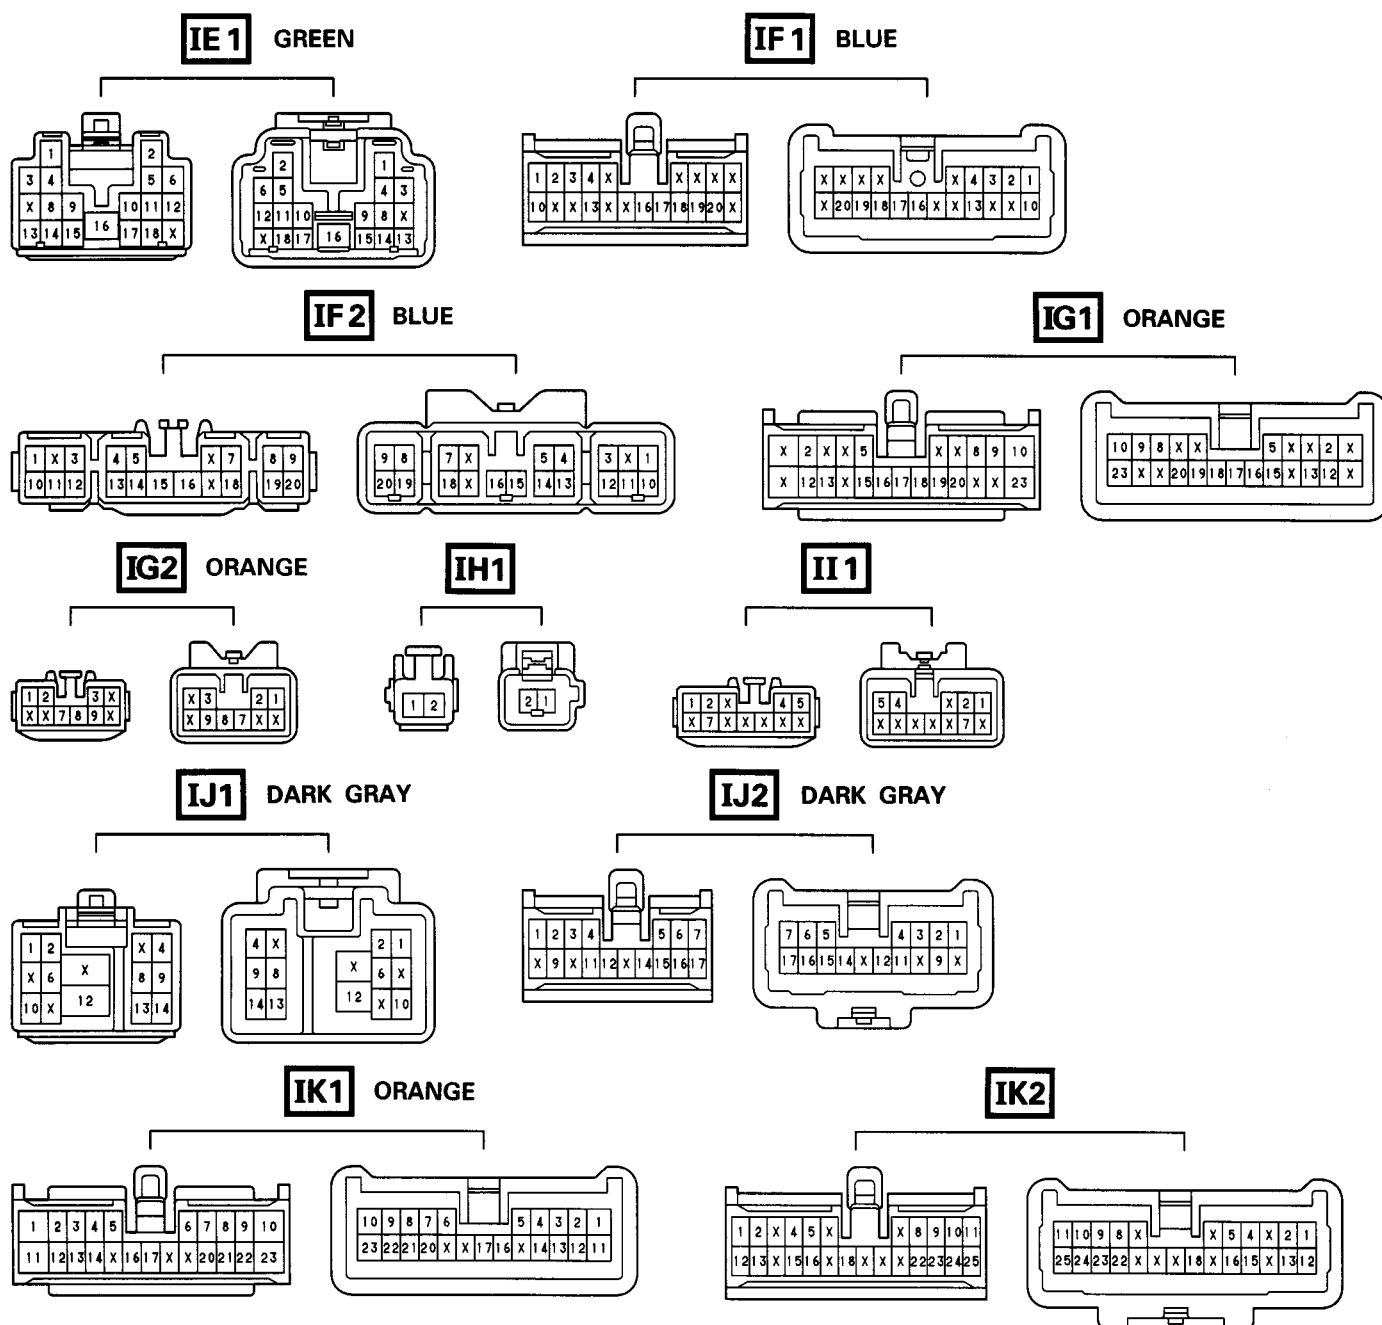


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	ENGINE WIRE AND COWL WIRE (R/B NO.4)
IF1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	
IG1	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO.5)
IG2	
IH1	COWL NO. 2 WIRE AND COWL WIRE (BEHIND COMBINATION METER)
II1	ENGINE WIRE AND A/C WIRE (BEHIND GLOVE BOX)
IJ1	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IJ2	
IK1	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IK2	

# ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

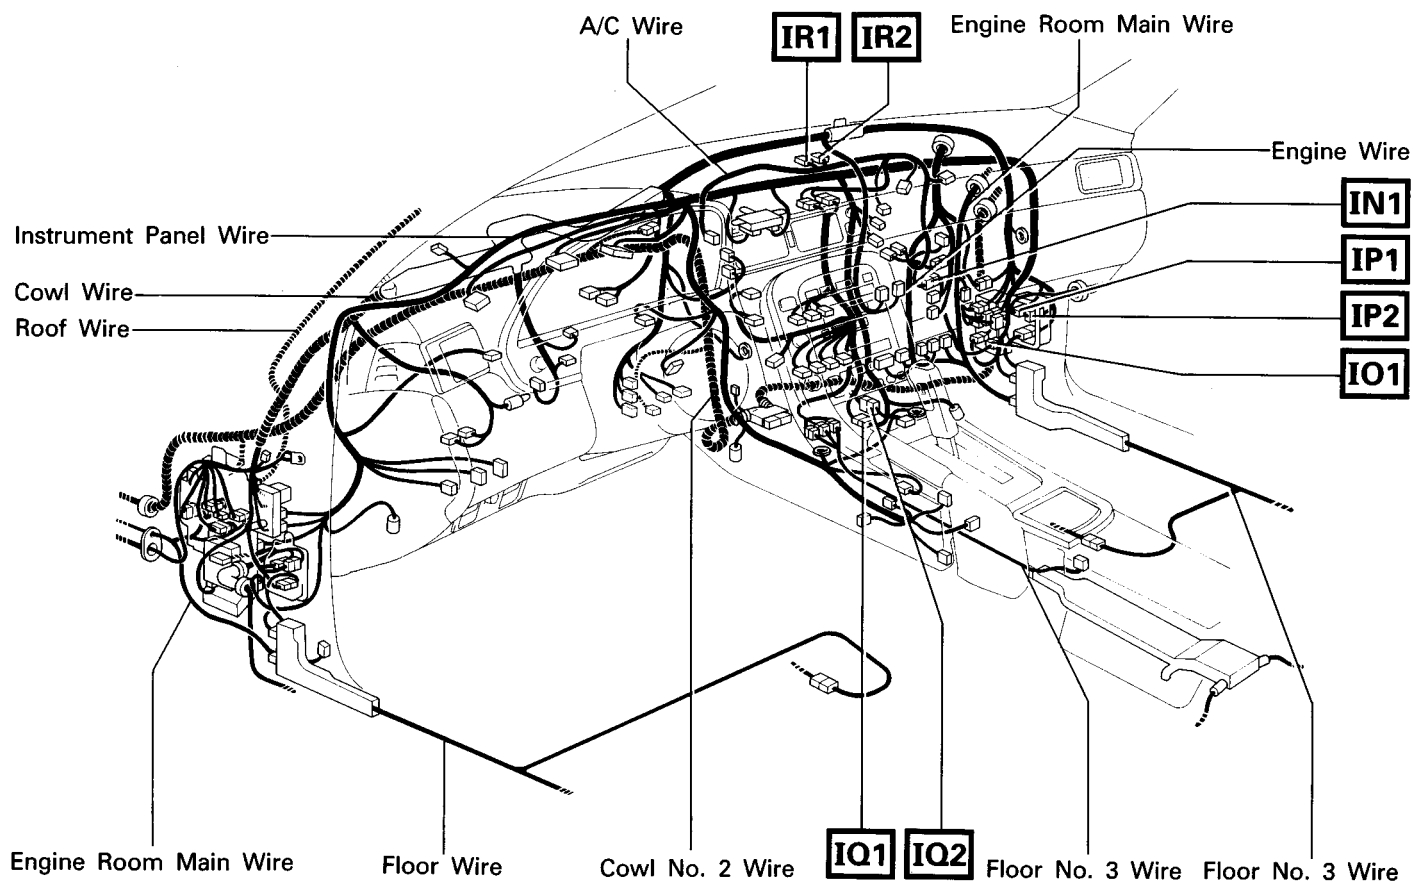

○ : Location of Splice Points

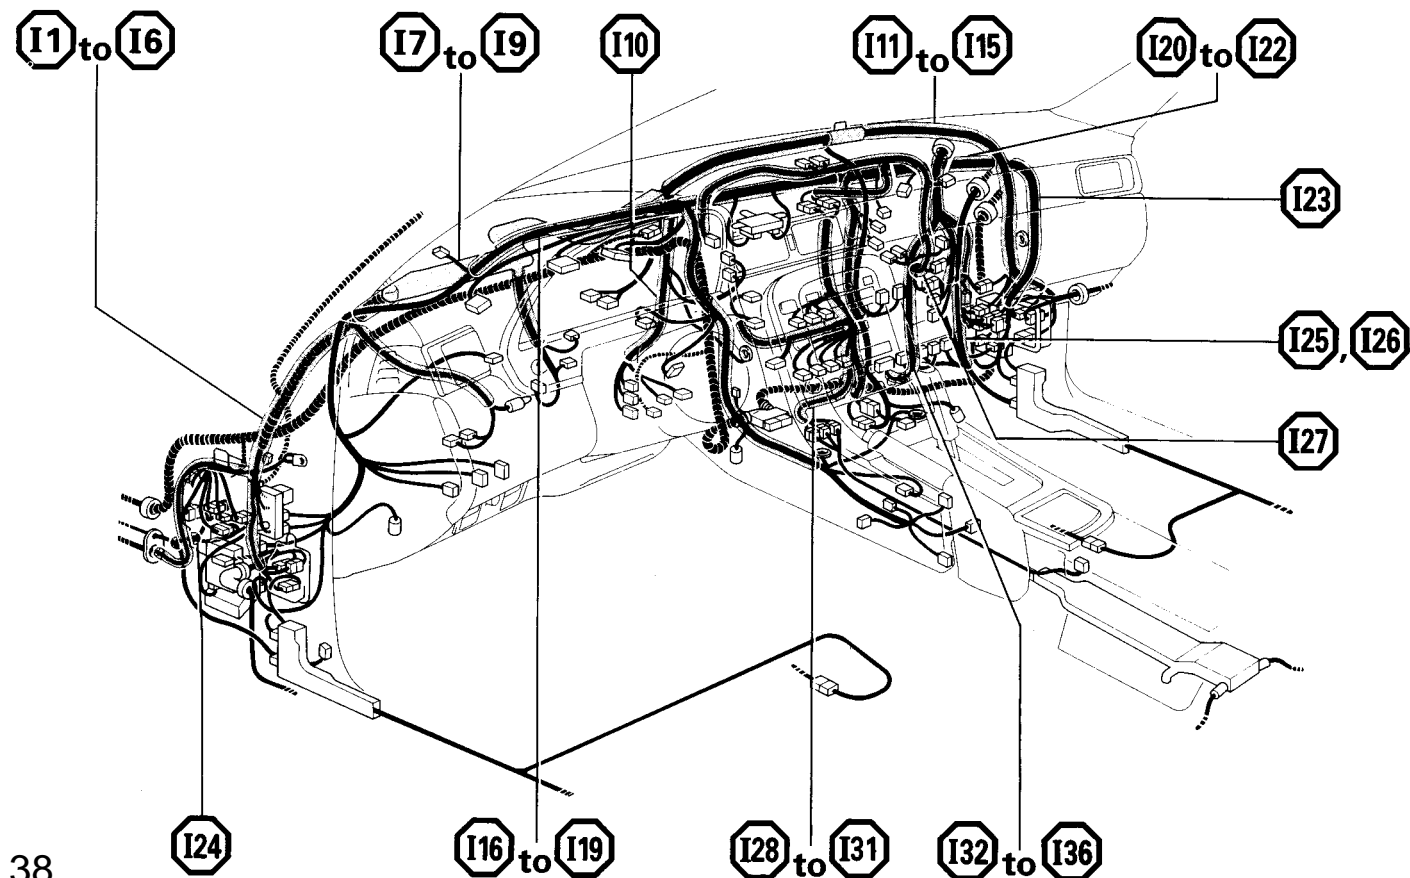

## Connector Joining Wire Harness and Wire Harness

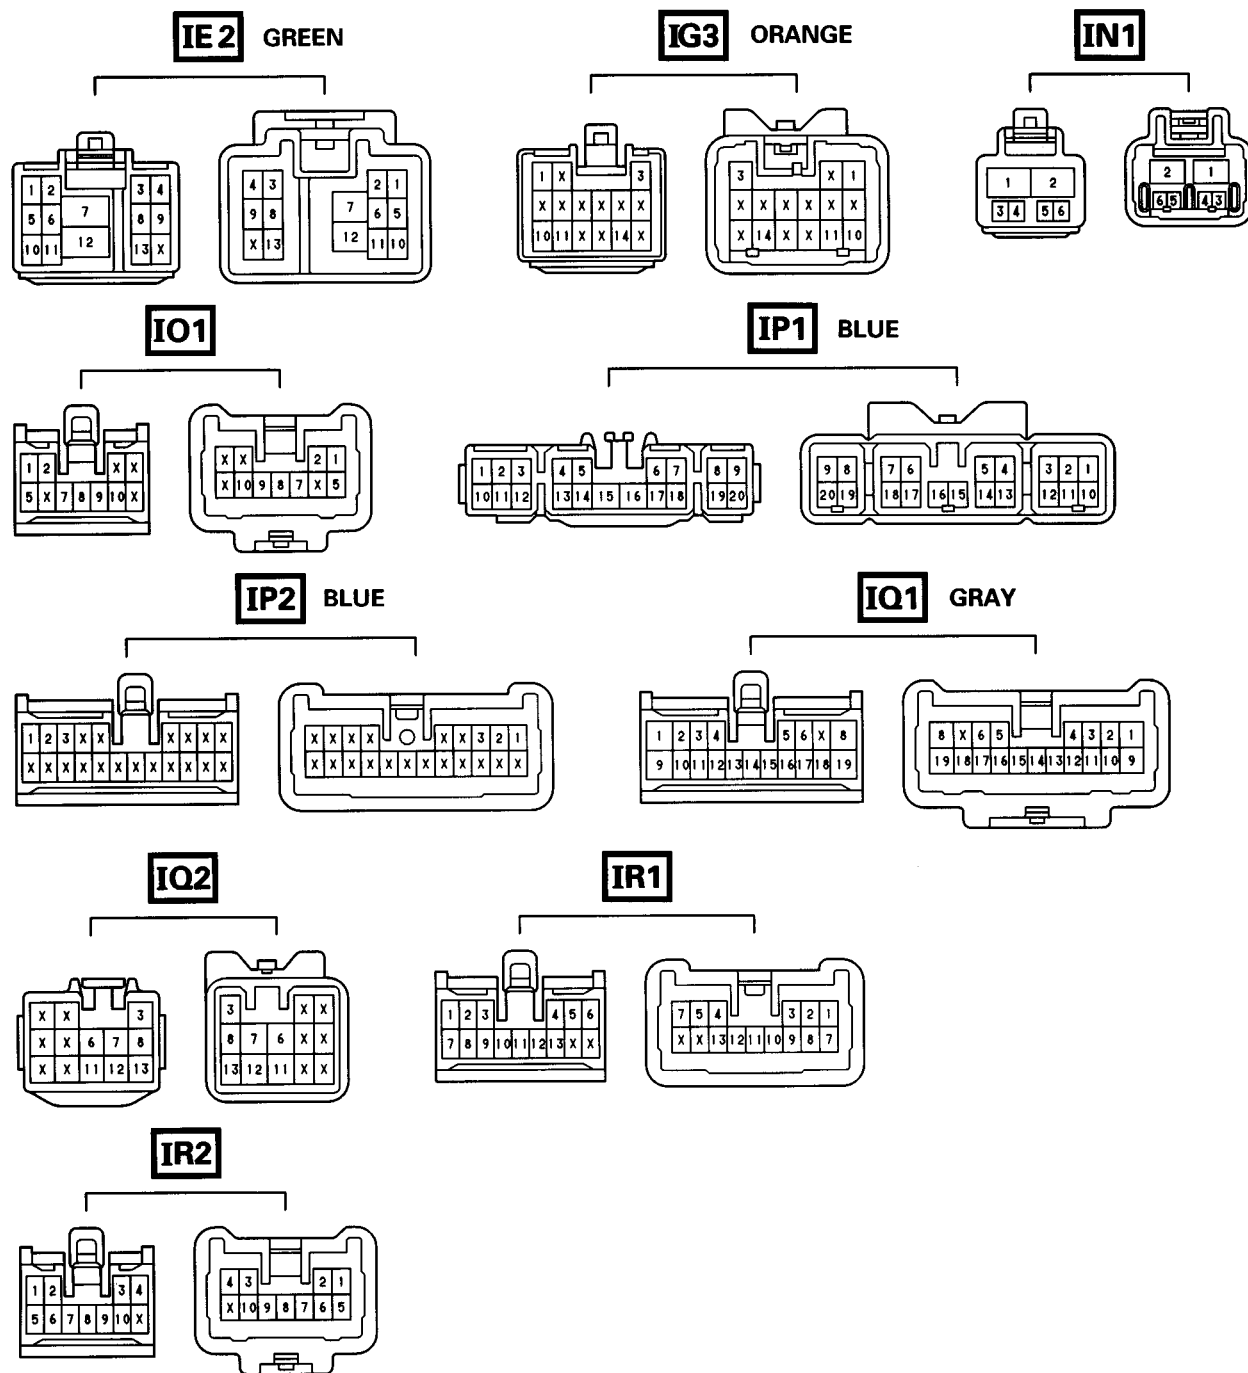


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE2	ENGINE ROOM MAIN WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IG3	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)
IN1	ENGINE ROOM MAIN WIRE AND A/C WIRE (BEHIND GLOVE BOX)
IO1	ENGINE ROOM MAIN WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IP1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IP2	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
IQ2	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
IR1	CONSOLE BOX WIRE AND A/C WIRE (BEHIND GLOVE BOX)
IR2	CONSOLE BOX WIRE AND A/C WIRE (BEHIND GLOVE BOX)


# ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

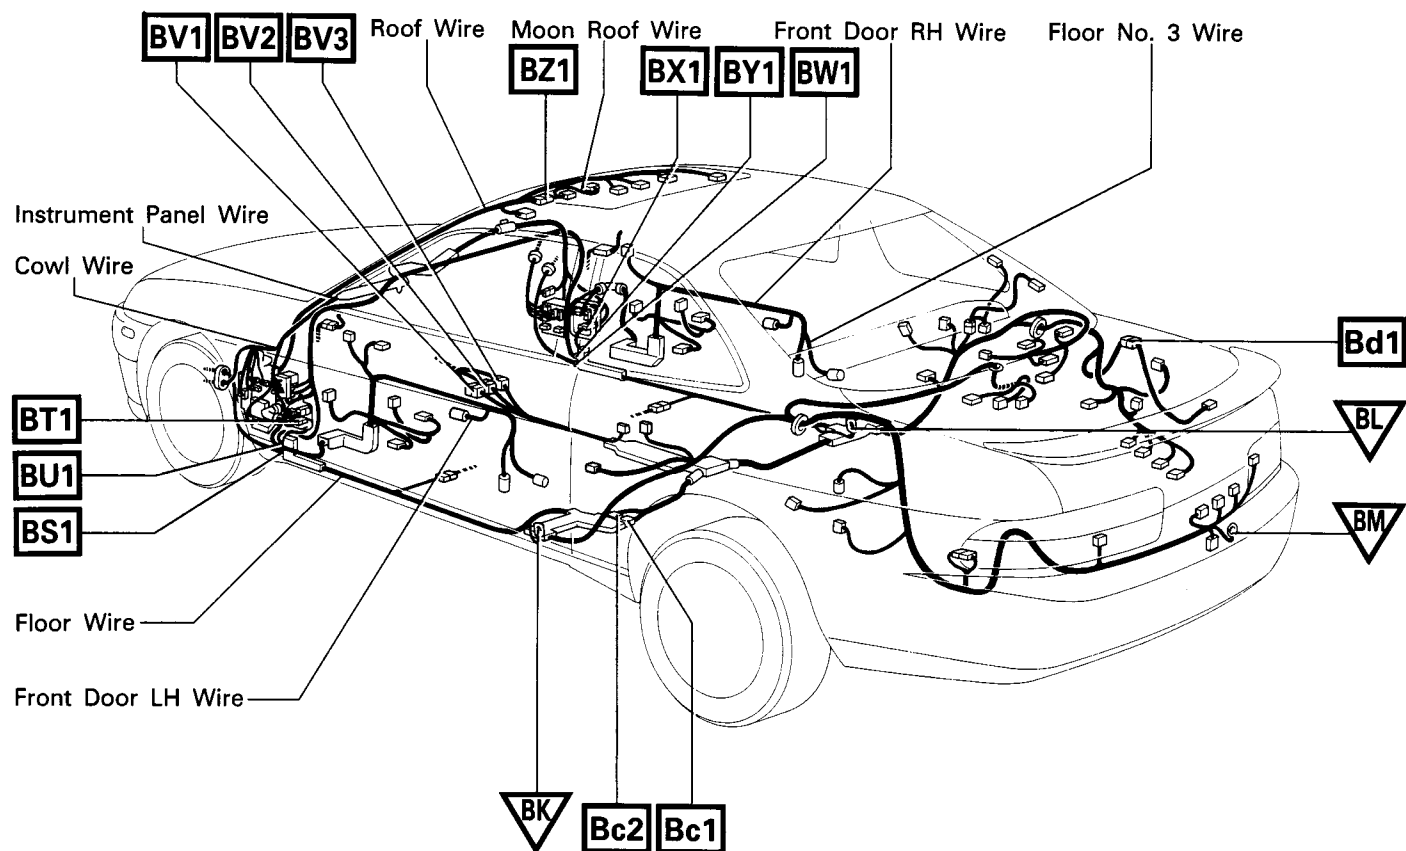

○ : Location of Splice Points

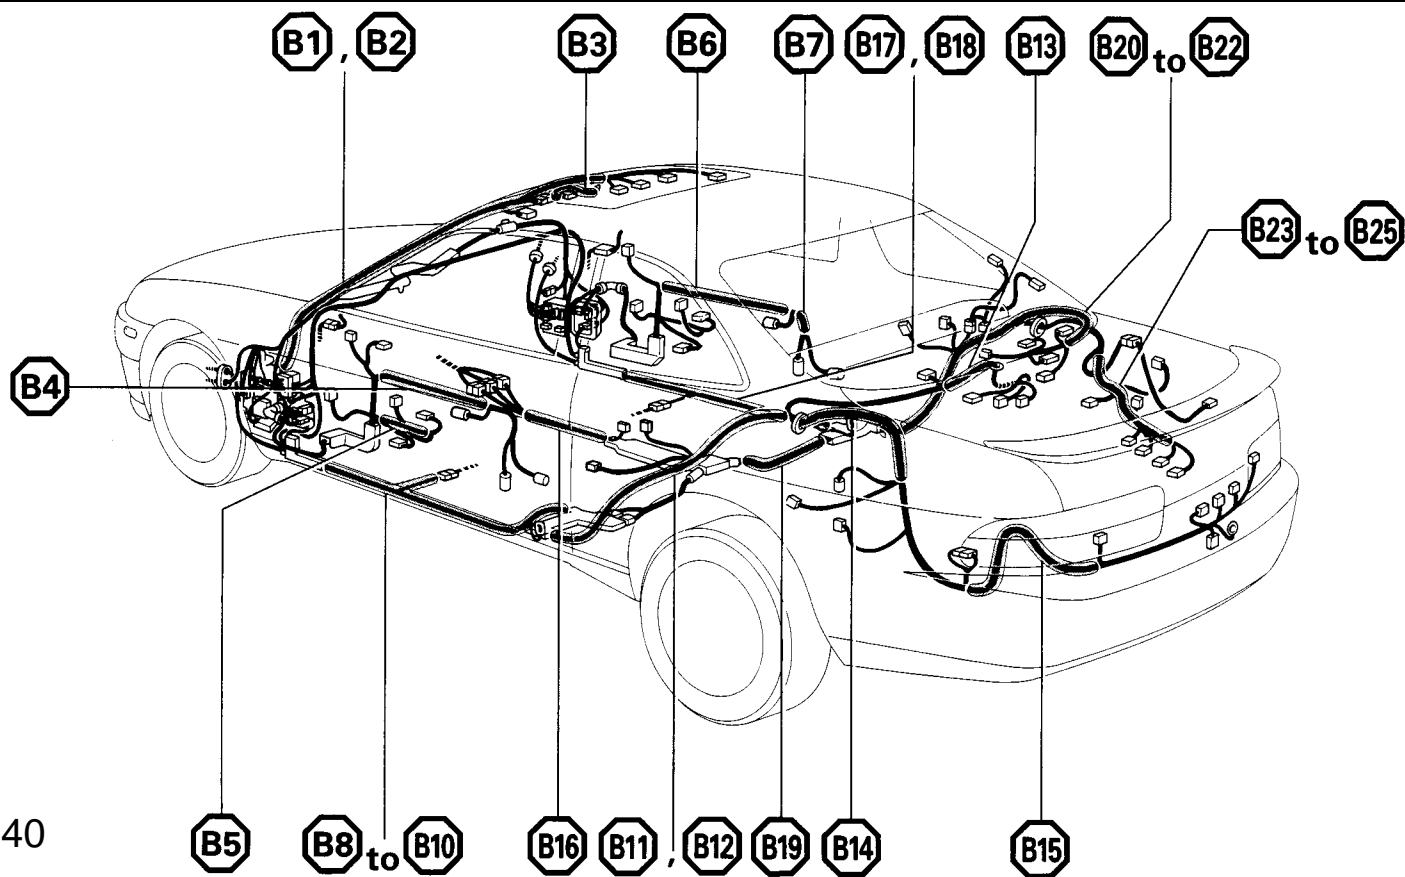


## Connector Joining Wire Harness and Wire Harness

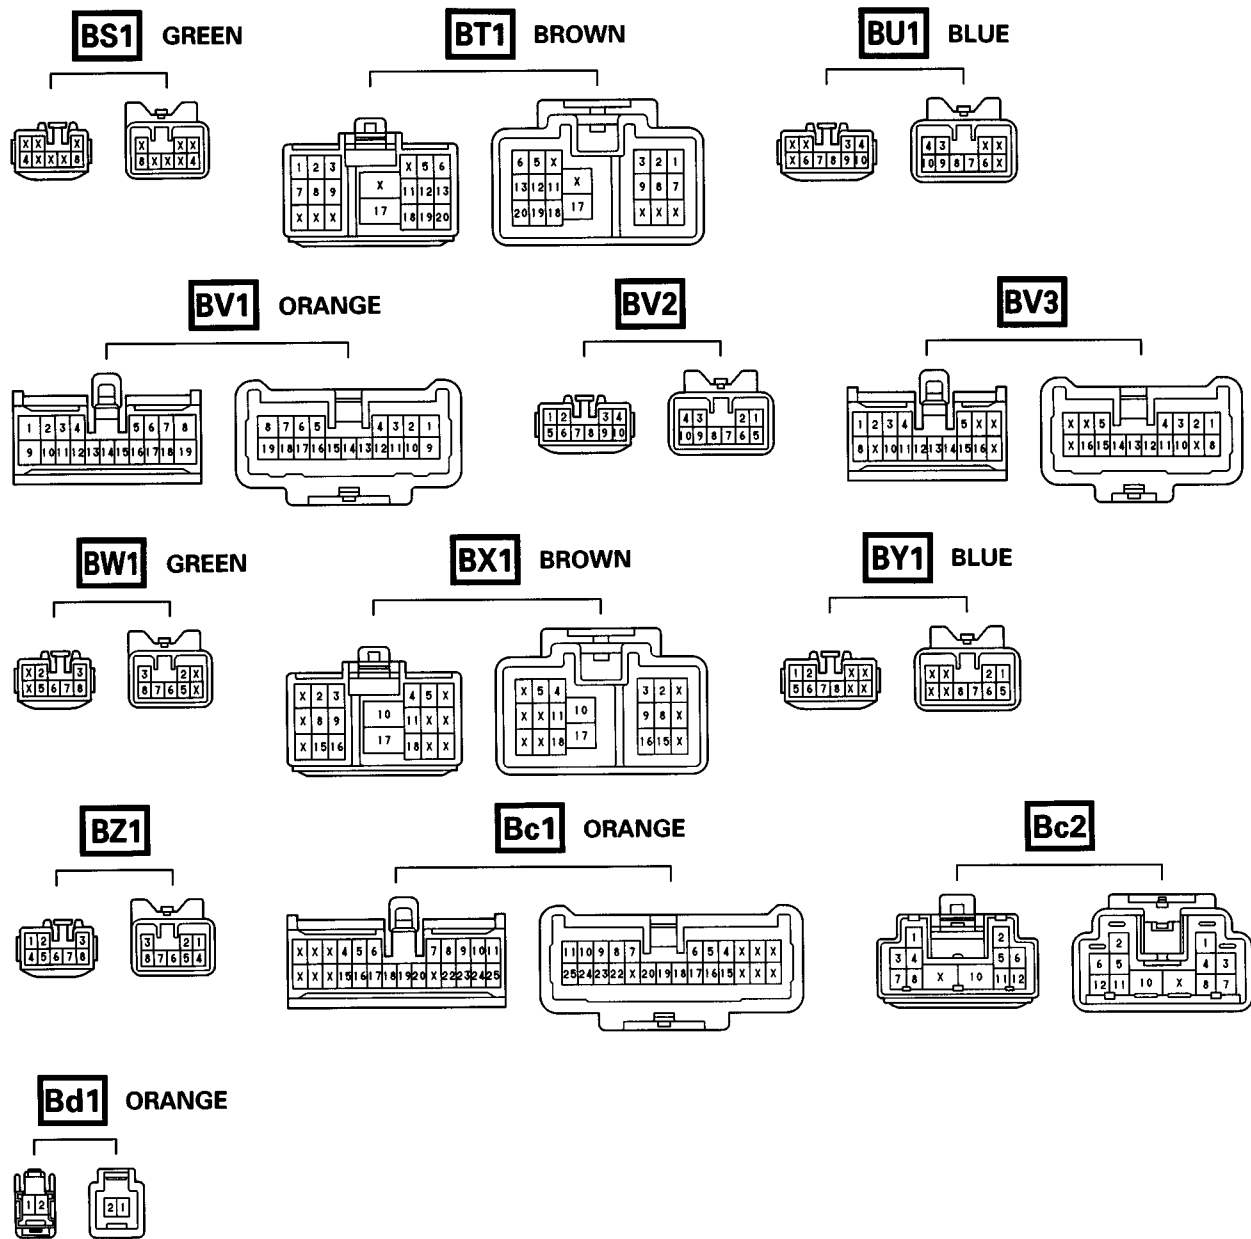


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>BS1</b>	ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)
<b>BT1</b>	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
<b>BU1</b>	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
<b>BV1</b>	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
<b>BV2</b>	
<b>BV3</b>	
<b>BW1</b>	ENGINE ROOM MAIN WIRE AND FLOOR NO. 3 WIRE (RIGHT KICK PANEL)
<b>BX1</b>	FLOOR NO. 3 WIRE AND COWL WIRE (RIGHT KICK PANEL)
<b>BY1</b>	INSTRUMENT PANEL WIRE AND FLOOR NO. 3 WIRE (RIGHT KICK PANEL)
<b>BZ1</b>	ROOF WIRE AND MOON ROOF WIRE (FRONT SIDE OF ROOF LEFT)
<b>Bc1</b>	FLOOR NO. 3 WIRE AND FLOOR WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
<b>Bc2</b>	
<b>Bd1</b>	FLOOR NO. 3 WIRE AND LUGGAGE NO. 2 WIRE (RIGHT SIDE OF LUGGAGE COMPARTMENT)

## ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

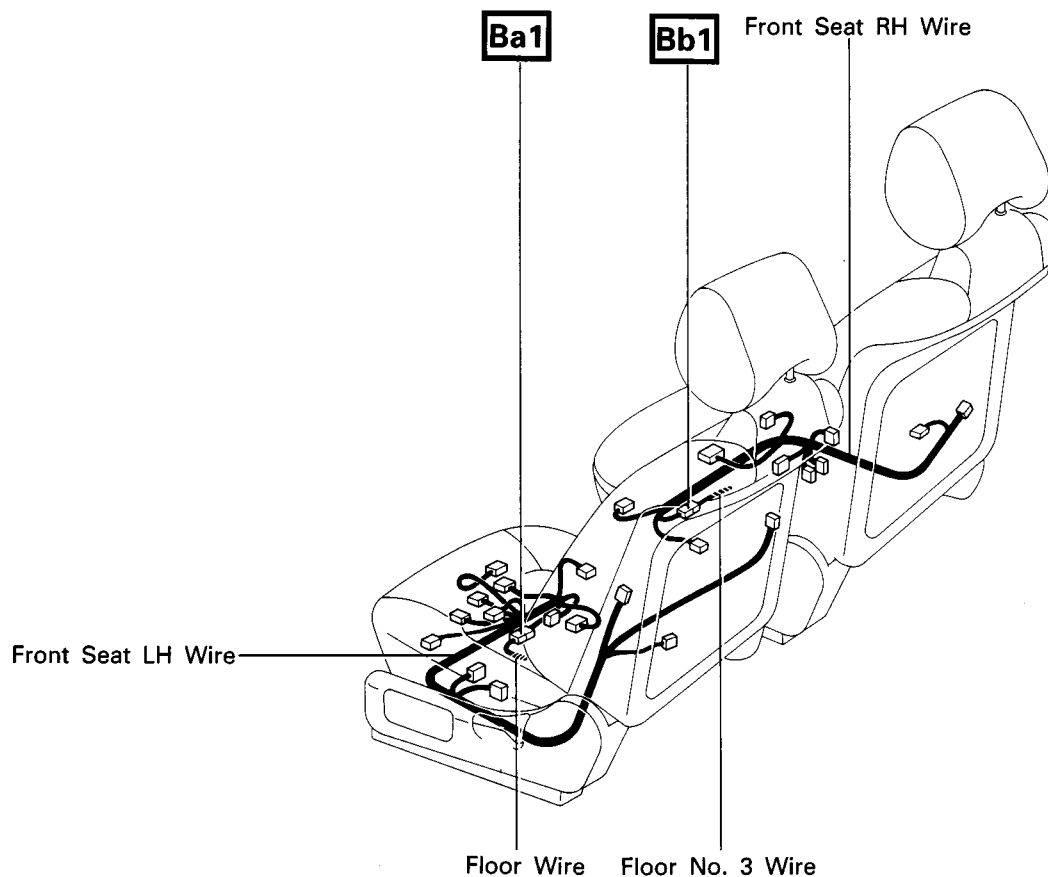

○ : Location of Splice Points

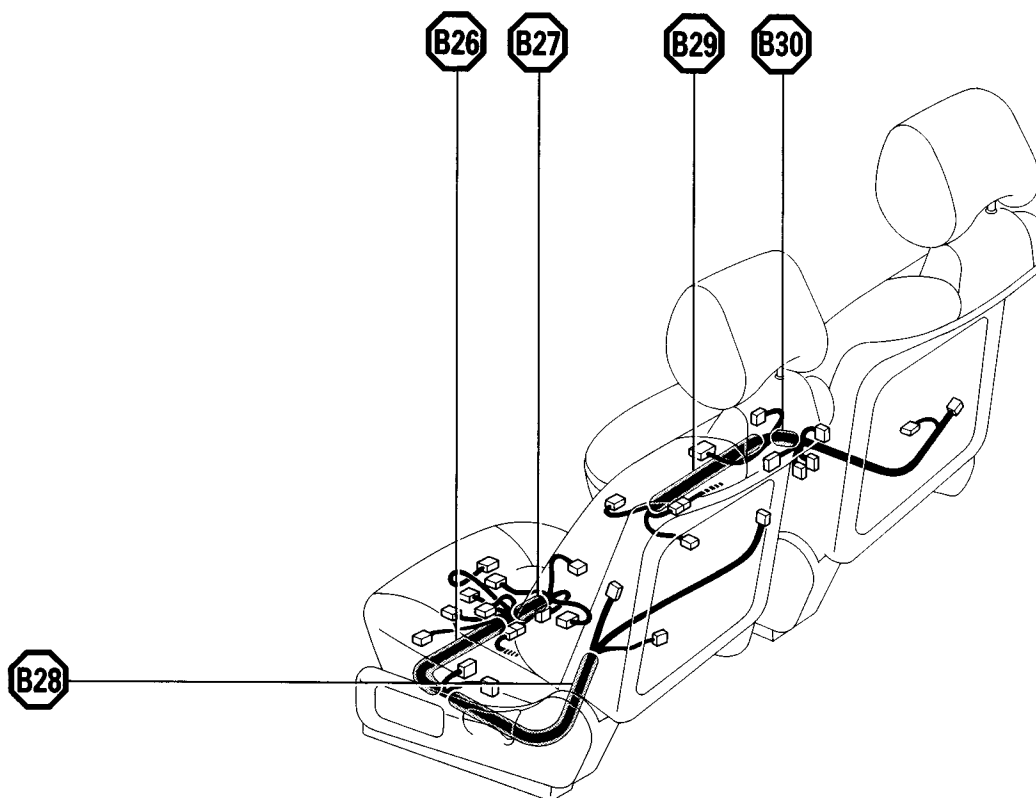

# Connector Joining Wire Harness and Wire Harness

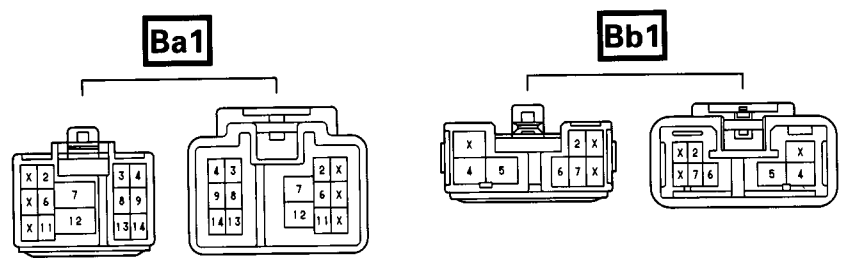

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
Ba1	FLOOR WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
Bb1	FLOOR NO. 3 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)