



GROUND POINT

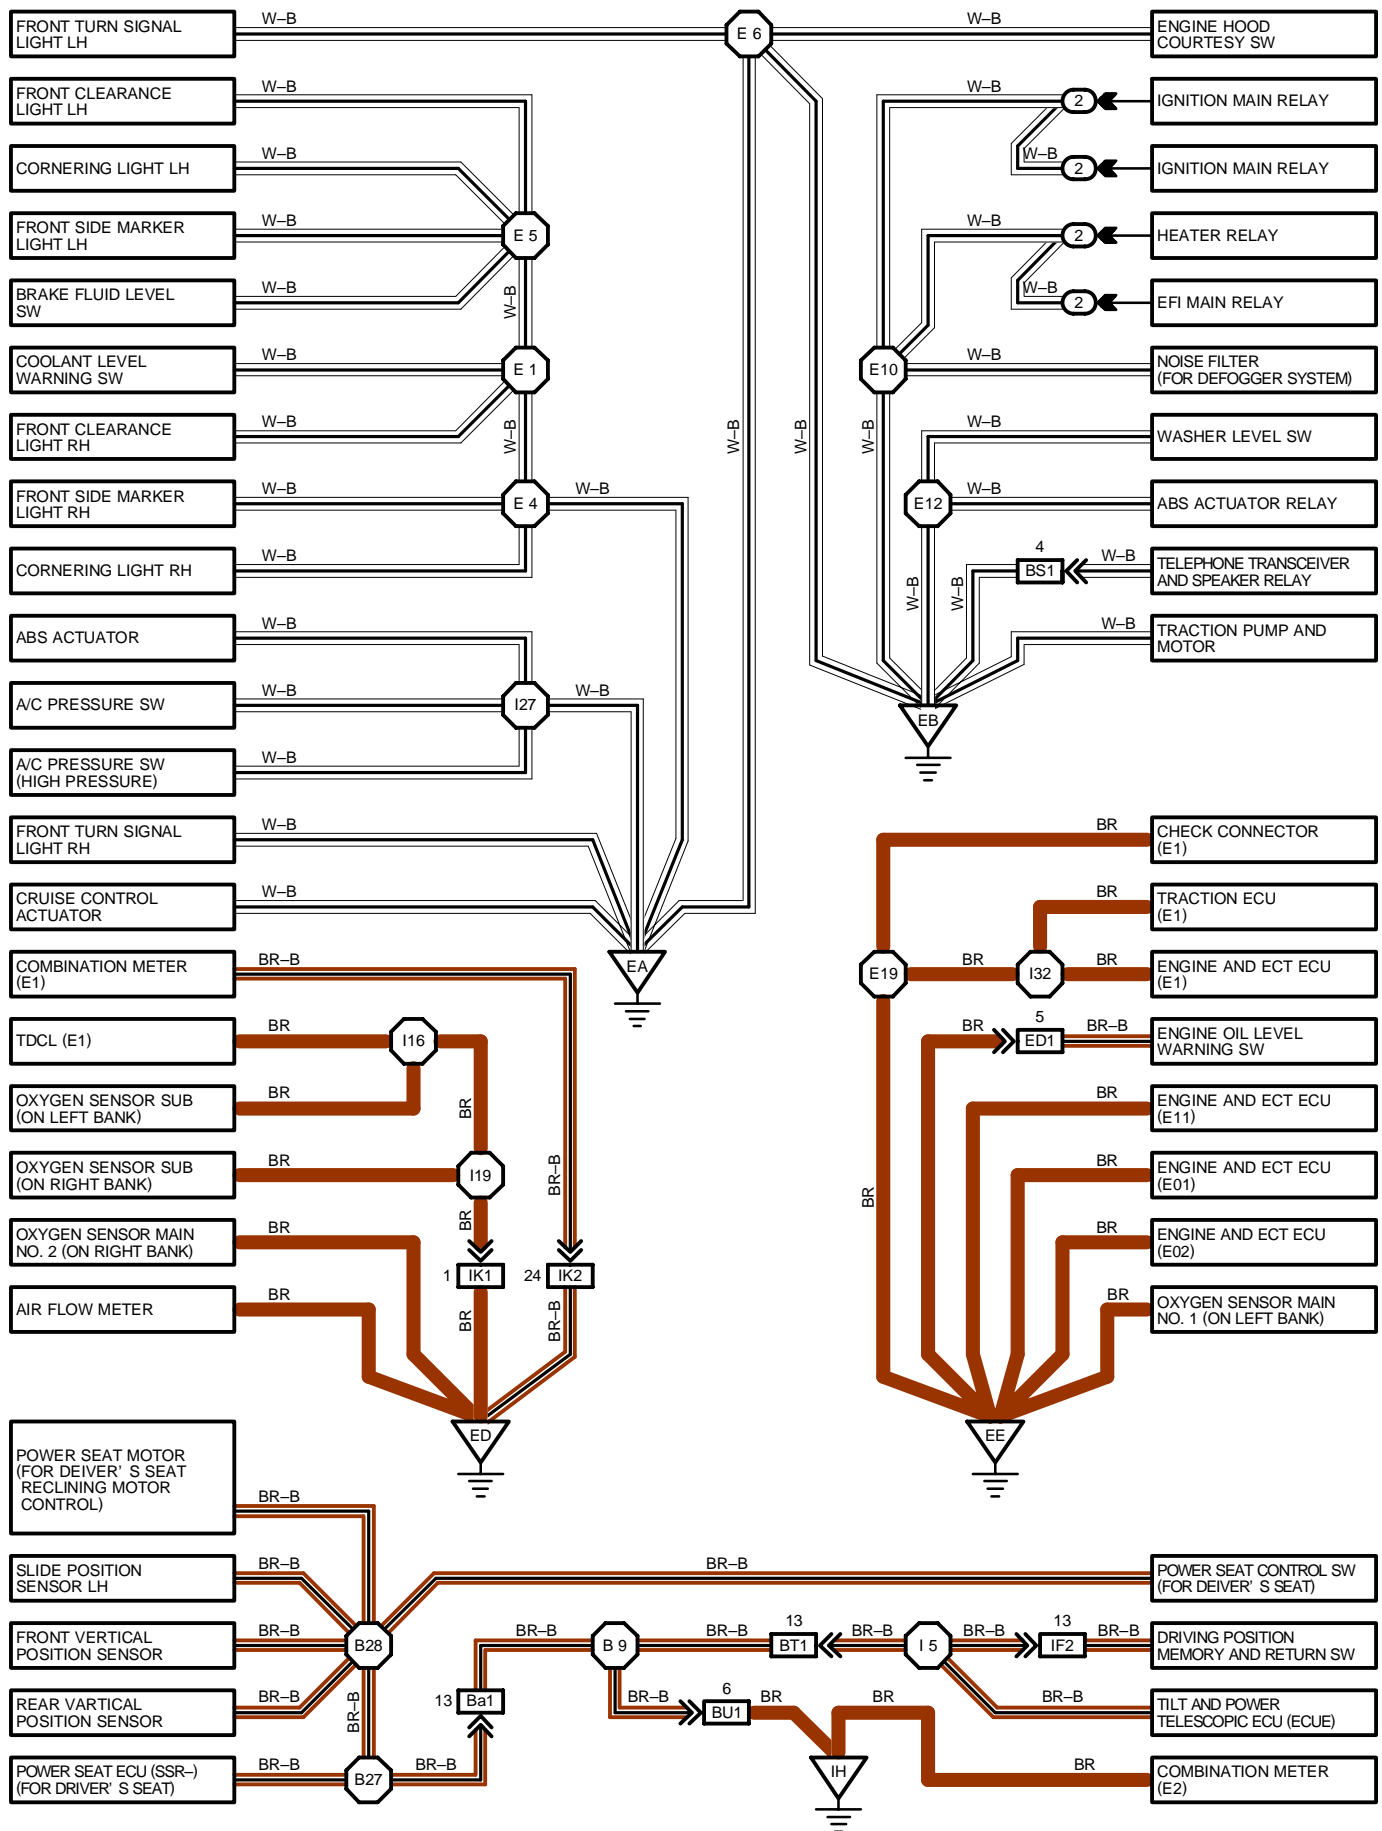

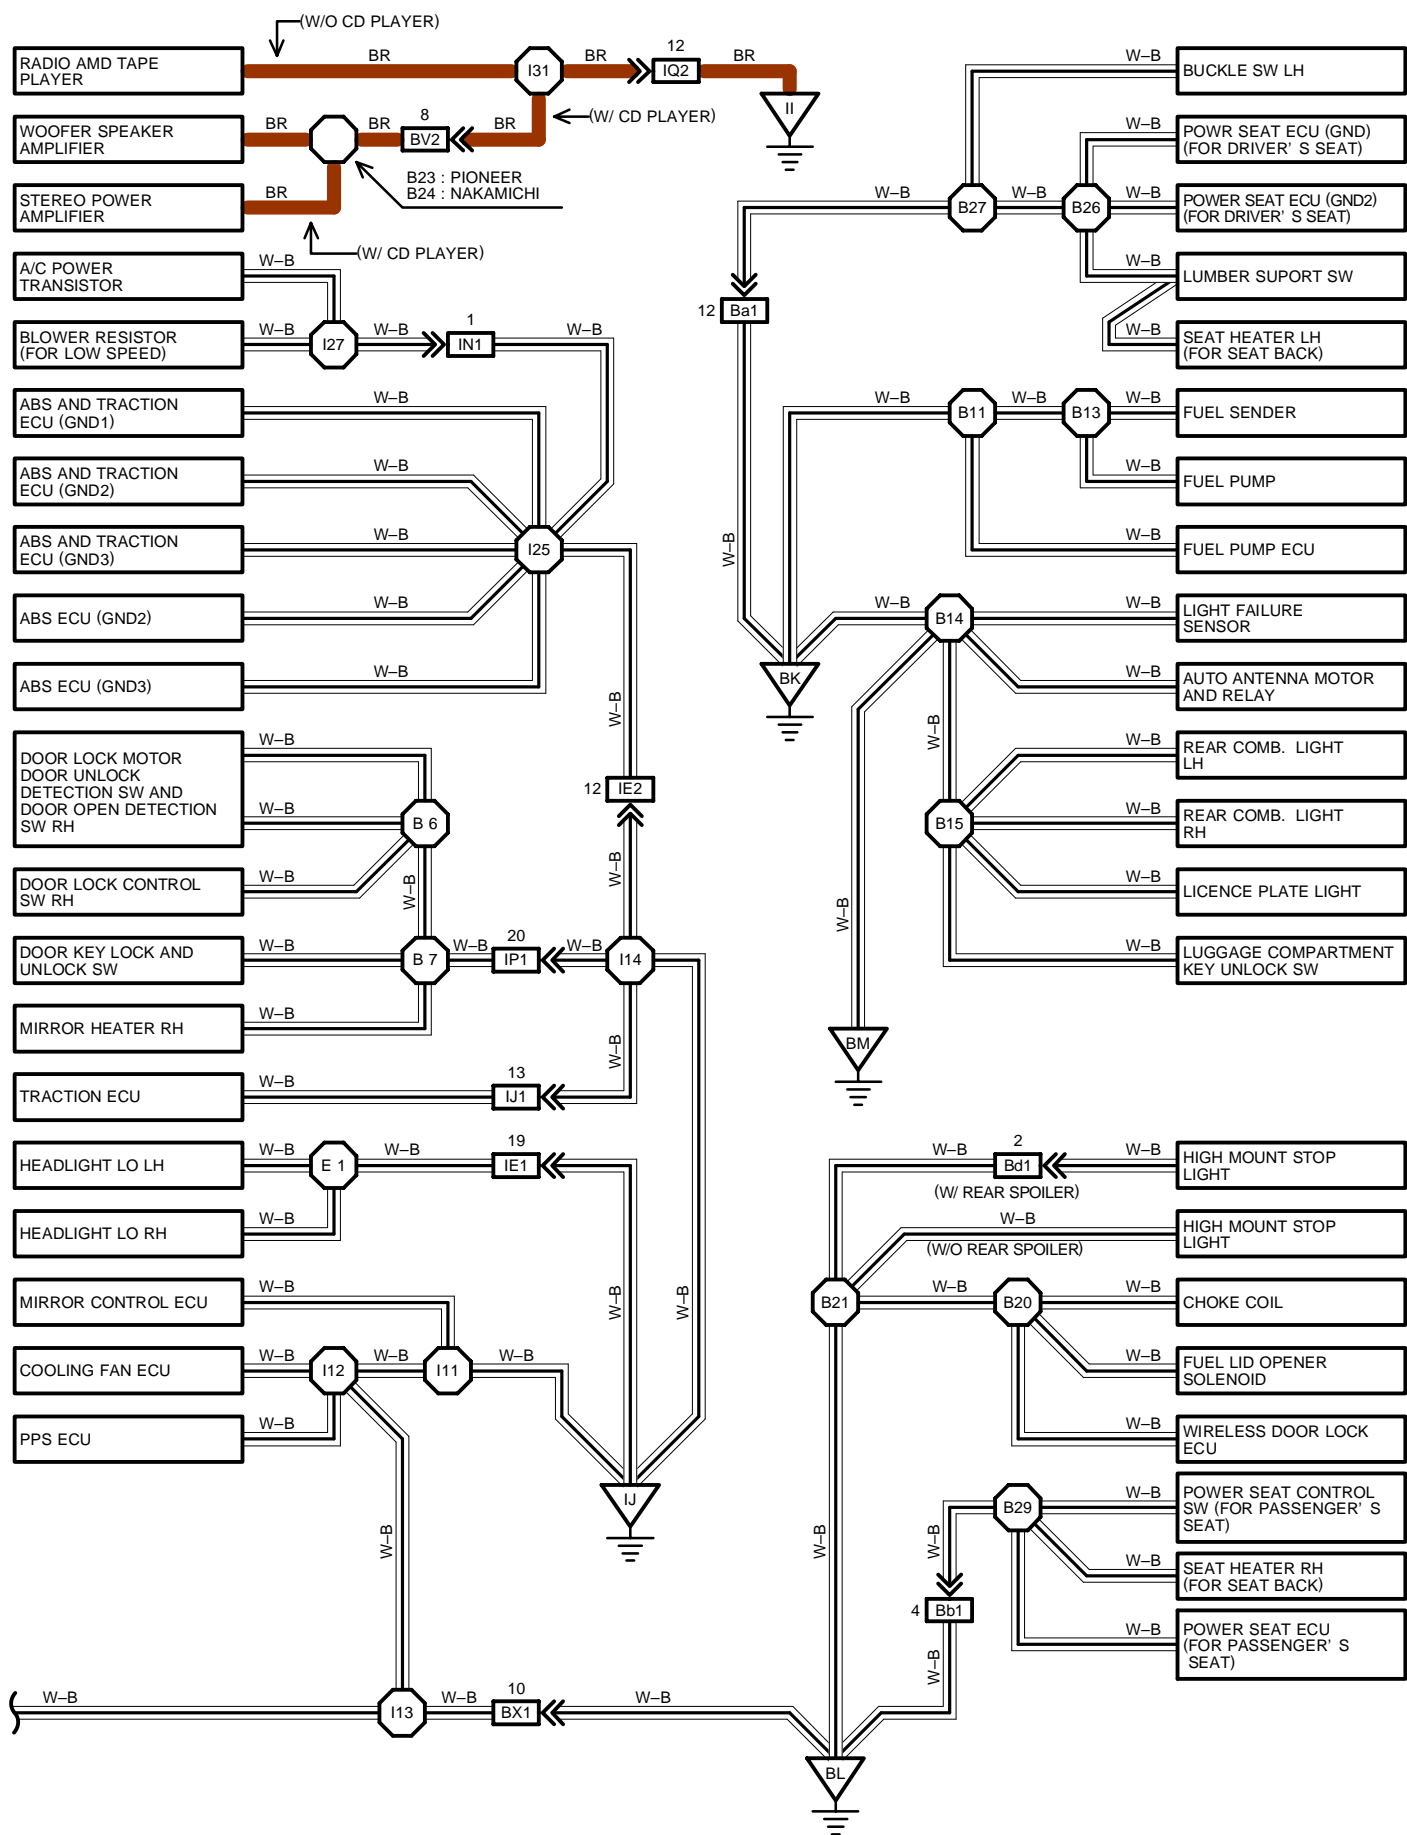

GROUND POINT



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT
4	22	LEFT KICK PANEL (J/B NO.1 LEFT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	20	FRONT DOOR LH WIRE
1E	20	INSTRUMENT PANEL WIRE
1F	20	ROOF WIRE
1G	20	COWL NO. 2 WIRE
1H	20	COWL WIRE
1J		
1K		
3A	23	INSTRUMENT PANEL WIRE
3D		
3F		
3G		
3H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO.4)
IE2	38	ENGINE ROOM MAIN WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IF2	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	36	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO.5)
IH1	36	COWL NO. 2 WIRE AND COWL WIRE (BEHIND COMBINATION METER)
IJ1	36	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK1	36	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IK2		
IN1	38	ENGINE ROOM MAIN WIRE AND A/C WIRE (BEHIND GLOVE BOX)
IP1	38	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	40	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
IQ2		
BS1	40	ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)
BT1	40	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
BU1	40	FLOOR WIRE AND INSTRUMENT PANEL WIRE (LEFT KICK PANEL)
BV2	40	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BX1	40	FLOOR NO. 3 WIRE AND COWL WIRE (RIGHT KICK PANEL)
BZ1	40	ROOF WIRE AND MOON ROOF WIRE (FRONT SIDE OF ROOF LEFT)
Ba1	40	FLOOR WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
Bb1	40	FLOOR NO. 3 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)
Bd1	40	FLOOR NO. 3 WIRE AND LUGGAGE NO. 2 WIRE (RIGHT SIDE OF LUGGAGE COMPARTMENT)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	FRONT SIDE OF RIGHT FENDER
EB	34	FRONT SIDE OF LEFT FENDER
ED	34	REAR SIDE OF CYLINDER HEAD RH
EE	34	REAR SIDE OF CYLINDER HEAD LH
IF	36	LEFT KICK PANEL
IG	36	INSTRUMENT PANEL BRACE LH
IH	36	UNDER THE ASHTRAY LH
II	36	UNDER THE ASHTRAY RH
IJ	36	RIGHT KICK PANEL
BK	40	UNDER THE CENTER PILLAR LH
BL	40	UNDER THE CENTER PILLAR RH
BM	40	BACK PANEL CENTER



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	34	ENGINE ROOM MAIN WIRE	I32	38	ENGINE WIRE
E 3			B 1	40	ROOF WIRE
E 4			B 2		
E 5			B 3	40	MOON ROOF WIRE
E 6			B 4	40	FRONT DOOR LH WIRE
E 10			B 5		
E 12			B 6	40	FRONT DOOR RH WIRE
E 19	34	ENGINE WIRE	B 7		
I 1	38	COWL WIRE	B 9	40	FLOOR MAIN WIRE
I 5			B 11		
I 8			B 13		
I 10			B 14		
I 11			B 15	40	FLOOR NO. 3 WIRE
I 12			B 20		
I 13			B 21		
I 14			B 23		
I 16	38	INSTRUMENT PANEL WIRE	B 24	42	FRONT SEAT LH WIRE
I 19			B 26		
I 25	38	ENGINE ROOM MAIN WIRE	B 27		
I 27	38	A/C WIRE	B 28		
I 29	38	CONSOLE BOX WIRE	B 29	42	FRONT DOOR RH WIRE
I 31					