



## POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.


The next page and following pages show the parts to which each electrical source outputs current.

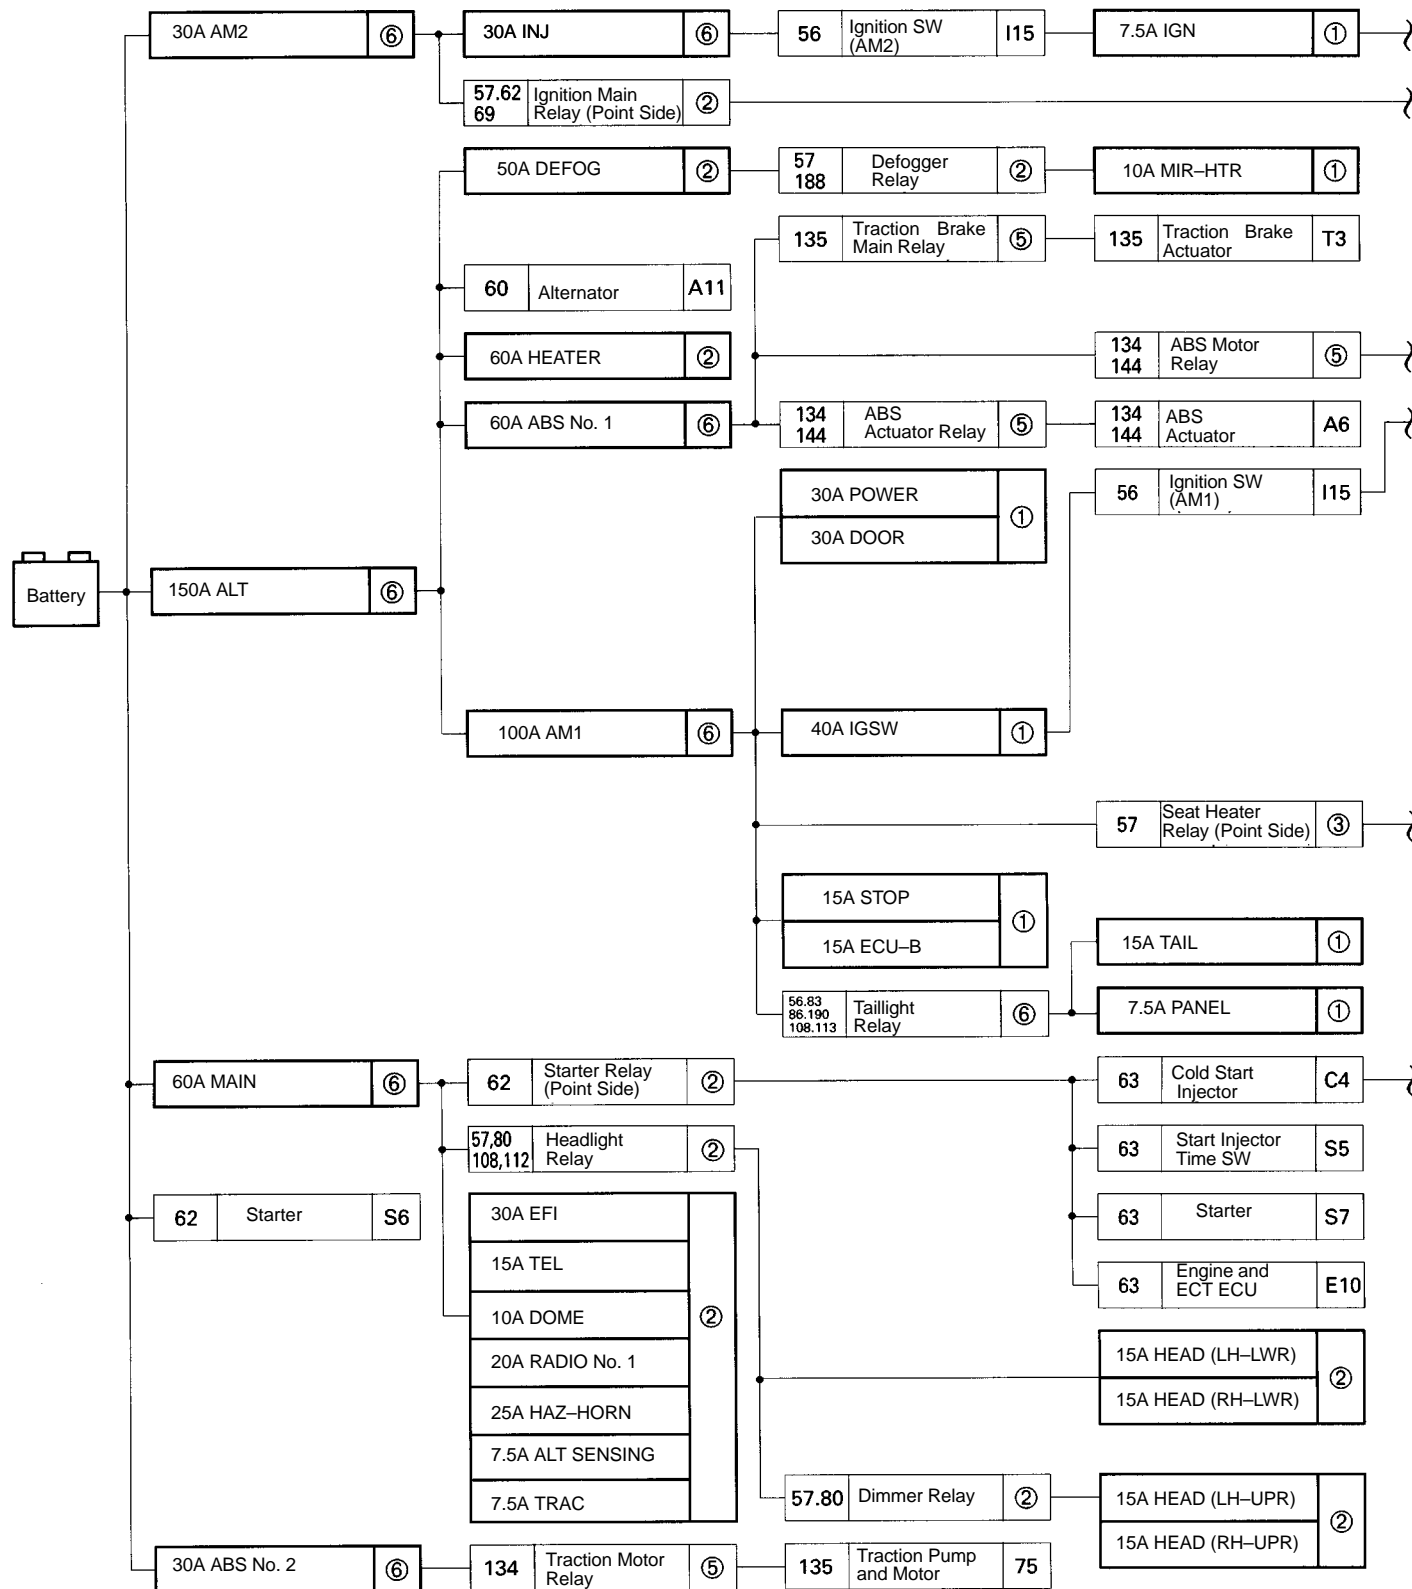

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 19) (3) : R/B No. 4 (See page 22)

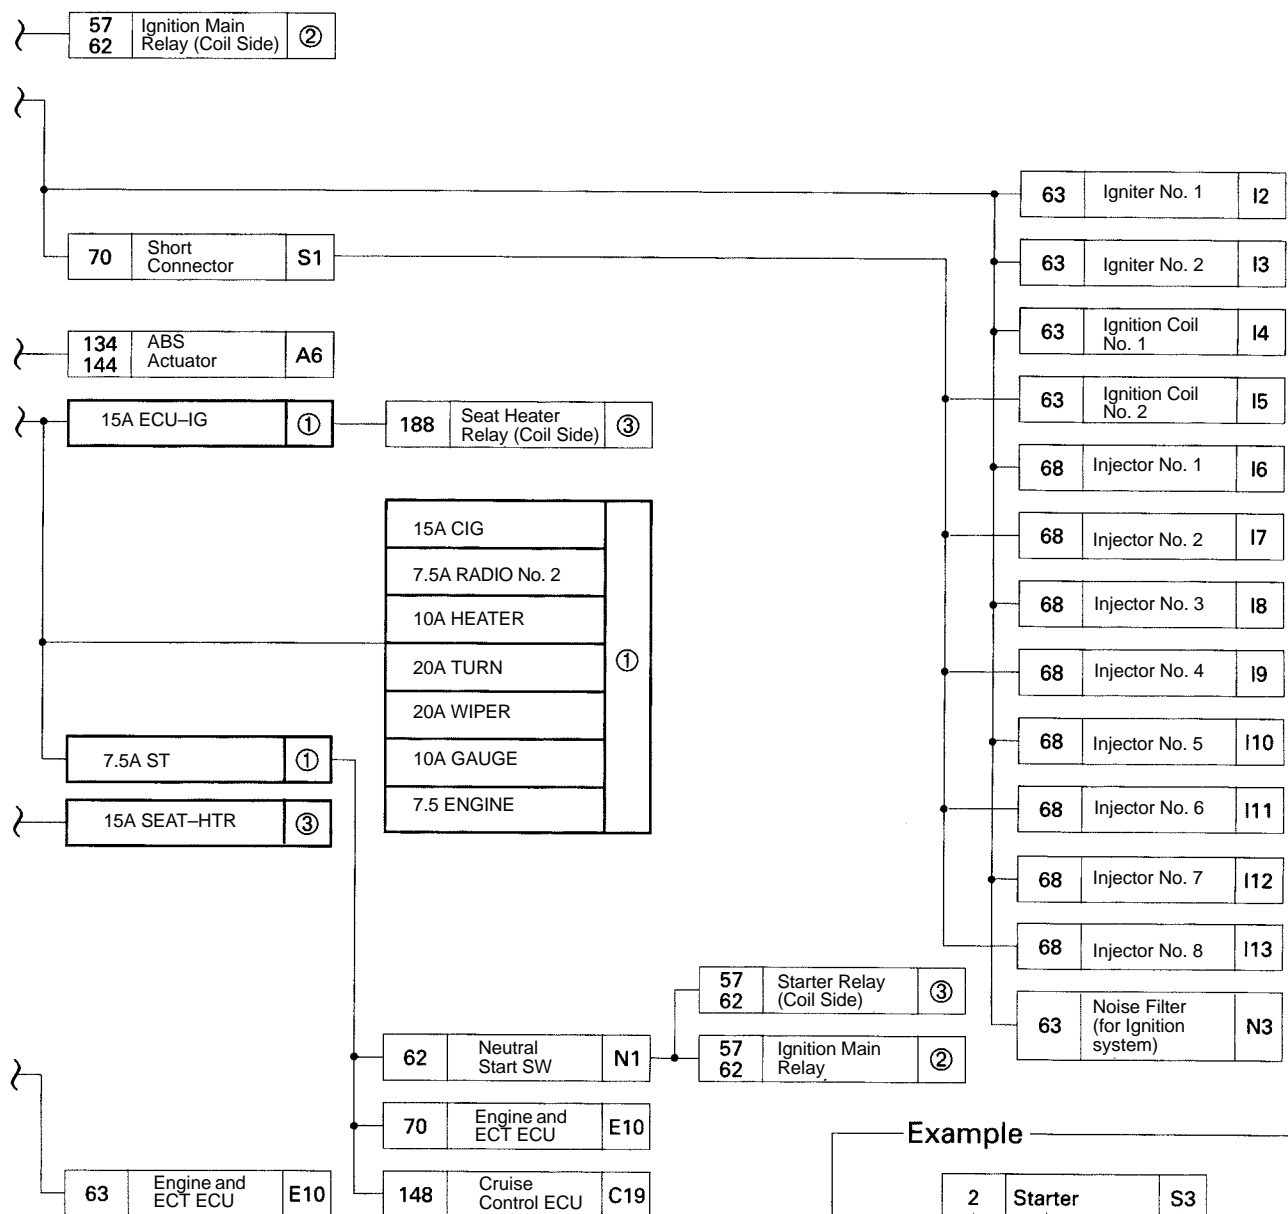

### Example

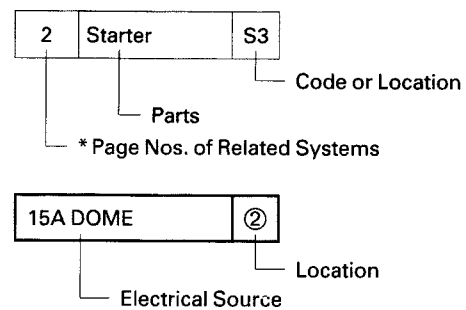

(4) : R/B No. 2 (See page 22) (5) : R/B No. 6 (See page 24) (6) : Fuse Box (F9 See page 19)

# H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	Parts																		Code or Location																		CB or Fuse																	
			222	60	222	90	222	90	222	90	144	134	134	202	126	222	222	190	68	106	216	102	176	90																																	
			216	222	188	222			126										134	144				167																																	
			A/C Magnetic Clutch	Alternator	A/C Control Assembly			A/C Control SW and Radio SW	A/C Power Transistor	A/T Indicator Light (for Shift Lever)	ABS ECU	ABS and Traction ECU	ABS and Traction ECU	Auto Antenna Motor and Relay	Brake Fluid Level SW	Blower Motor	Blower Resistor	Buckle SW LH	Check Connector	Coolant Level Warning SW	Cornering Light LH	Cornering Light RH	Center Airbag Assembly	Cigarette Lighter																																	
			A2	A10	A12	A13	A14	A15	A17	A21	A23	A24	A25	A32	B1	B2	B3	B4	C3	C5	C6	C7	C10	C11																																	
①	50A	DEFOG																																																							
	30A	DOOR																																																							
	30A	POWER																																																							
	1.5A	STOP									●		●																																												
	15A	ECU-B															●				●																																				
	10A	MIR-HTR																																																							
	10A	HEATER	●		●	●	●		●																																																
	20A	TURN																		●	●																																				
	20A	WIPER																																																							
	10A	GAUGE									●	●		●		●		●																																							
	15A	ECU-IG									●	●			●		●		●																																						
	7.5A	ENGINE		●																																																					
	7.5A	IGN		●																	●																																				
	15A	CIG			●																●	●																																			
	7.5A	RADIO No.2													●																																										
	15A	TAIL																																																							
	7.5A	PANEL				●		●		●														●																																	
	7.5A	ST																																																							
②	15A	TEL																																																							
	10A	DOME			●						●		●																																												
	20A	RADIO No.1												●																																											
	25A	HAZ-HORN																																																							
	30A	EFI																●																																							
	7.5A	ALT SENSING		●																																																					
	15A	HEAD LH-LWR																																																							
	15A	HEAD RH-LWR																																																							
	15A	HEAD LH-UPR																																																							
	15A	HEAD RH-UPR																																																							
	60A	HEATER					●		●							●	●																																								
	③	15A	SEAT-HTR																																																						

\* These are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page 20) (2) : R/B No. 2 (See page 19) (3) : R/B No. 4 (See page 22)

(4) : R/B No. 5 (See page 22)

# H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		107	94										126	68	216	90 126	68 126	68 126 222	86				104		112		68	216	90					
			Parts			Code or Location	CB or Fuse	Day/Night Shift SW	Door Courtesy Light LH	Door Courtesy Light RH	Door Lock Motor, Door Unlock Detection SW and Door Open Detection SW LH	Door Lock Motor, Door Unlock Detection SW and Door Open Detection SW RH	ECT Solenoid	EGR Valve (for California)	Engine Oil Level Warning SW							ECT Pattern Select SW	Engine and ECT ECU	Front Clearance Light LH	Front Clearance Light RH	Front Side Marker Light LH	Front Side Marker Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH				Fuel Lid Opener SW	Fuel Lid Opener Solenoid	Fuel Pump ECU	Fuel Sender	Glove Box Light
								D4	D5	D6	D10	D11	E1	E4	E6							E8	E9	E10	F3	F4	F5	F6	F7				F8	F10	F14	F16	F18
①	50A	DEFOG																																			
	30A	DOOR																			●	●															
	30A	POWER																																			
	1.5A	STOP										●																									
	15A	ECU-B																																			
	10A	MIR-HTR																																			
	10A	HEATER										●																									
	20A	TURN											●					●	●																		
	20A	WIPER																																			
	10A	GAUGE								●	●	●												●													
	15A	ECU-IG																																			
	7.5A	ENGINE																																			
	7.5A	IGN											●																								
	15A	CIG												●								●															
	7.5A	RADIO No.2																																			
	15A	TAIL													●	●	●	●																			
	7.5A	PANEL										●														●											
	7.5A	ST												●																							
②	15A	TEL																																			
	10A	DOME	●	●	●	●	●																														
	20A	RADIO No.1																																			
	25A	HAZ-HORN																	●	●																	
	30A	EFI						●	●			●	●									●															
	7.5A	ALT SENSING																																			
	15A	HEAD LH-LWR																																			
	15A	HEAD RH-LWR																																			
	15A	HEAD LH-UPR																																			
	15A	HEAD RH-UPR																																			
	60A	HEATER																																			
	③	15A	TRAC																																		
15A		SEAT-HTR																				●															

\* These are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page20 ) (2) : R/B No. 2 (See page19 ) (3) : R/B No. 4 (See page22 )

(4) : R/B No. 5 (See page 22)

# H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		216	68	126	68	182	216	122		154				154 190		154		94	202 208	202 212	
			Parts		Code or Location		Oil Pressure SW	Oxygen Sensor Main (on Left Bank)	Oxygen Sensor Main (on Right Bank)	O/D Main SW	Oxygen Sensor Sub (on Left Bank)	Oxygen Sensor Sub (on Right Bank)	PPS ECU	Parking Brake SW	Power Window Control SW RH	Power Window Master SW and Door Lock Control SW LH	Power Window Motor LH	Power Window Motor RH	Power Seat Control SW (for Driver's Seat)	Power Seat Control SW (for Passenger's Seat)	Power Seat ECU (Driver's)	Power Seat ECU (Passenger's)	Power Seat Motor (for Driver's Lumbar Support Control)	Power Seat Motor (for Passenger's Reclining Control)
CB or Fuse			O2	O3	O4	O5	O6	O7	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P14	P18	P20	R2	R5
①	50A	DEFOG																						
	30A	DOOR																						
	30A	POWER																						
	1.5A	STOP																						
	15A	ECU-B																						
	10A	MIR-HTR																						
	10A	HEATER																						
	20A	TURN																						
	20A	WIPER																						
	10A	GAUGE																						
	15A	ECU-IG																						
	7.5A	ENGINE																						
	7.5A	IGN																						
	15A	CIG																						
	7.5A	RADIO No.2																						
	15A	TAIL																						
	7.5A	PANEL																						
	7.5A	ST																						
②	15A	TEL																						
	10A	DOME																						
	20A	RADIO No.1																						
	25A	HAZ-HORN																						
	30A	EFI																						
	7.5A	ALT SENSING																						
	15A	HEAD LH-LWR																						
	15A	HEAD RH-LWR																						
	15A	HEAD LH-UPR																						
	15A	HEAD RH-UPR																						
	60A	HEATER																						
	15A	TRAC																						
③	15A	SEAT-HTR																						

\* These are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page20 ) (2) : R/B No. 2 (See page19 ) (3) : R/B No. 4 (See page22 )





# H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems	112 122 216	118 192	164	186	90	134	90 216	204	190	68			222	94	216	188 216	188				
			Parts	Thft Deterrent and Door Lock ECU	Tilt and Power Telescopic ECU	Seat Heater SW	Traction Cut SW	Traction ECU	Traction ECU	Trip SW and Thft Deterrent Indicator	Telephone Transceiver and Speaker Relay	Tension Reducer Solenoid LH	Tension Reducer Solenoid RH	VSV (for EGR) (Ex. California)	VSV (for EVAP)	VSV (for Fuel Pressure Up)	VSV (for Water Valve)	Vanity Light LH	Vanity Light RH	Washer Level SW	Washer Motor	Water Temp. Sender	Wiper Motor	
																								Code or Location
																								CB or Fuse
①	50A	DEFOG																						
	30A	DOOR	●																					
	30A	POWER			●																			
	1.5A	STOP					●																	
	15A	ECU-B																						
	10A	MIR-HTR														●								
	10A	HEATER																						
	20A	TURN																						
	20A	WIPER																		●		●		
	10A	GAUGE			●			●											●		●			
	15A	ECU-IG	●		●				●		●	●	●											
	7.5A	ENGINE																						
	7.5A	IGN												●										
	15A	CIG								●														
	7.5A	RADIO No.2																						
	15A	TAIL																						
	7.5A	PANEL					●			●														
	7.5A	ST	●																					
②	15A	TEL									●													
	10A	DOME	●	●				●									●	●						
	20A	RADIO No.1																						
	25A	HAZ-HORN																						
	30A	EFI											●	●	●									
	7.5A	ALT SENSING																						
	15A	HEAD LH-LWR																						
	15A	HEAD RH-LWR																						
	15A	HEAD LH-UPR																						
	15A	HEAD RH-UPR																						
	60A	HEATER																						
	15A	TRAC							●															
③	15A	SEAT-HTR				●																		

\* These are the page numbers of the first page on which the related system is shown.  
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : J/B No. 1 (See page20 ) (2) : R/B No. 2 (See page19 ) (3) : R/B No. 4 (See page22 )

[illegible]

(4) : R/B No. 5 (See page 22)