



## RELAY LOCATIONS


### [Engine Compartment]

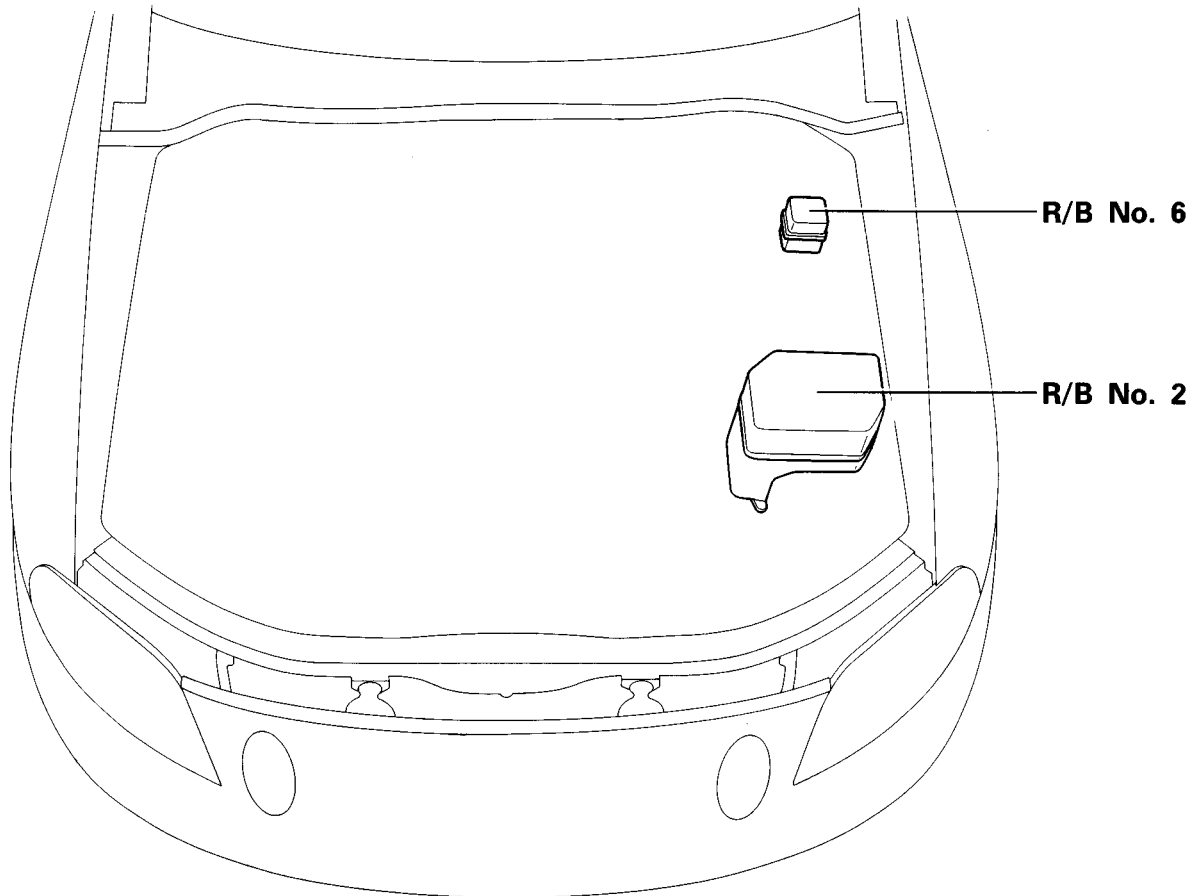

### [Instrument Panel]

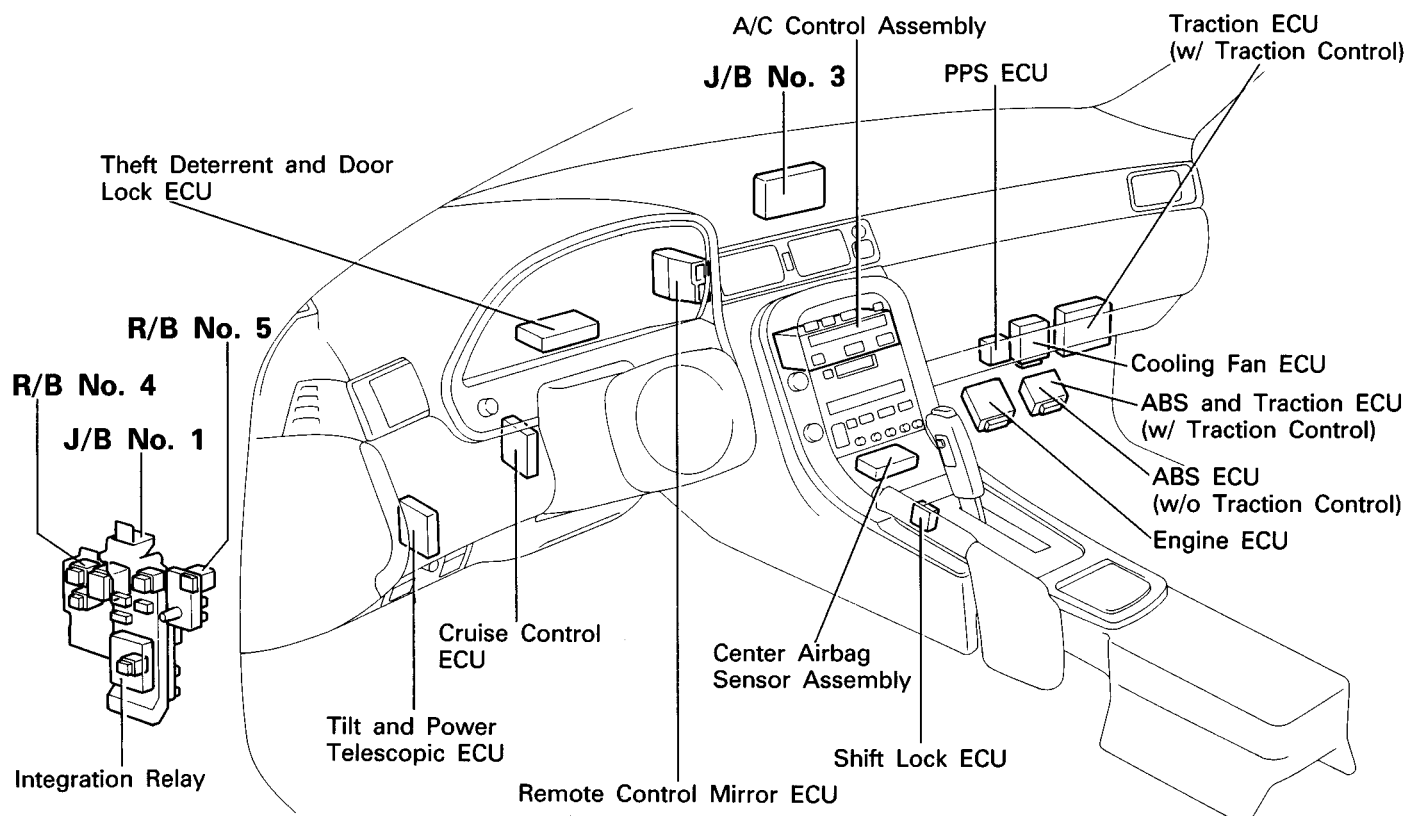


## [Body]

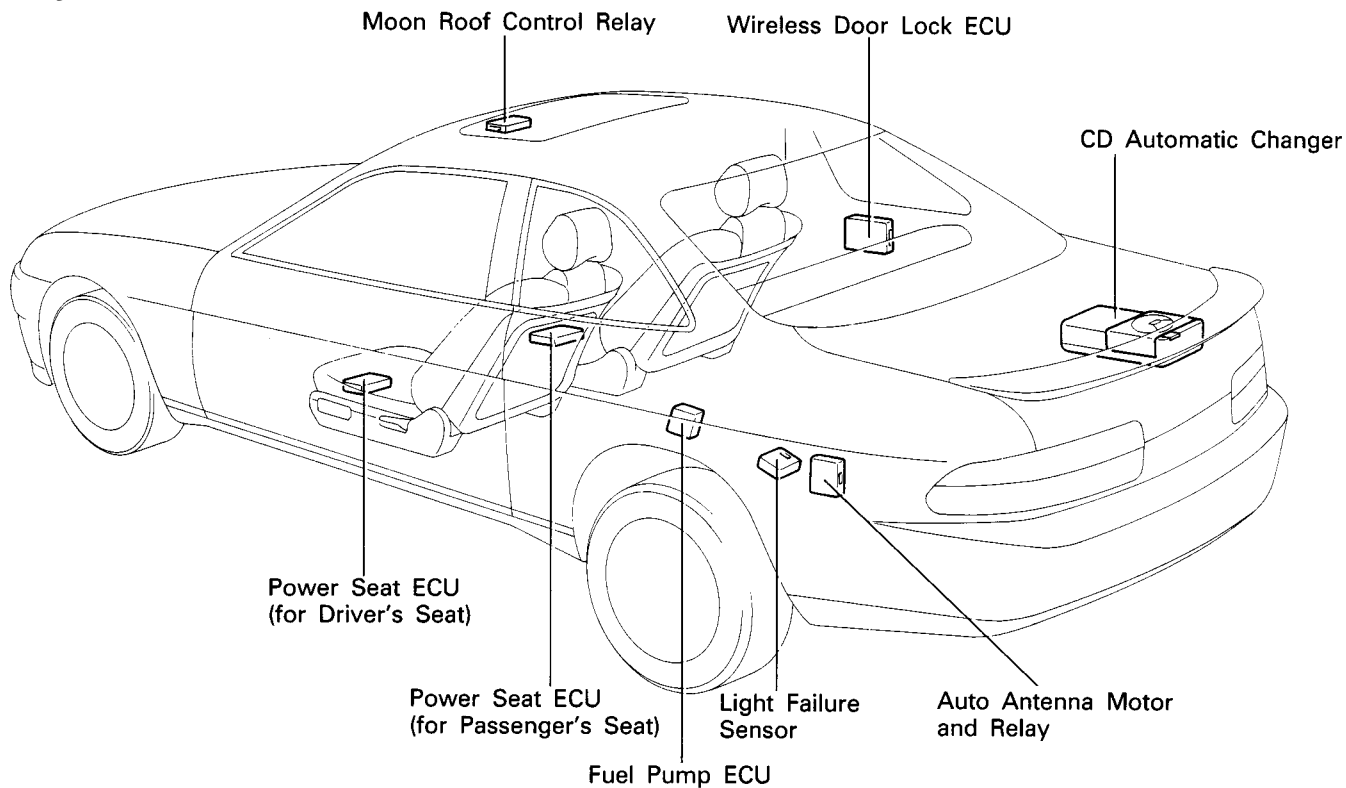

② : R/B No. 2


Engine Compartment Left (See Page 18)

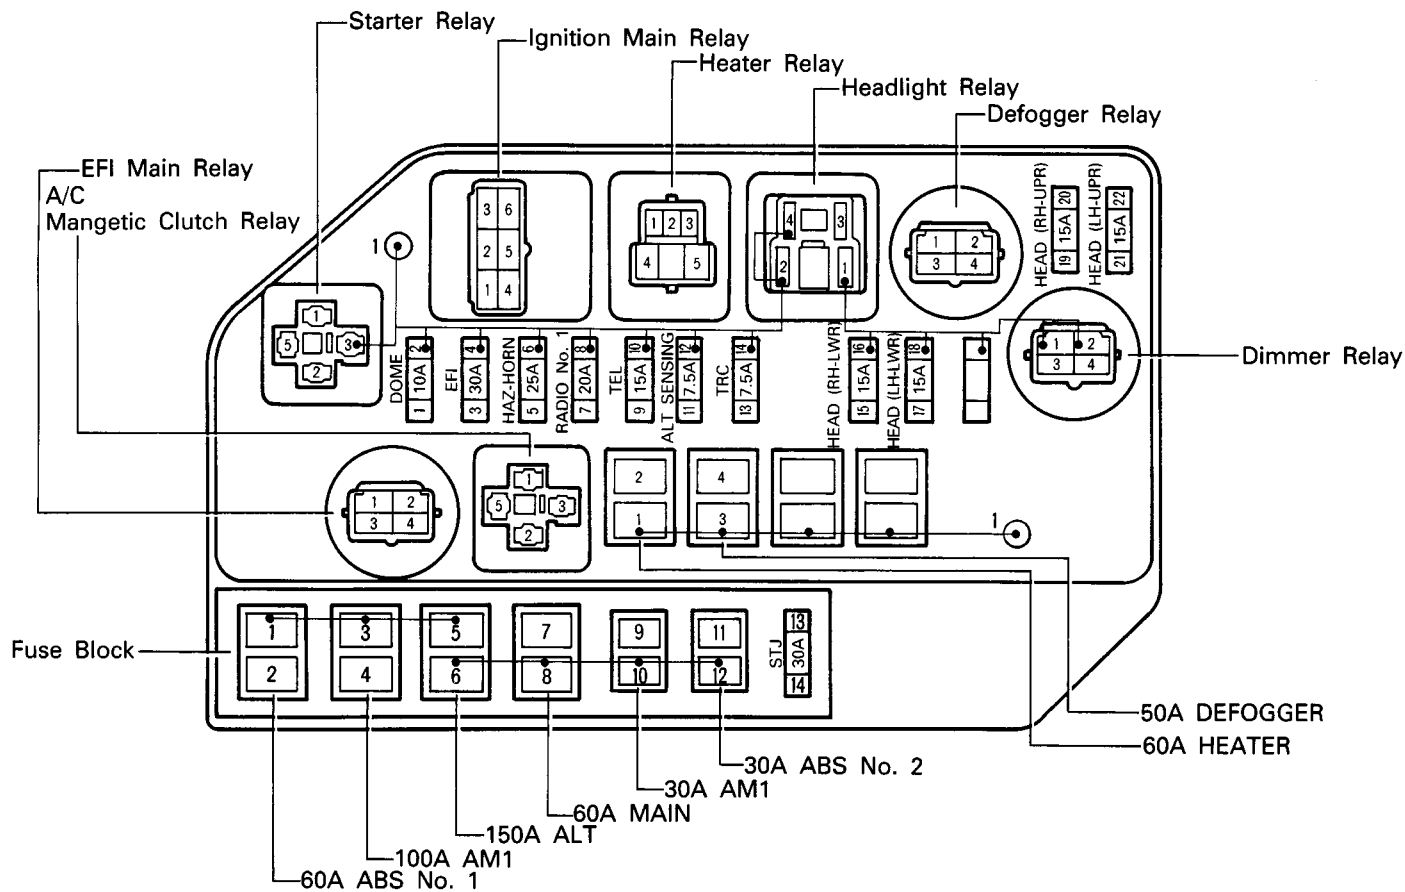


## RELAY LOCATIONS

**○ : J/B No. 1**

**Left Kick Panel** (See Page 18)

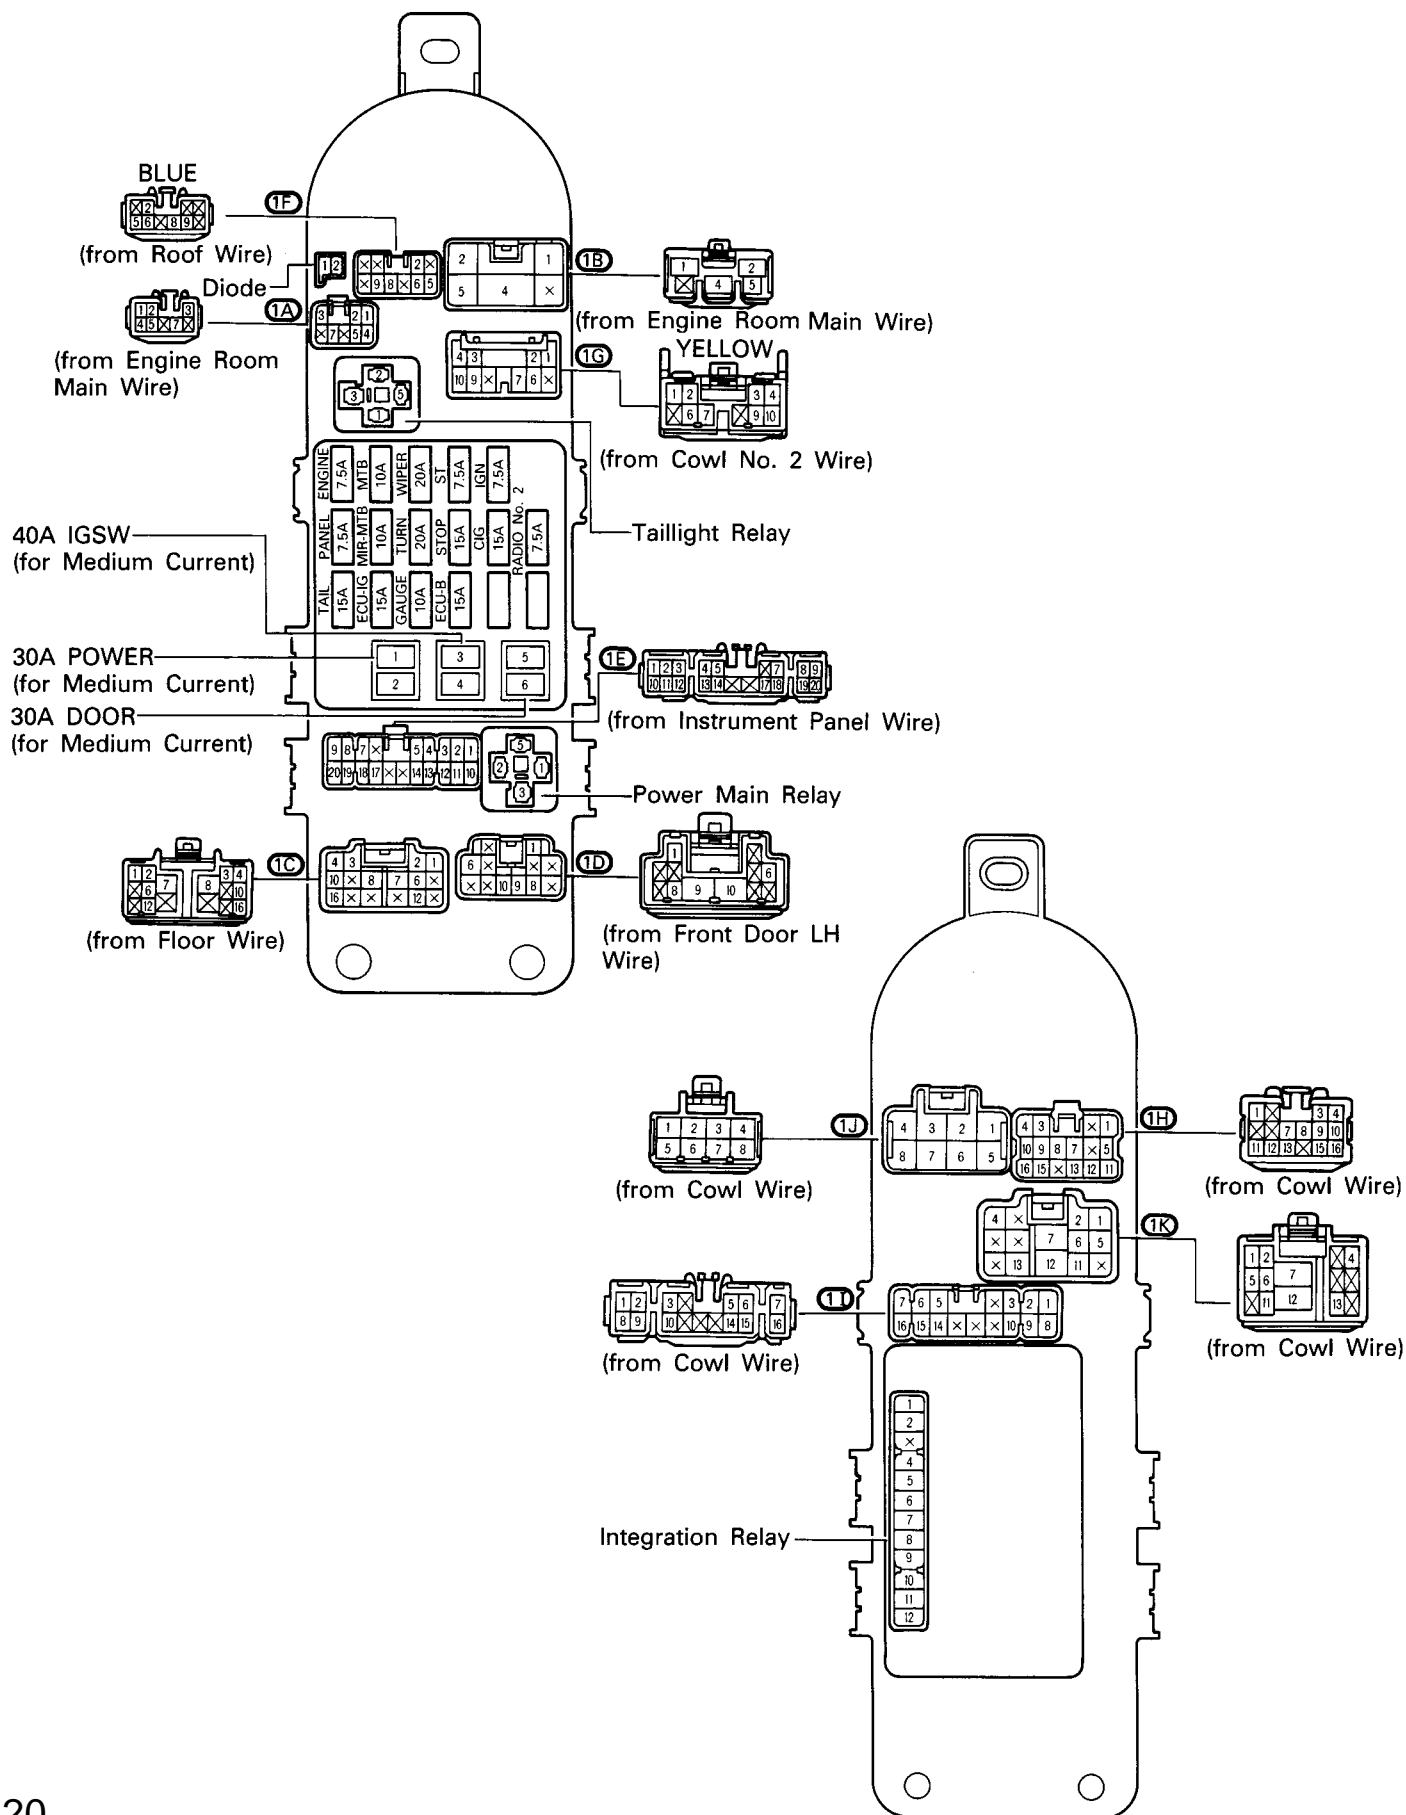


# [J/B No. 1 Inner Circuit]

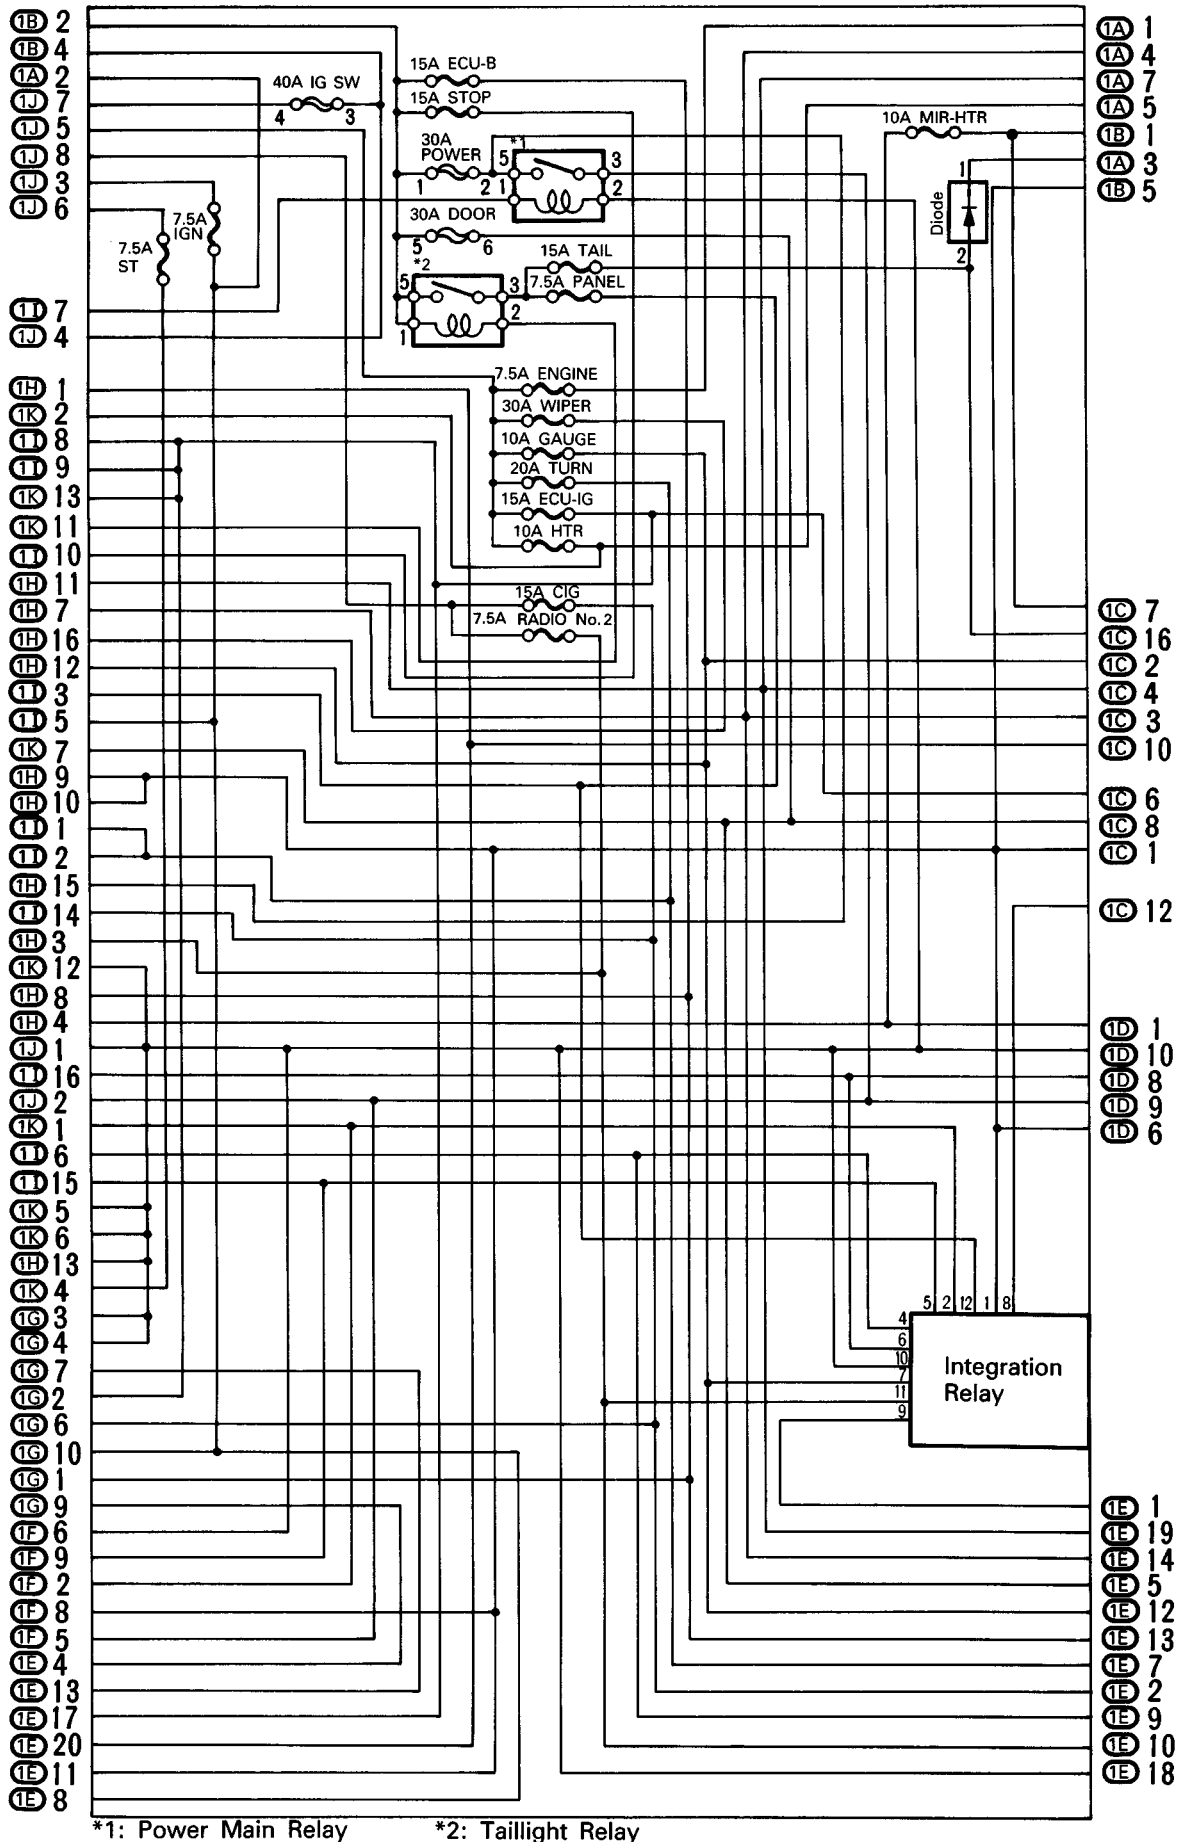


# RELAY LOCATIONS



○ : J/B No. 3      Behind the Instrument Panel Center (See Page 18)

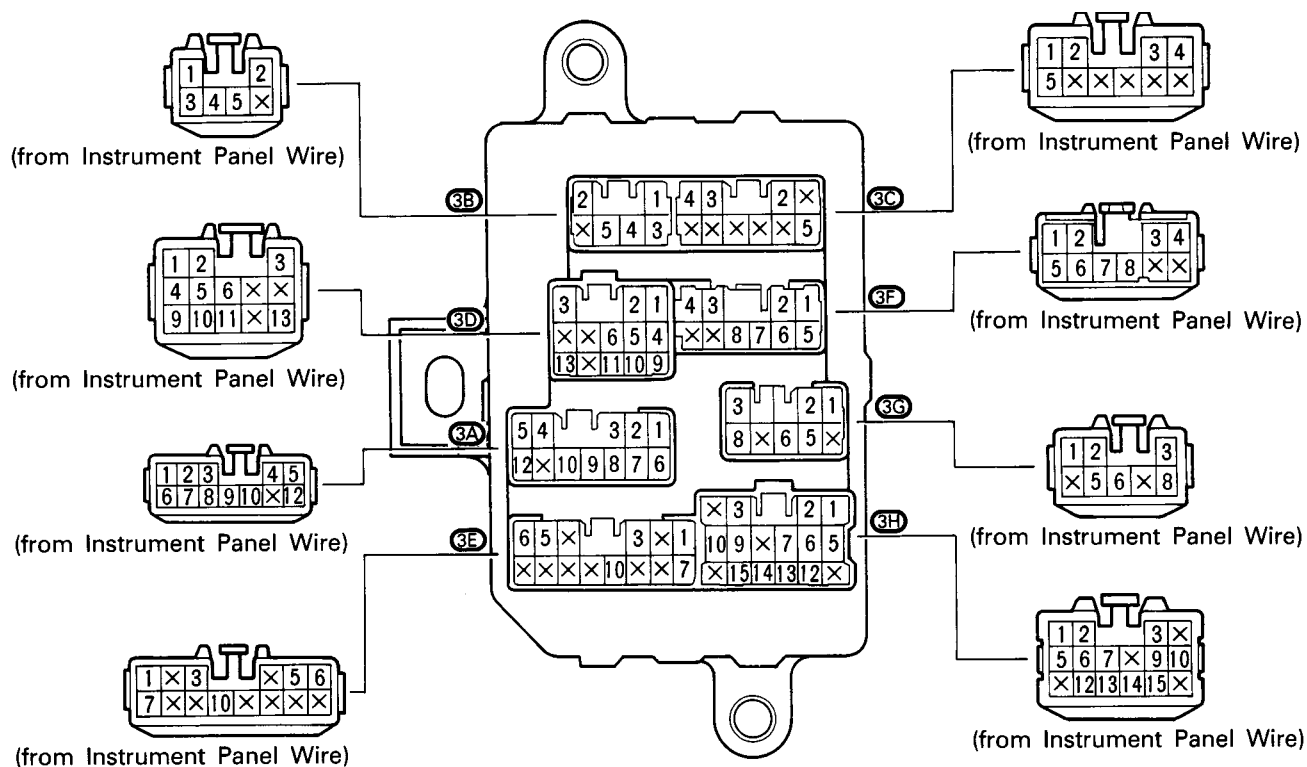

## [J/B No. 3 Inner Circuit]

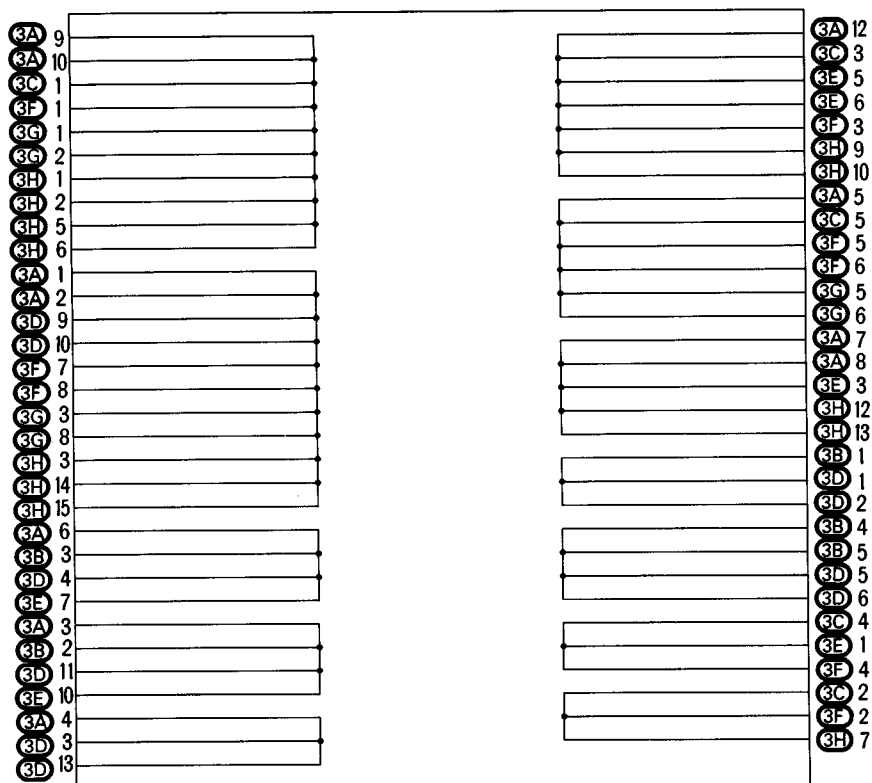

④ : R/B No. 4	Front Side of J/B No. 1 (See Page 18)
⑤ : R/B No. 5	Rear Side of J/B No. 1 (See Page 18)

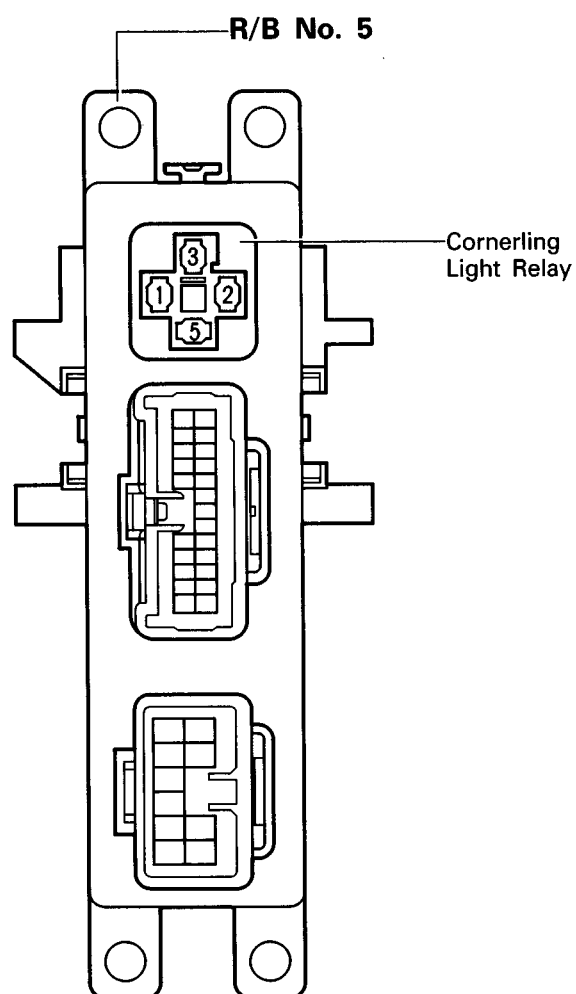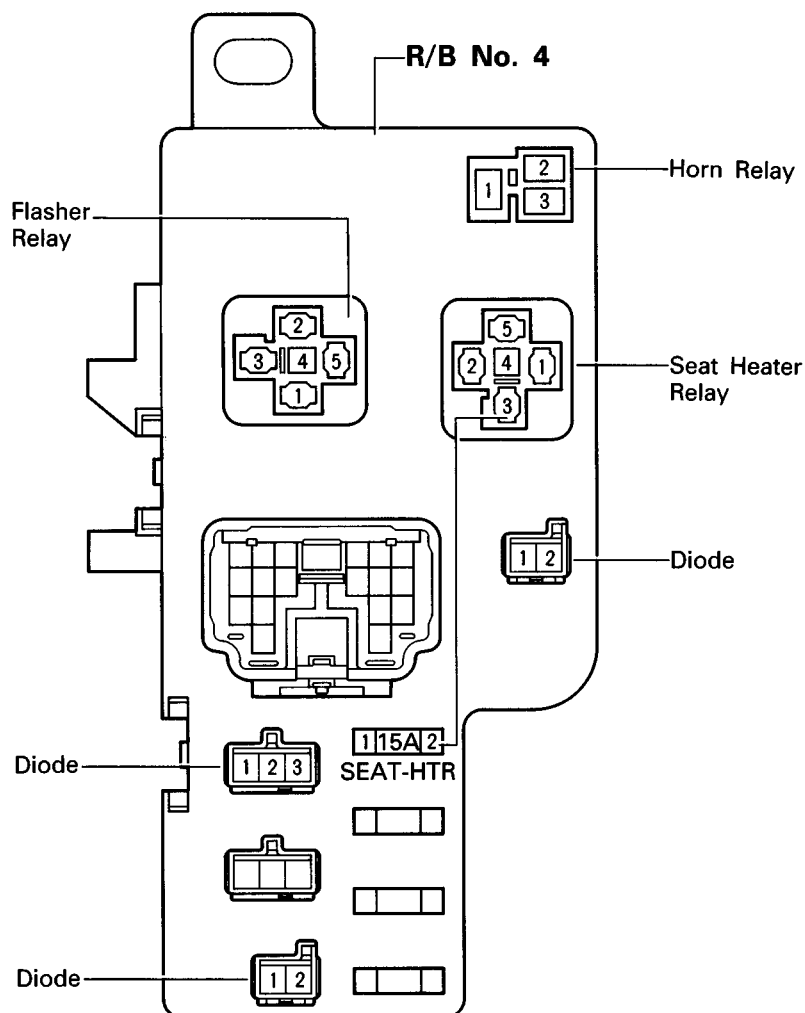

RELAY LOCATIONS

⑥ : R/B No. 6	Engine Compartment Left	(See Page 18)
---------------	-------------------------	---------------

