


# AUTO ANTENNA

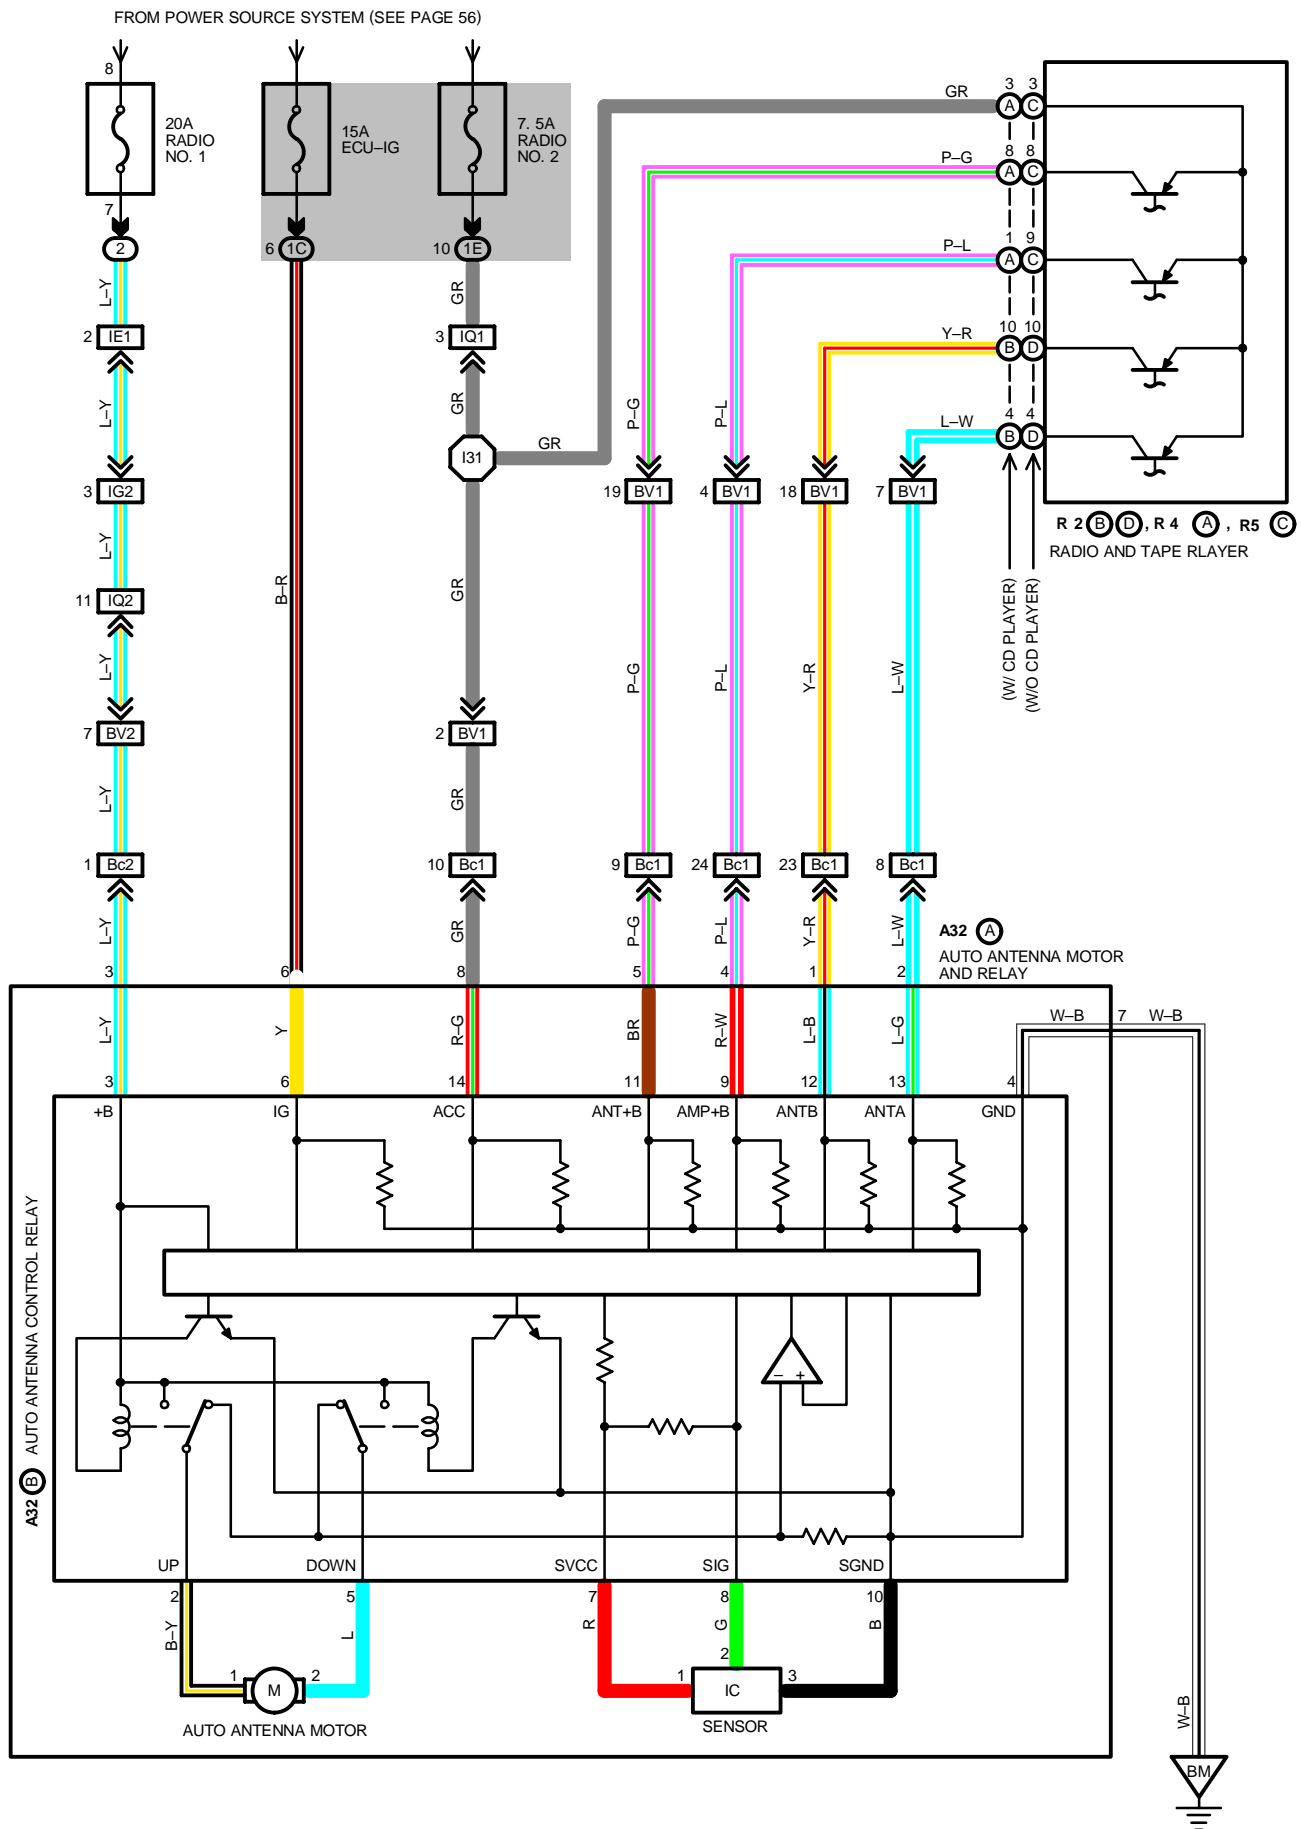

## SERVICE HINTS

### A32 AUTO ANTENNA MOTOR AND RELAY

3-GROUND : ALWAYS APPROX. 12 VOLTS

6-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

8-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

7-GROUND : ALWAYS CONTINUITY

### R 4(A), R 5(C) RADIO AND PLAYER

(A)3, (C)3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

## ○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
A32	A	30	R 2	A	29 (W/ CD PLAYER)	R 4	B	29 (W/ CD PLAYER)
	B	30		D	29 (W/O CD PLAYER)	R 5	C	29 (W/O CD PLAYER)

## ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	FLOOR WIRE
1E	20	INSTRUMENT PANEL WIRE

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IG2	36	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IQ1	38	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
IQ2		
BV1	40	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BV2		
Bc1	40	FLOOR NO. 3 WIRE AND FLOOR WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
Bc2		

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BM	40	BACK PANEL CENTER


## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I31	38	CONSOLE BOX WIRE			


A32 (A)




A32 (B)

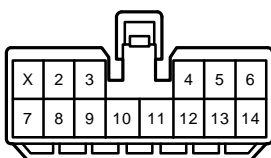


R 2 (D)

 

R 2 (B)

 

R 4 (A)

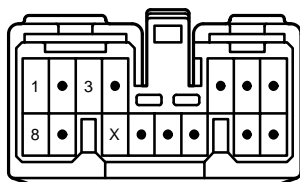

R 5 (C)

