



204

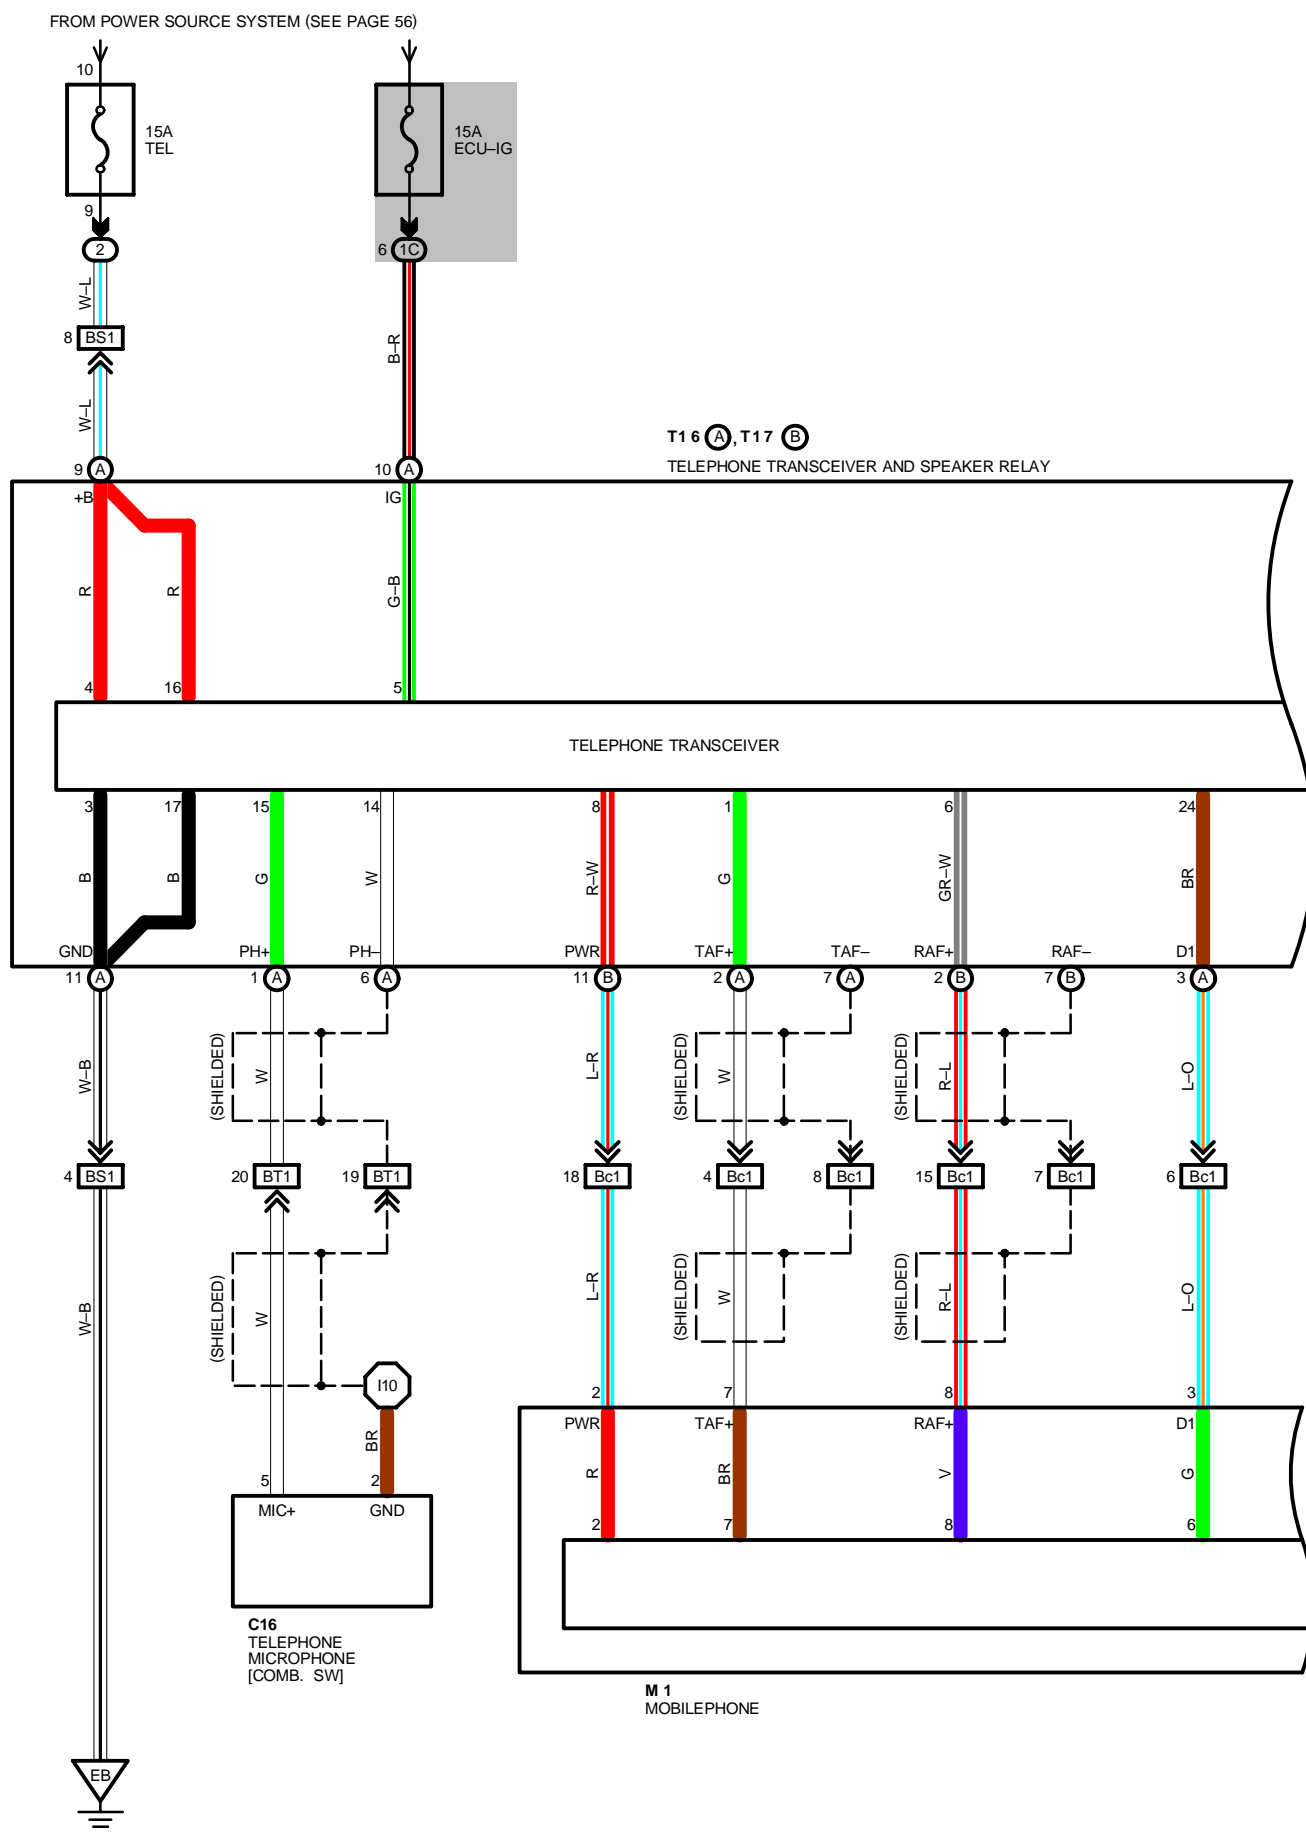

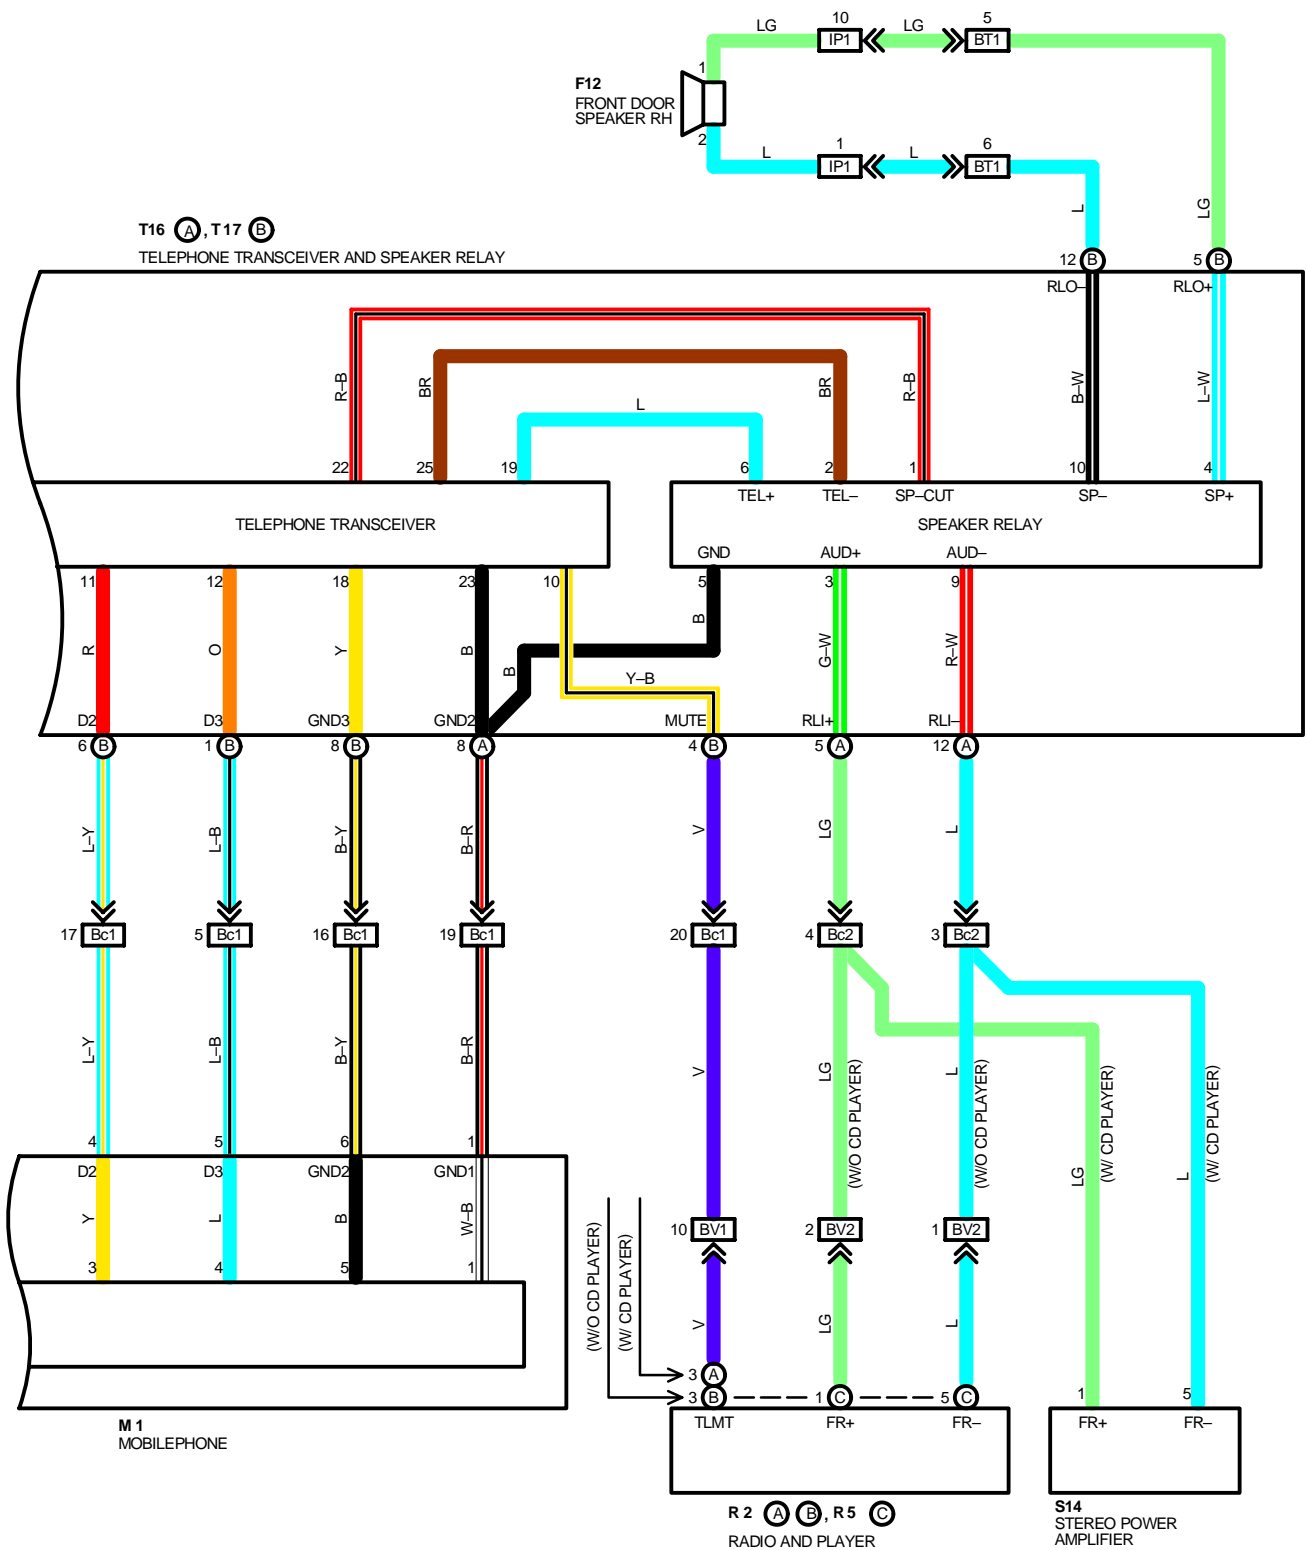

CELLULAR MOBILE TELEPHONE

SERVICE HINTS

T16 (A) TELEPHONE TRANSCEIVER AND SPEAKER RELAY

- (A) 9-GROUND : ALWAYS APPROX. 12 VOLTS
- (A) 10-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ACC OR ON POSITION
- (A) 11-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	28	R 2	B 29 (W/ CD PLAYER)	S14	31
F12	30	R 4	A 29 (W/O CD PLAYER)	T16	A 31
M 1	31	R 5	C 29 (W/O CD PLAYER)	T17	B 31

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	FLOOR WIRE

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IP1	38	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BS1	40	ENGINE ROOM MAIN WIRE AND FLOOR WIRE (LEFT KICK PANEL)
BT1	40	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
BV1	40	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BV2	40	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
Bc1	40	FLOOR NO. 3 WIRE AND COWL WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
Bc2	40	FLOOR NO. 3 WIRE AND COWL WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	34	FRONT SIDE OF LEFT FENDER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I10	38	COWL WIRE			

