


CORNERING LIGHT

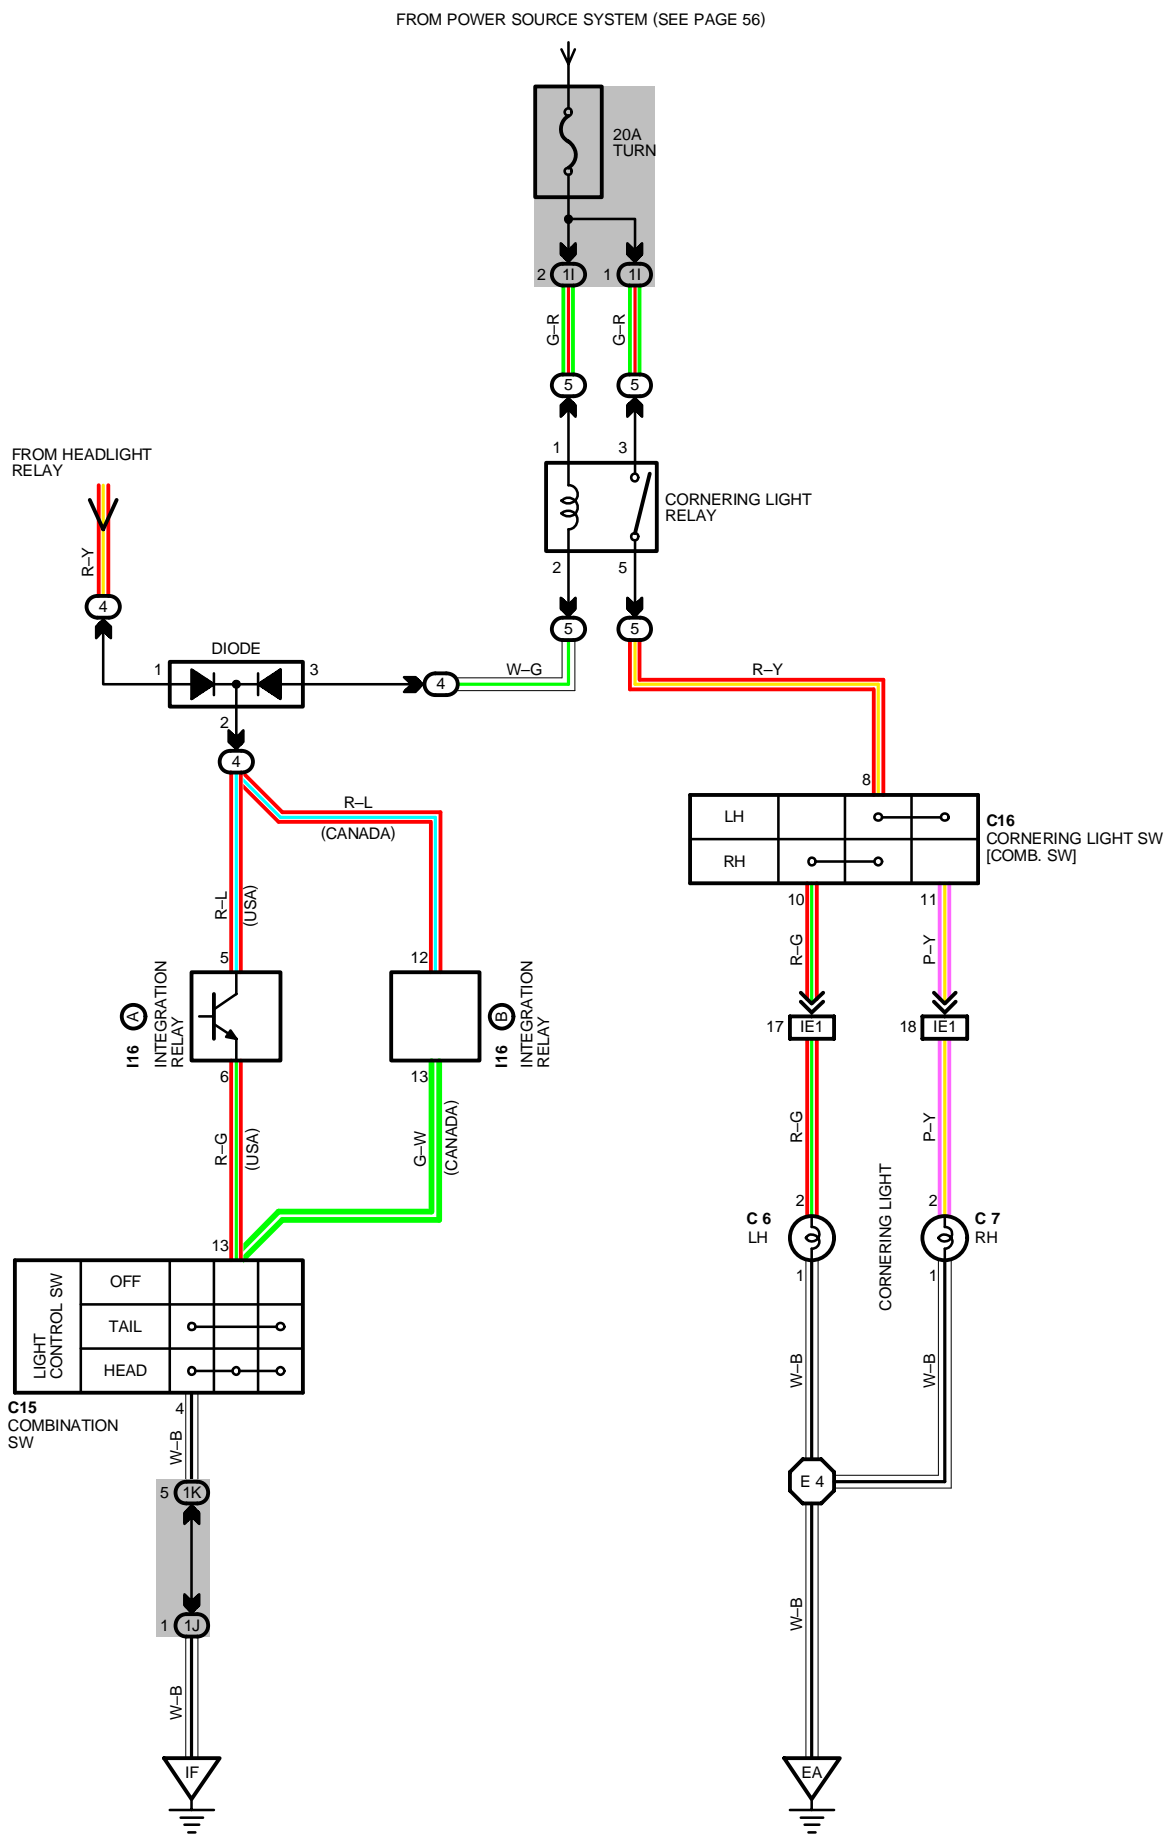

SERVICE HINTS

CORNERING LIGHT RELAY

3-5 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

C15 LIGHT CONTROL SW [COMB. SW]

13-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

C16 CORNERING LIGHT SW [COMB. SW]

8-11 : CLOSED WITH TURN SIGNAL LEVER AT **LEFT** POSITION

8-10 : CLOSED WITH TURN SIGNAL LEVER AT **RIGHT** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 6	26	C15	28	I16	A 29 (USA)
C 7	26	C16	28		B 29 (CANADA)

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
4	23	LEFT KICK PANEL (J/B NO.1 LEFT)
5	23	LEFT KICK PANEL (J/B NO.1 RIGHT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1I	20	COWL WIRE
1J		
1K		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE WIRE AND COWL WIRE (R/B NO. 4)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	FRONT SIDE OF RIGHT FENDER
IF	36	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 4	34	ENGINE ROOM MAIN WIRE			


C 6, C 7 GRAY

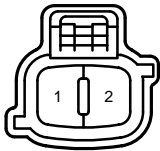

C15

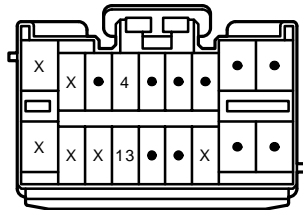

C16 BLACK

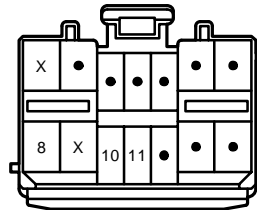

(USA) **I16** (A)



(CANADA) **I16** (B)

