


# HEADLIGHT (FOR USA)

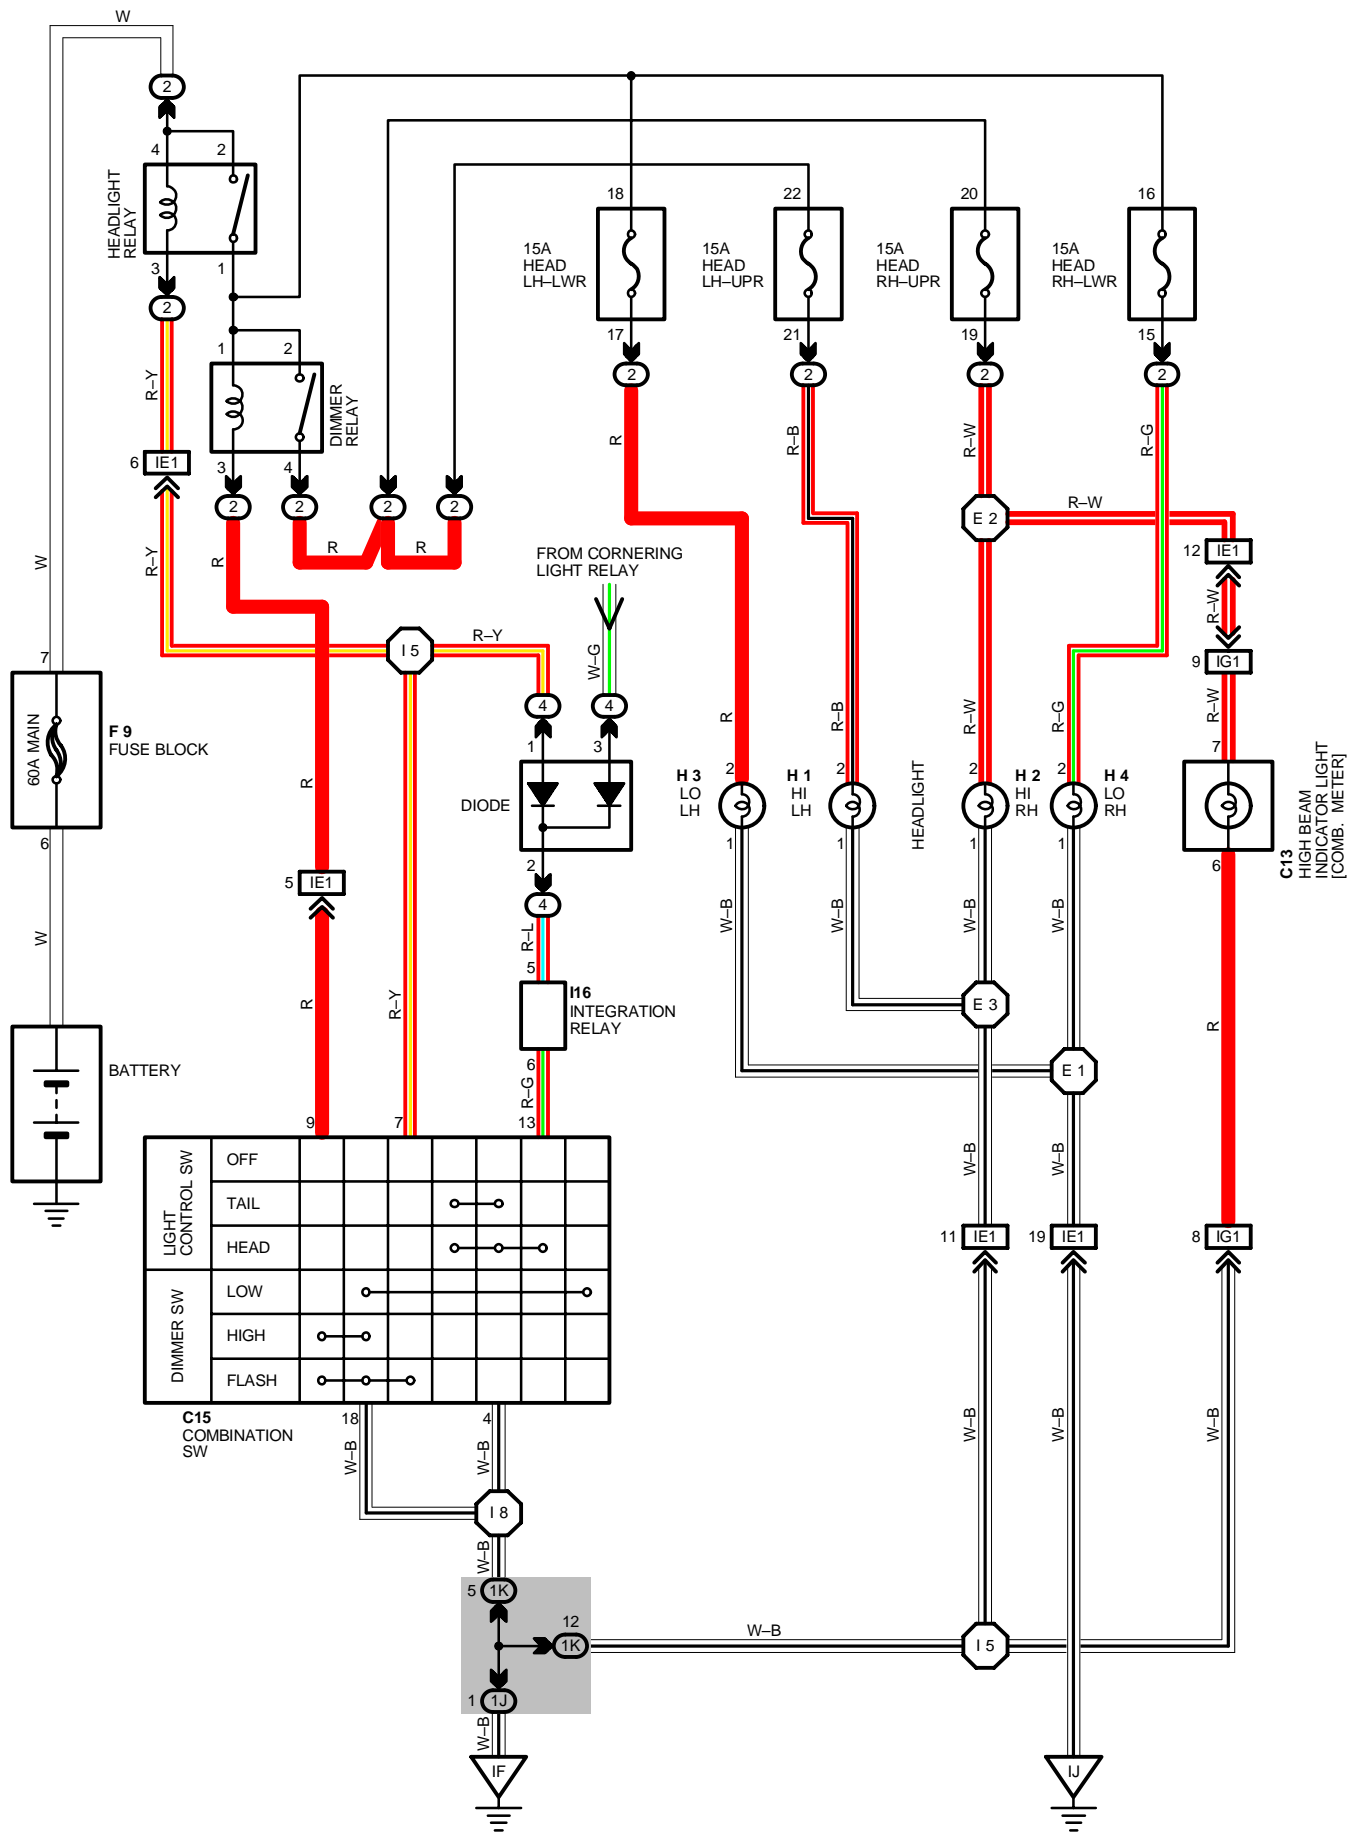

## SERVICE HINTS

### HEADLIGHT RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

#### C15 LIGHT CONTROL SW [COMB. SW]

13-4: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

#### C15 DIMMER SW [COMB. SW]

7-18: CLOSED WITH DIMMER SW AT **FLASH** POSITION

9-18: CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
<b>C13</b>	<a href="#">28</a>	<b>H 1</b>	<a href="#">26</a>	<b>H 4</b>	<a href="#">26</a>
<b>C15</b>	<a href="#">28</a>	<b>H 2</b>	<a href="#">26</a>	<b>I16</b>	<a href="#">29</a>
<b>F 9</b>	<a href="#">26</a>	<b>H 3</b>	<a href="#">26</a>		

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
<b>2</b>	<a href="#">19</a>	ENGINE COMPARTMENT LEFT
<b>4</b>	<a href="#">22</a>	LEFT KICK PANEL (J/B NO.1 LEFT)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
<b>1J</b>	<a href="#">20</a>	COWL WIRE
<b>1K</b>		

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
<b>IE1</b>	<a href="#">36</a>	ENGINE WIRE AND COWL WIRE (R/B NO. 4)
<b>IG1</b>	<a href="#">36</a>	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)


### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
<b>IF</b>	<a href="#">36</a>	LEFT KICK PANEL
<b>IJ</b>	<a href="#">36</a>	RIGHT KICK PANEL


### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
<b>E 1</b>	<a href="#">34</a>	ENGINE ROOM MAIN WIRE	<b>I 5</b>	<a href="#">38</a>	COWL WIRE
<b>E 2</b>			<b>I 8</b>		
<b>E 3</b>					


C13

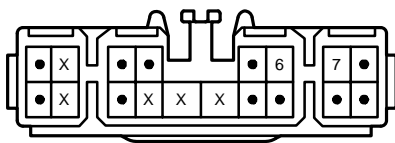

C15

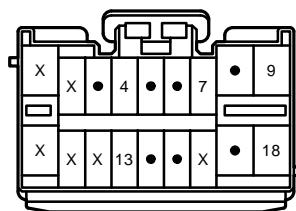

F 9 BLACK

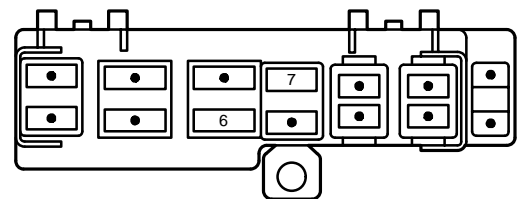

H 1, H 2 BLACK



H 3, H 4 BROWN



I16

