





ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

5-3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

C15 LIGHT CONTROL SW [COMB. SW]

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A13	28	E 8	28	R 4	A 29
A15	28	F 9	26	R 5	B 29
A21	28	G 1	28	R 6	C 29
C11	28	G 2	28	R 9	29
C12	A 28	H 7	29	T12	29
C14	B 28	I16	A 29	T15	29
C15	28		B 29		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE
1E	20	INSTRUMENT PANEL WIRE
1I	20	COWL WIRE
1J		
1K		
3A	23	INSTRUMENT PANEL WIRE
3C		
3E		
3F		
3G		
3H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	36	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO.5)
IQ1	38	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	36	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I10	38	COWL WIRE	I29	38	CONSOLE BOX WIRE


A13

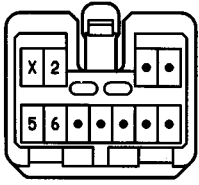


A15

 


A21

 


C11 BLUE

 


C12 (A)

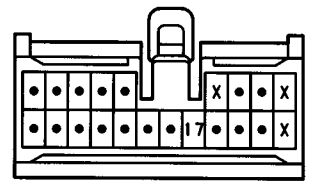


C14 (B)

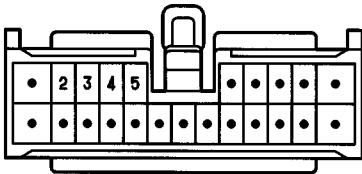


C15

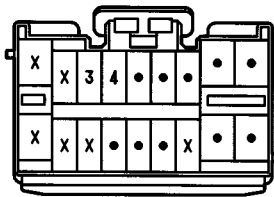

E 8

 

F 9 BLACK

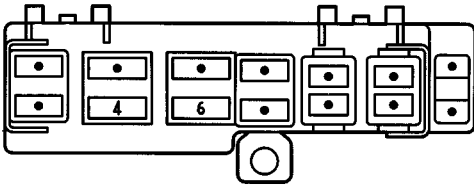


G 1 GRAY




G 2 BLACK



 
H 7 BLACK (USA) I16 (A)




(CANADA) I16 (B)

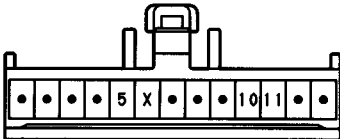


R 4 (A)

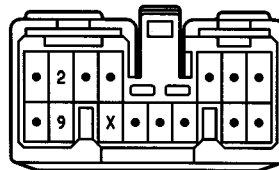

R 5 (B)

 


R 6 (C)

 

R 9



T12

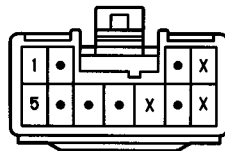

T15

