



POWER SOURCE

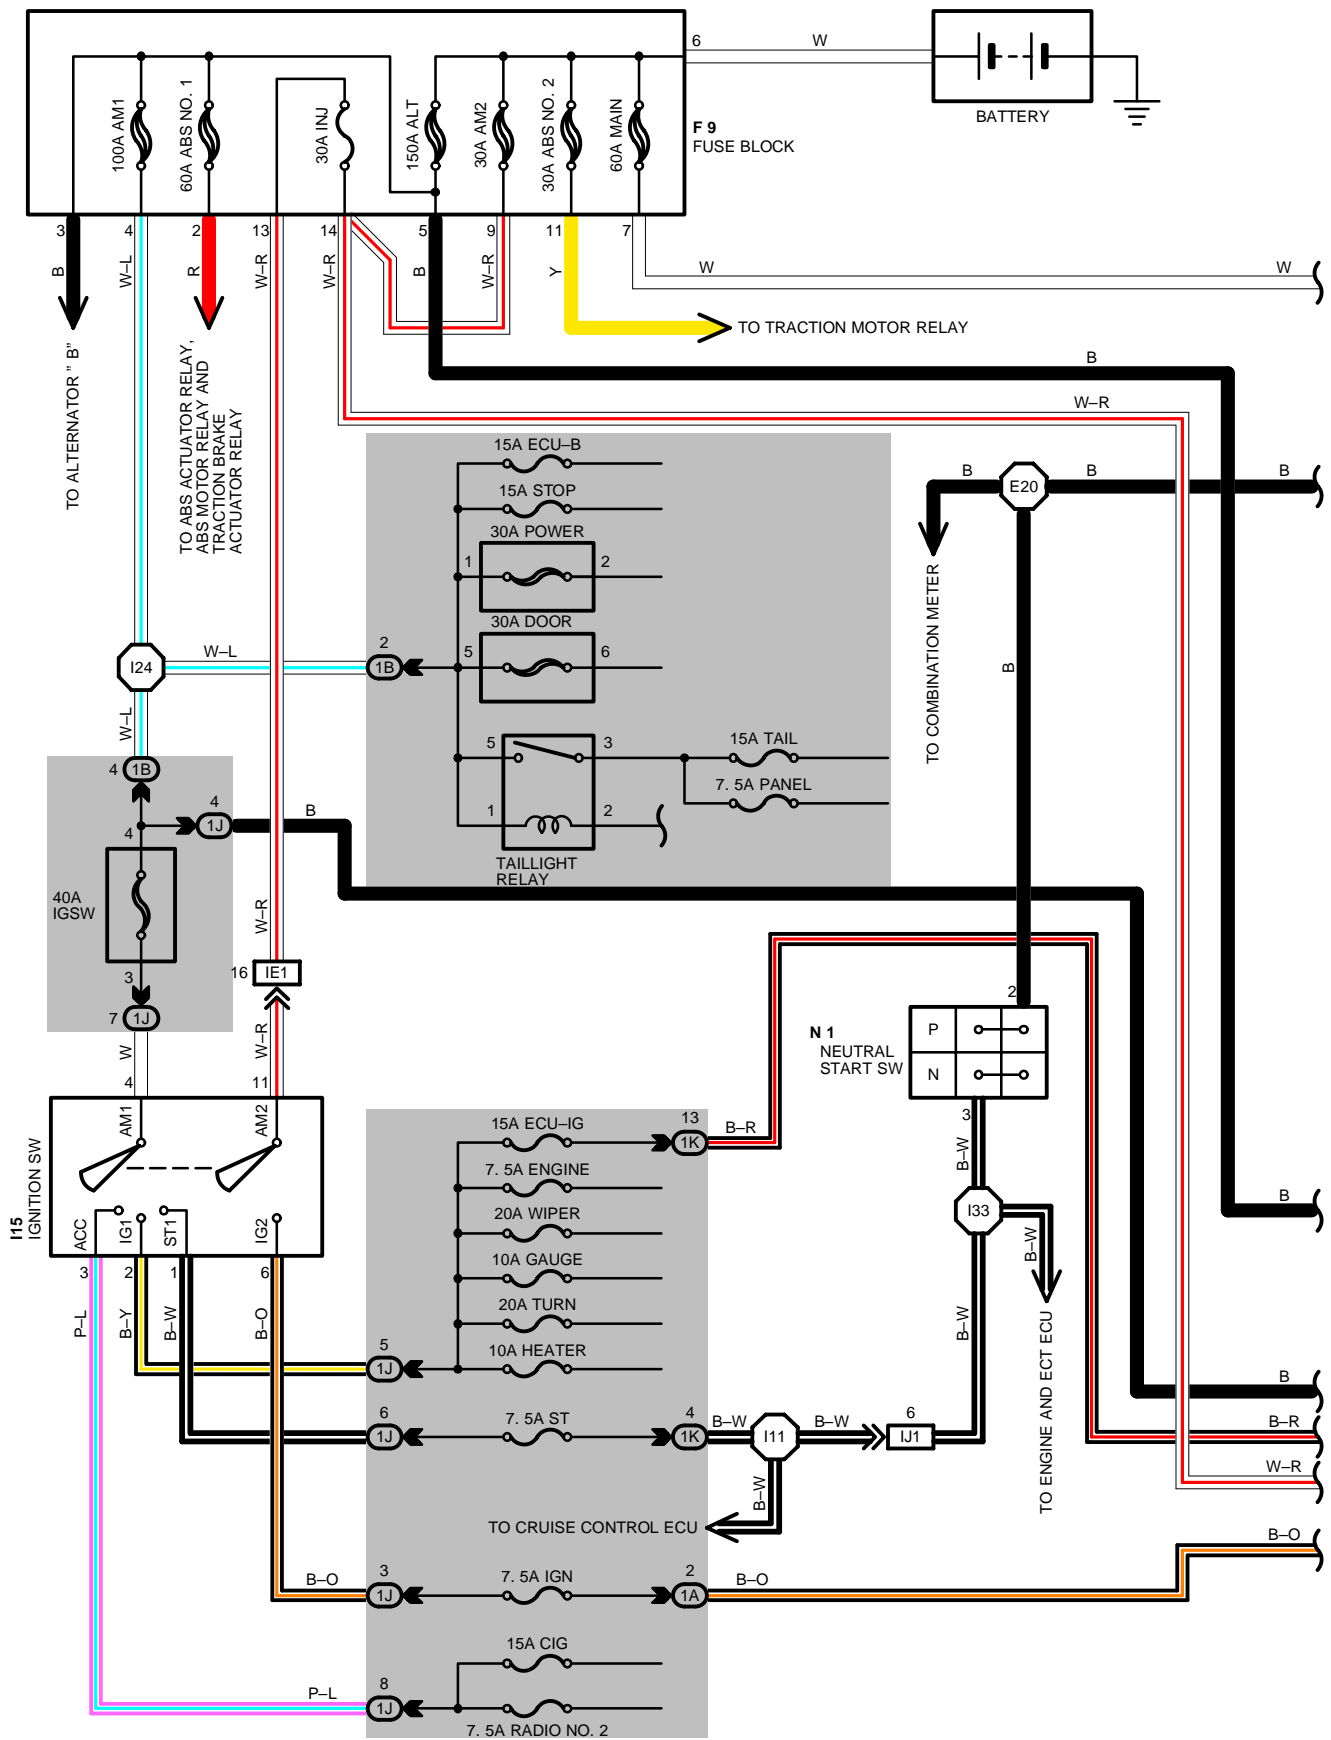

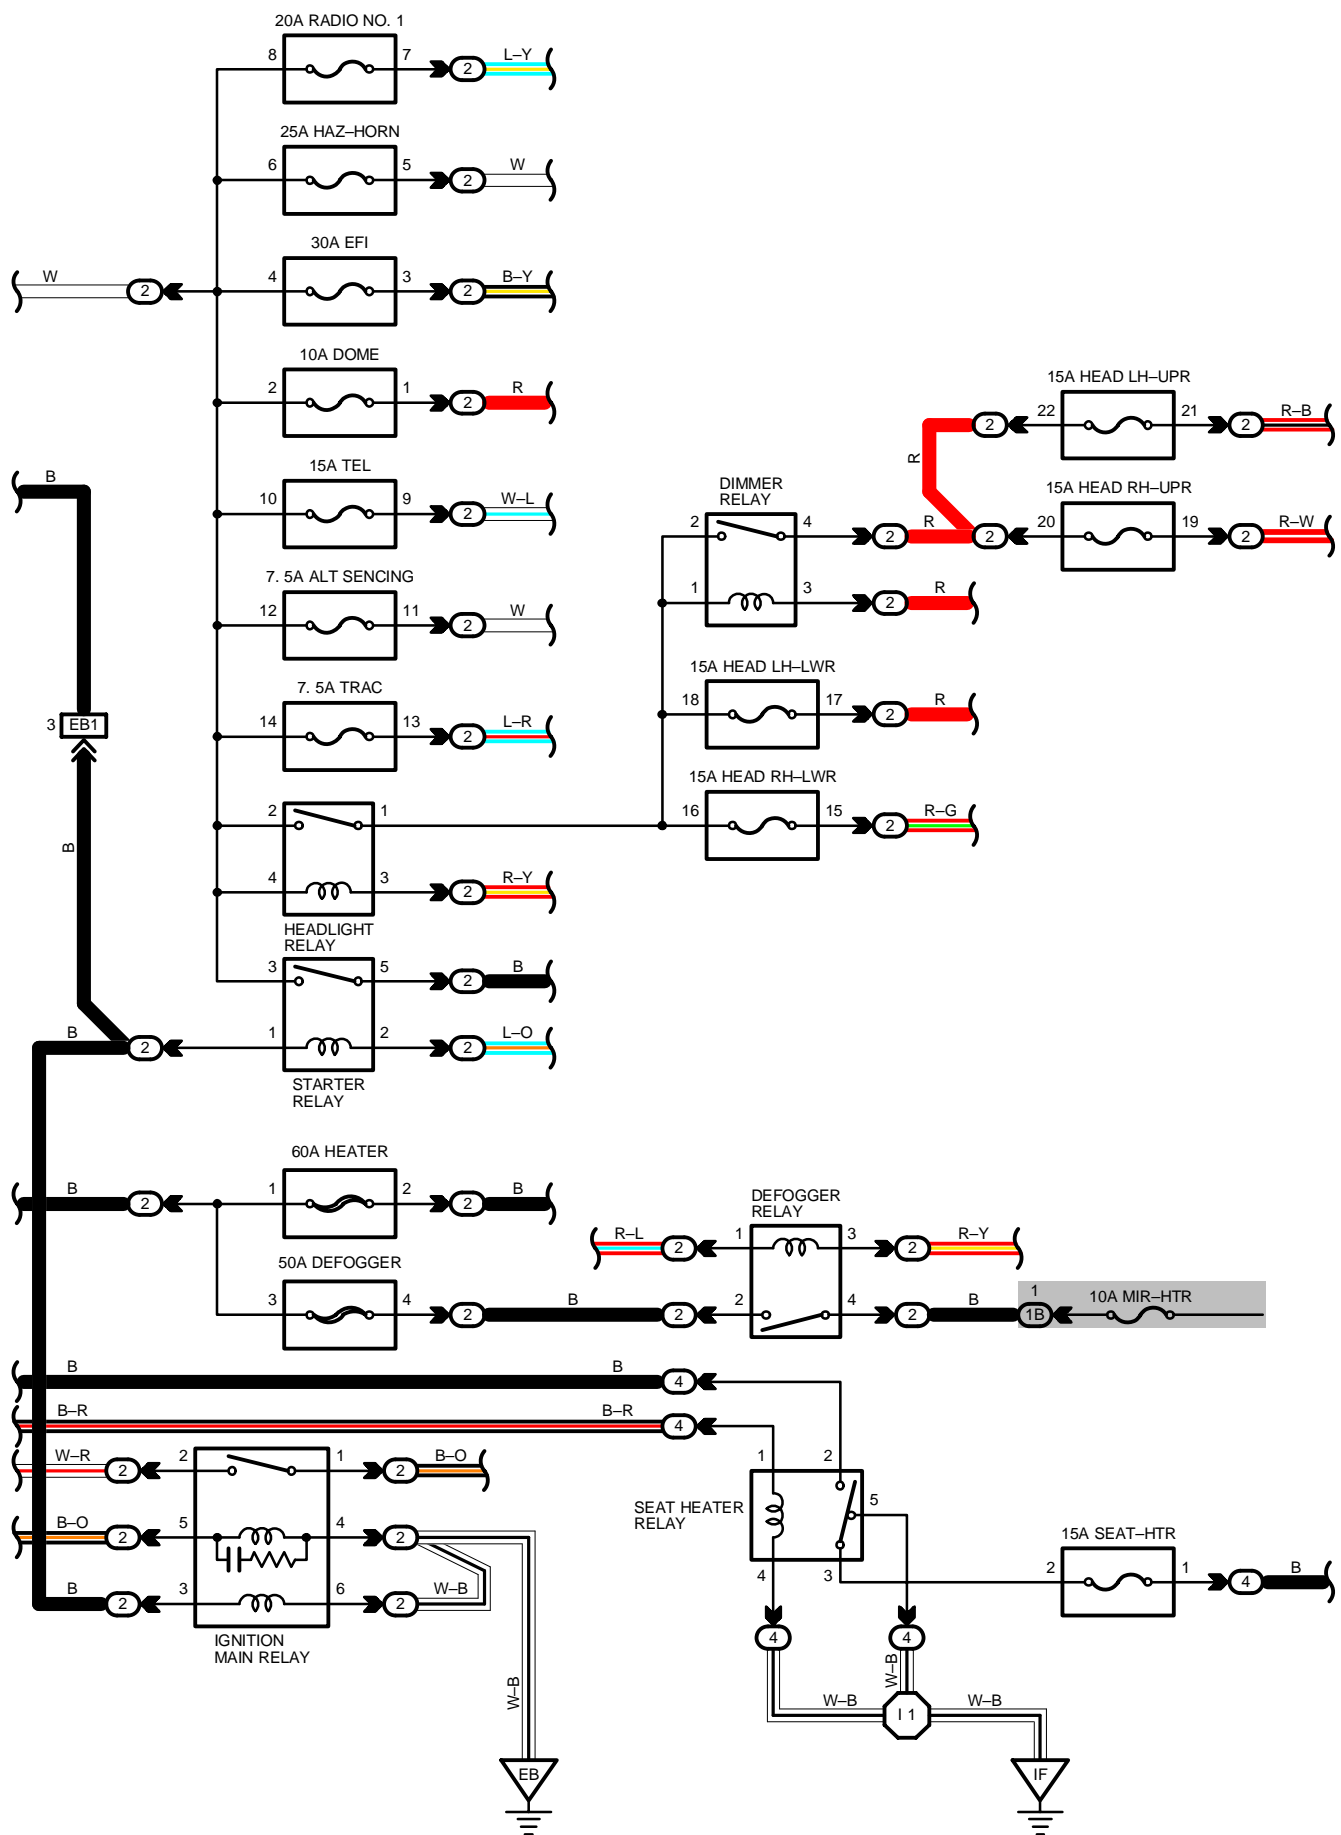

POWER SOURCE

SERVICE HINTS

HEADLIGHT RELAY (FOR USA)

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

HEADLIGHT RELAY (FOR CANADA)

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION
: CLOSED WITH ENGINE RUNNING AND PARKING BRAKE PEDAL RELEASED (PARKING BRAKE SW OFF)

TAILLIGHT RELAY (FOR USA)

5-3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

TAILLIGHT RELAY (FOR CANADA)

5-3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
: CLOSED WITH ENGINE RUNNING AND PARKING BRAKE PEDAL RELEASED (PARKING BRAKE SW OFF)

IGNITION MAIN RELAY

2-1 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION

I15 IGNITION SW

4-3 : CLOSED WITH IGNITION KEY AT **ACC** OR **ON** POSITION
4-2 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION
11-6 : CLOSED WITH IGNITION KEY AT **ON** OR **ST** POSITION
4-1 : CLOSED WITH IGNITION KEY AT **ST** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F 9	26	I15	29	N 1	27

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT
4	22	LEFT KICK PANEL (J/B NO.1 LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	ENGINE ROOM MAIN WIRE
1B		
1J	20	COWL WIRE
1K		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	34	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO. 2)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IJ1	36	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	34	FRONT SIDE OF LEFT FENDER
IF	36	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E20	34	ENGINE WIRE	I24	38	ENGINE ROOM MAIN WIRE
I 1	38	COWL WIRE	I33	38	ENGINE WIRE
I 11					

