



RADIO AND PLAYER (w/o CD PLAYER)

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

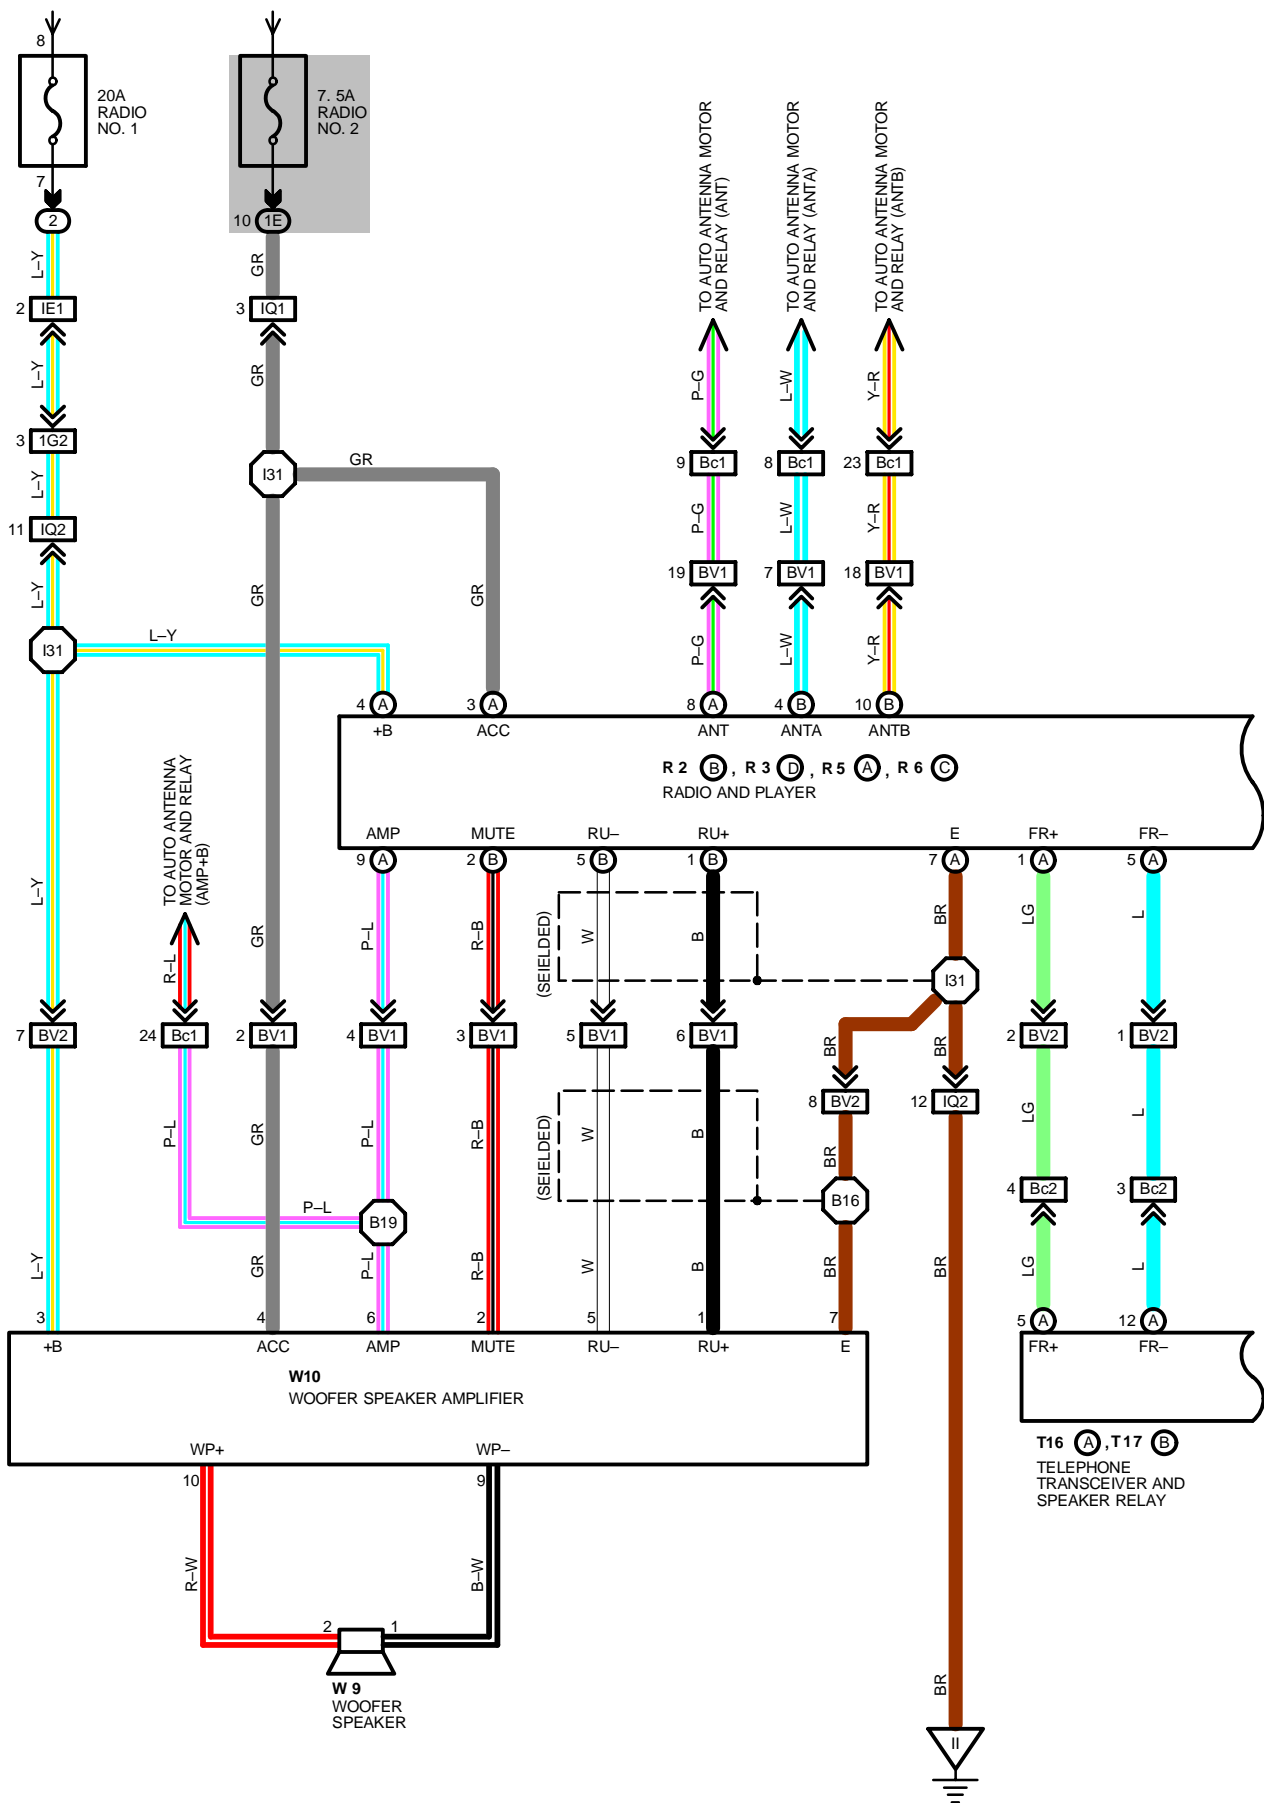

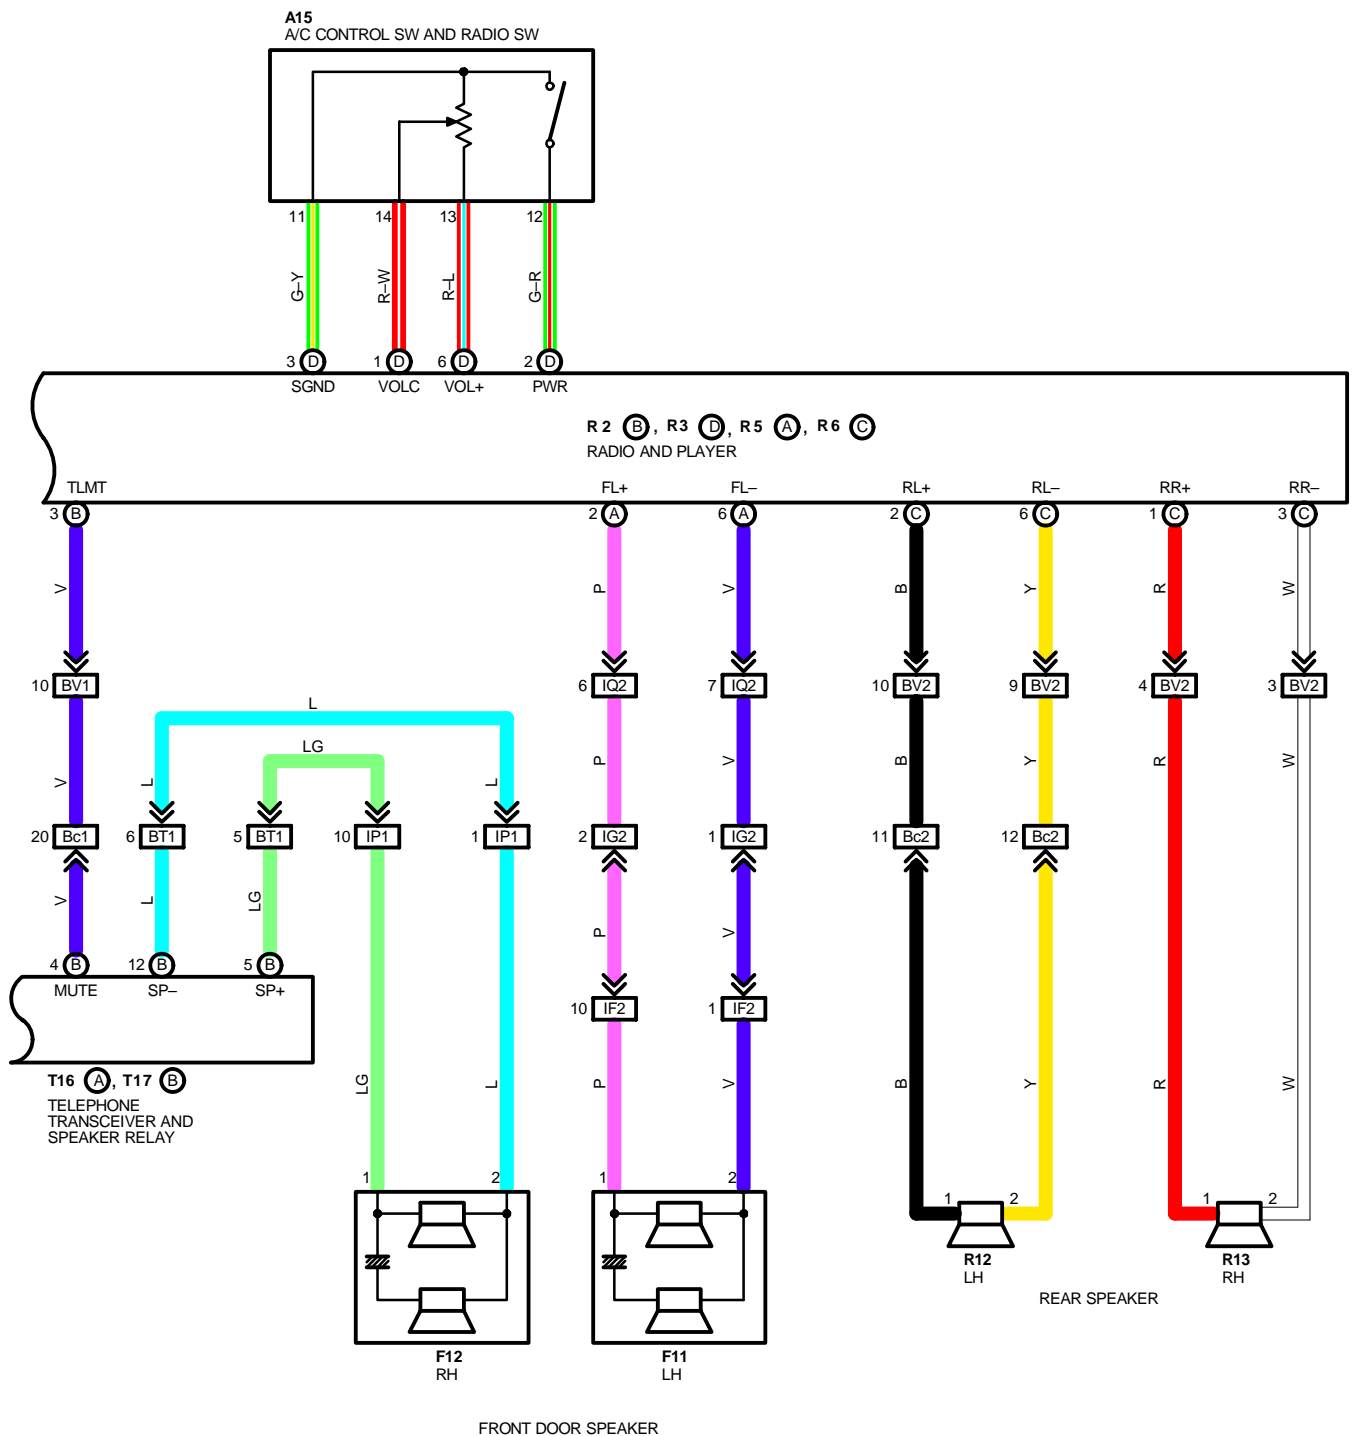

RADIO AND PLAYER (w/o CD PLAYER)

SERVICE HINTS

R 5(A) RADIO AND PLAYER

- (A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ACC OR ON POSITION
 (A) 4-GROUND : ALWAYS APPROX. 12 VOLTS
 (A) 7-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A15	28	R 5	A 29	T17	B 31
F11	30	R 6	D 29	W 9	31
F12	30	R12	31	W10	31
R 2	B 29	R13	31		
R 3	D 29	T16	A 31		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	INSTRUMENT PANEL WIRE

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IF2	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IG2	36	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IP1	38	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	38	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
IQ2		
BT1	40	FLOOR WIRE AND COWL WIRE (LEFT KICK PANEL)
BU1	40	INSTRUMENT PANEL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
BV1	40	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BV2		
Bc1	40	FLOOR NO. 3 WIRE AND FLOOR WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
Bc2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
II	36	UNDER THE ASHTRAY RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I31	38	CONSOLE BOX WIRE	B19	40	FLOOR NO. 3 WIRE
B16	40	FLOOR NO. 3 WIRE			

 
A15



F11, F12, W 9



 
R 2 ⑥



R 3 ①



R 5 ①

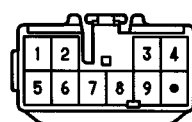


R 6 ①




R12, R13



T16 ①

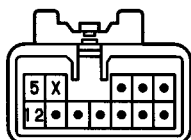

T17 ⑥

 

W10

