


REAR WINDOW DEFOGGER AND MIRROR HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 56)

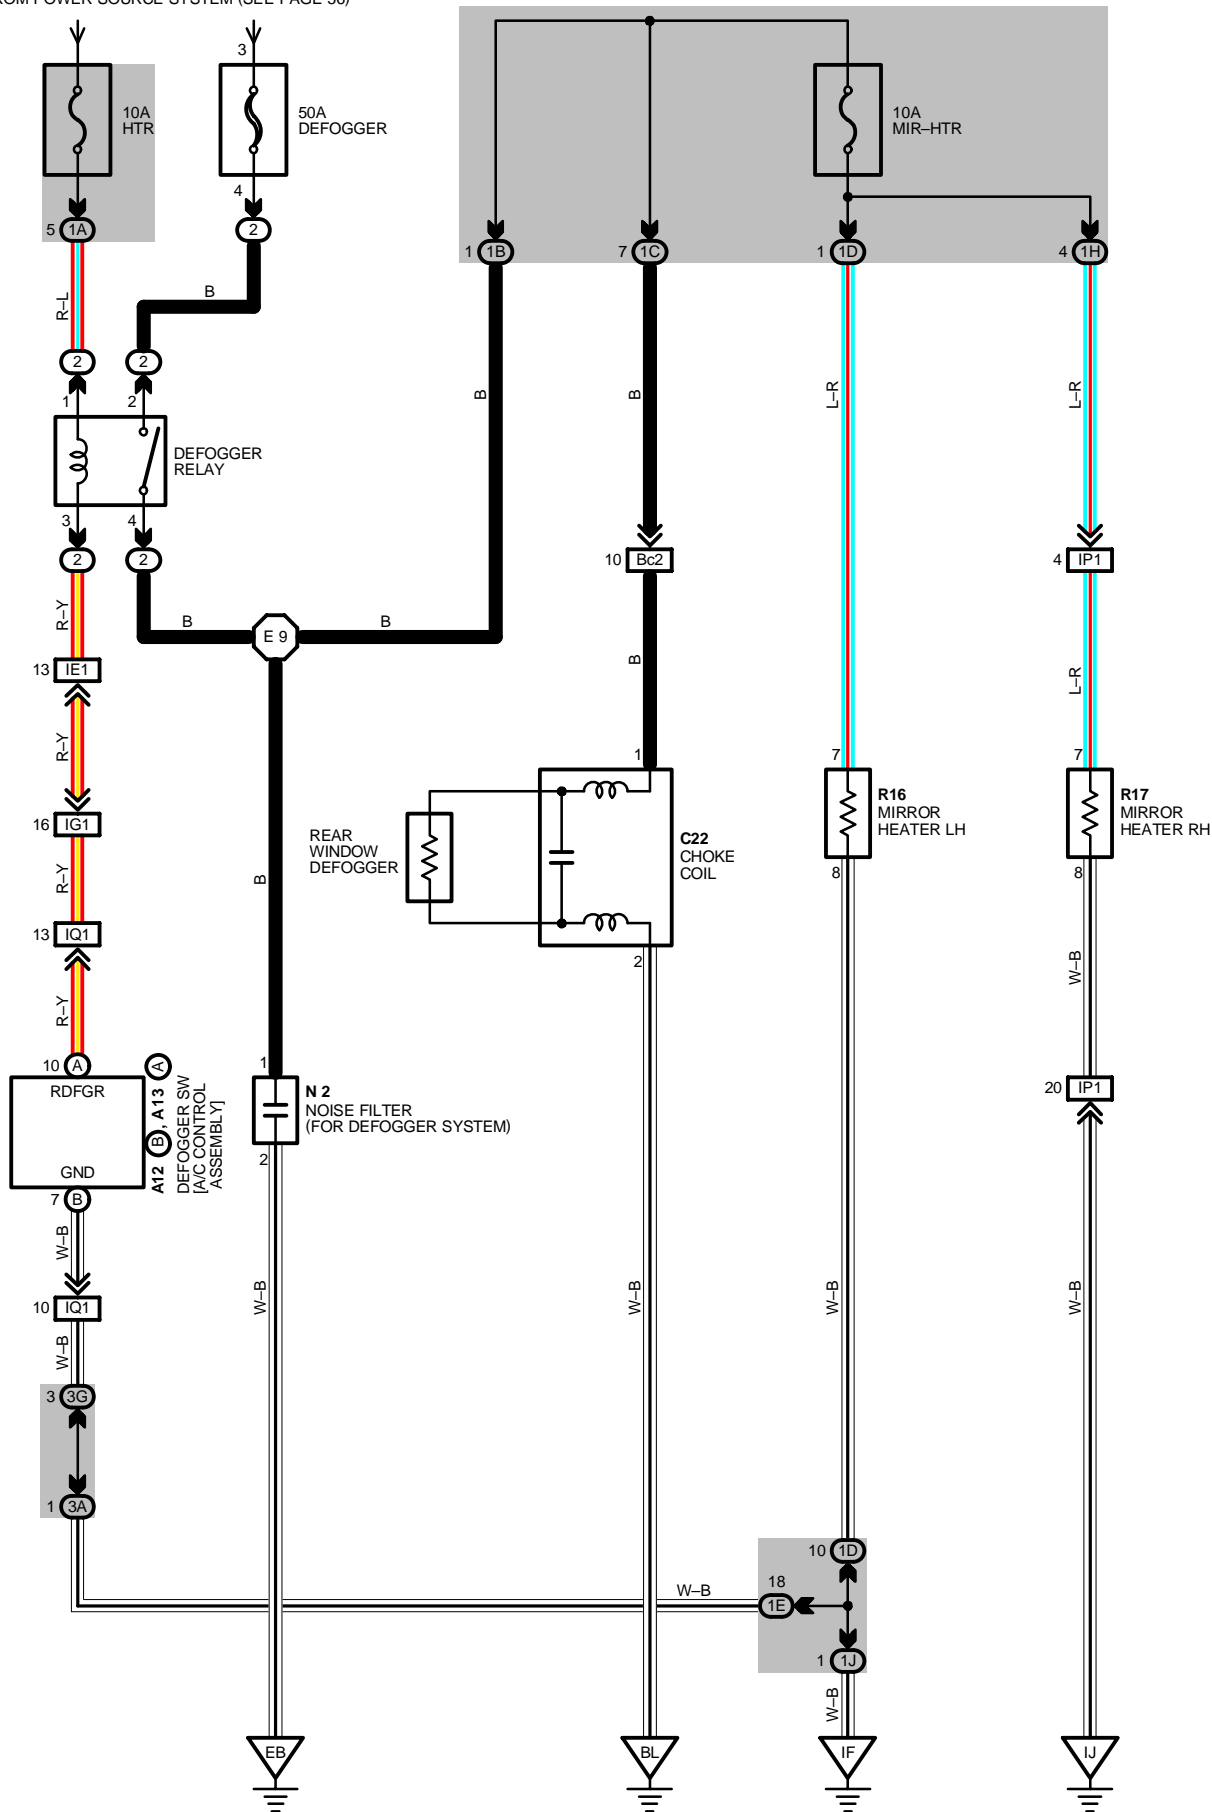

SERVICE HINTS

DEFOGGER RELAY

2-4 : CLOSED WITH IGNITION SW AT **ON** POSITION AND DEFOGGER SW (A/C CONTROL ASSEMBLY) ON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A12	B 28	C22	30	R16	31
A13	A 28	N 2	27	R17	31

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	ENGINE ROOM MAIN WIRE
1B		
1C		
1D		
1E	20	FLOOR WIRE
1H	20	FRONT DOOR LH WIRE
1J		
3A		
3G	23	INSTRUMENT PANEL WIRE

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IG1	36	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IP1	38	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	38	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
Bc2	40	FLOOR NO. 3 WIRE AND FLOOR WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	34	FRONT SIDE OF LEFT FENDER
IF	36	LEFT KICK PANEL
IJ	36	RIGHT KICK PANEL
BL	40	UNDER THE CENTER PILLAR RH

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 9	34	ENGINE ROOM MAIN WIRE			

