


TURN SIGNAL AND HAZARD WARNING LIGHT

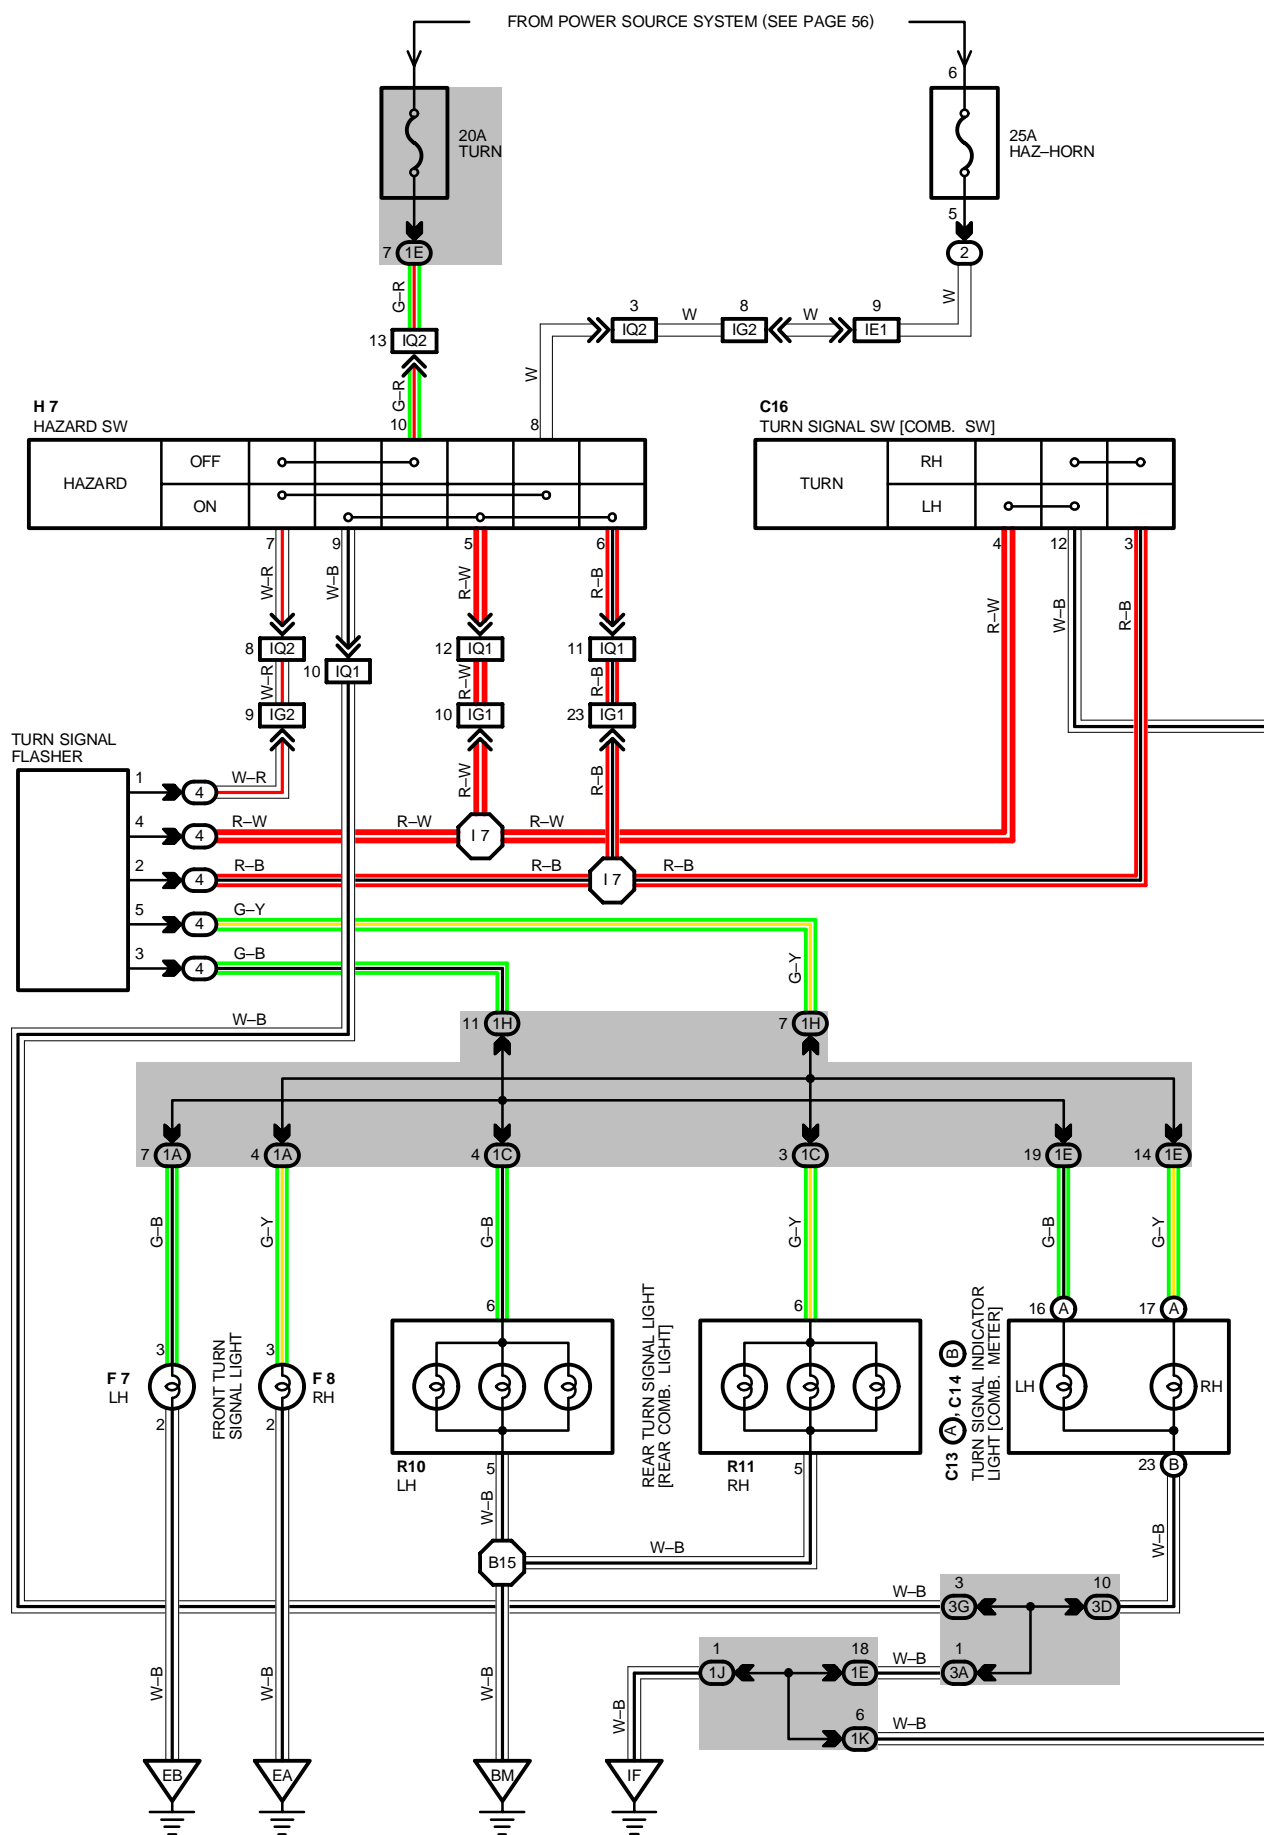

SERVICE HINTS

TURN SIGNAL FLASHER

- (4) 3-GROUND: CHANGES FROM APPROX. 12 VOLTS TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT, OR WITH HAZARD SW ON
- (4) 5-GROUND: CHANGES FROM APPROX. 12 VOLTS TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW RIGHT, OR WITH HAZARD SW ON
- (4) 4-GROUND: CONTINUITY WITH TURN SIGNAL SW LEFT, OR HAZARD SW ON
- (4) 2-GROUND: CONTINUITY WITH TURN SIGNAL SW RIGHT, OR HAZARD SW ON
- (4) 1-GROUND: APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON

: PARTS LOCATION

CODE		SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	A	28	F 7	26	R10	31
C14	B	28	F 8	26	R11	31
C16		28	H 7	29		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	ENGINE COMPARTMENT LEFT
4	22	LEFT KICK PANEL (J/B NO.1 LEFT)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	ENGINE ROOM MAIN WIRE
1C	20	FLOOR WIRE
1E	20	INSTRUMENT PANEL WIRE
1H		
1J	20	COWL WIRE
1K		
3A		
3D	23	INSTRUMENT PANEL WIRE
3G		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	36	ENGINE WIRE AND COWL WIRE (R/B NO. 4)
IG1		
IG2	36	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IQ1		
IQ2	38	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)

: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	FRONT SIDE OF RIGHT FENDER
EB	34	FRONT SIDE OF LEFT FENDER
IF	36	LEFT KICK PANEL
BM	40	BACK PANEL CENTER

: SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 7	38	COWL WIRE	B15	40	FLOOR MAIN WIRE

TURN SIGNAL AND HAZARD WARNING LIGHT


C13 Ⓐ

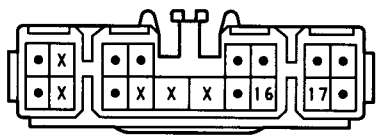

C14 Ⓑ

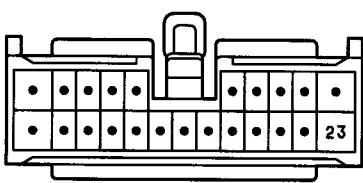


C16 BLACK

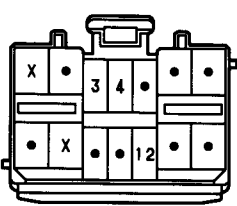

F 7, F 8 GRAY



 H 7 BLACK



R10, R11

