

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	= Anti-Lock Brake System	M/T	= Manual Transmission
A/C	= Air Conditioning	O/D	= Overdrive
ACIS	= Acoustic Control Induction System	PPS	= Progressive Power Steering
A/T	= Automatic Transmission	R/B	= Relay Block
CD	= Compact Disc	RH	= Right-Hand
COMB.	= Combination	SRS	= Supplemental Restraint System
ECU	= Electronic Control Unit	SW	= Switch
ESA	= Electronic Spark Advance	TEMP.	= Temperature
EGR	= Exhaust Gas Recirculation	TRAC	= Traction Control
EVAP	= Evaporative Emission	VSV	= Vacuum Switching Valve
FL	= Fusible Link	w/	= With
J/B	= Junction Block	w/o	= Without
LH	= Left-Hand		

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.