


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[1UZ-FE]

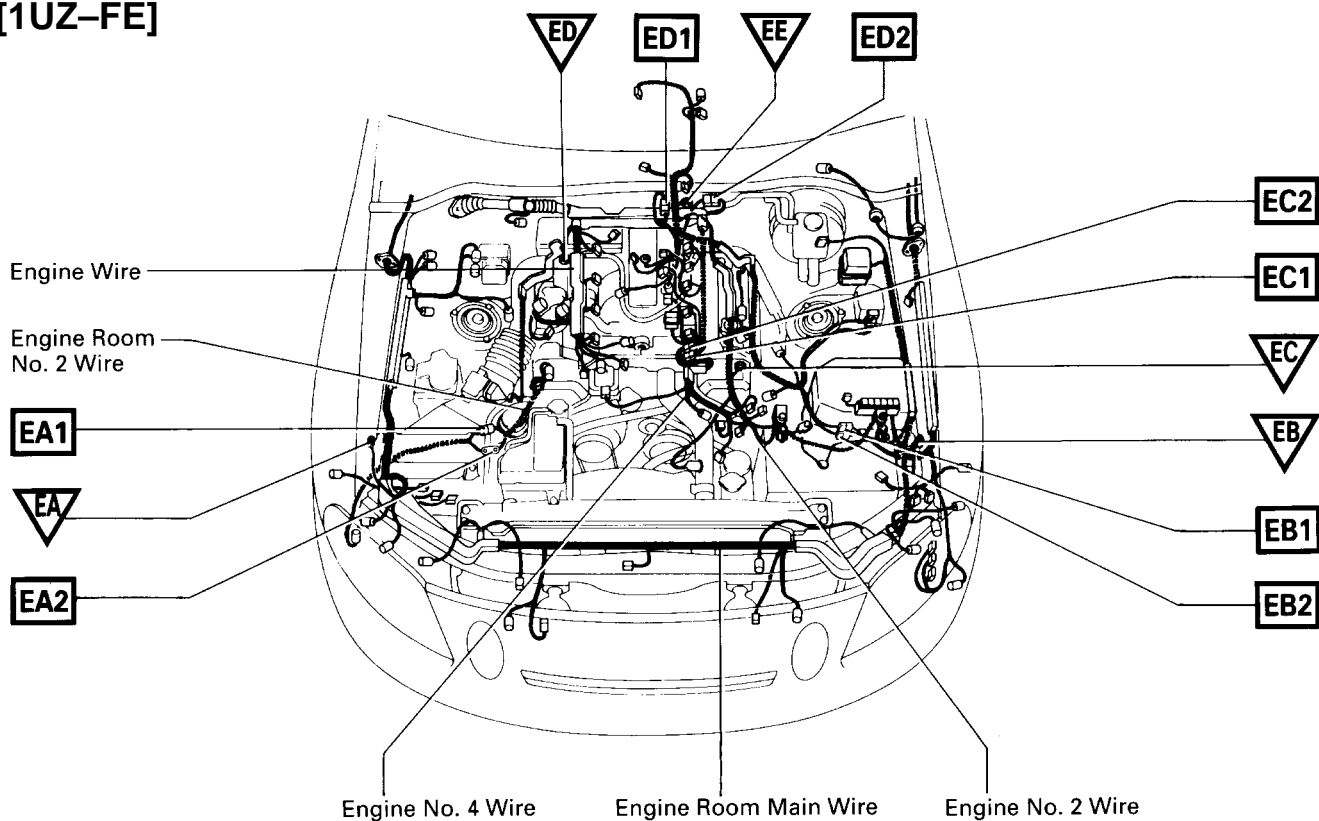

○ : Location of Splice Points

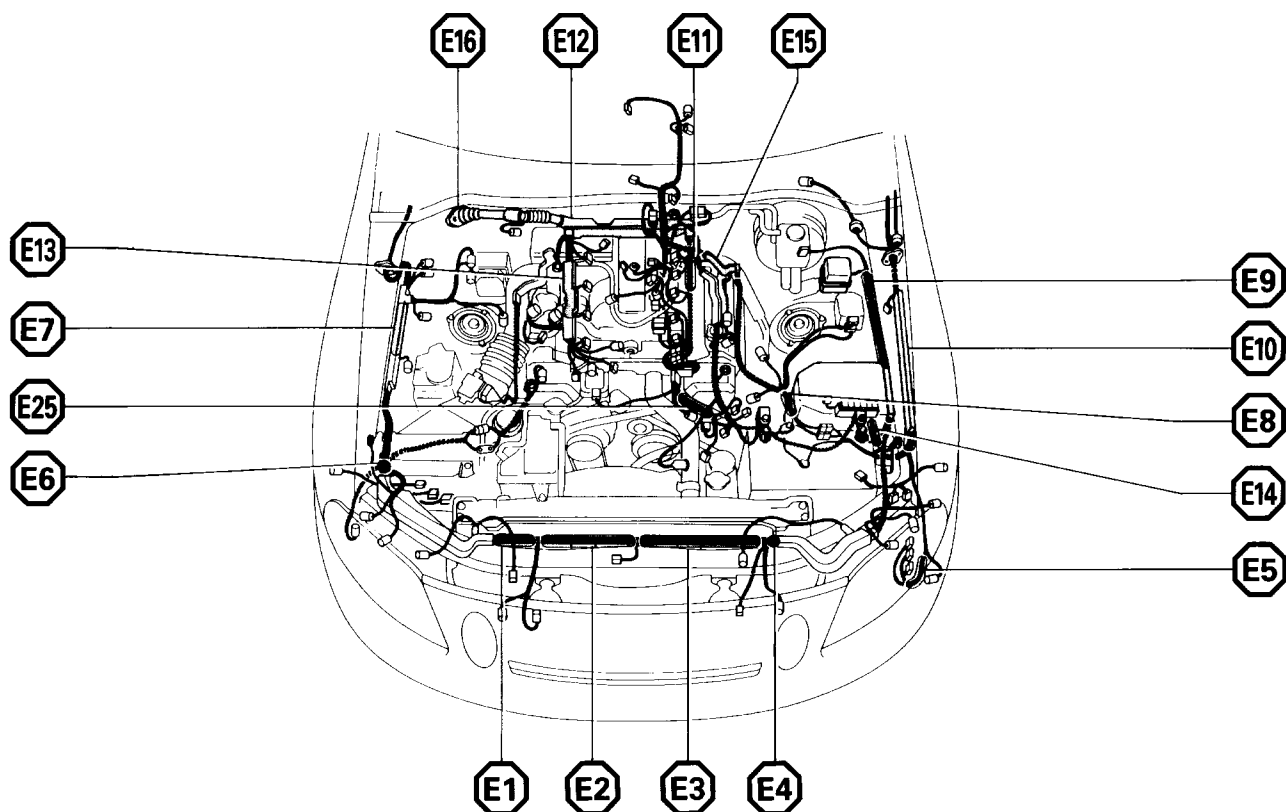

Connector Joining Wire Harness and Wire Harness

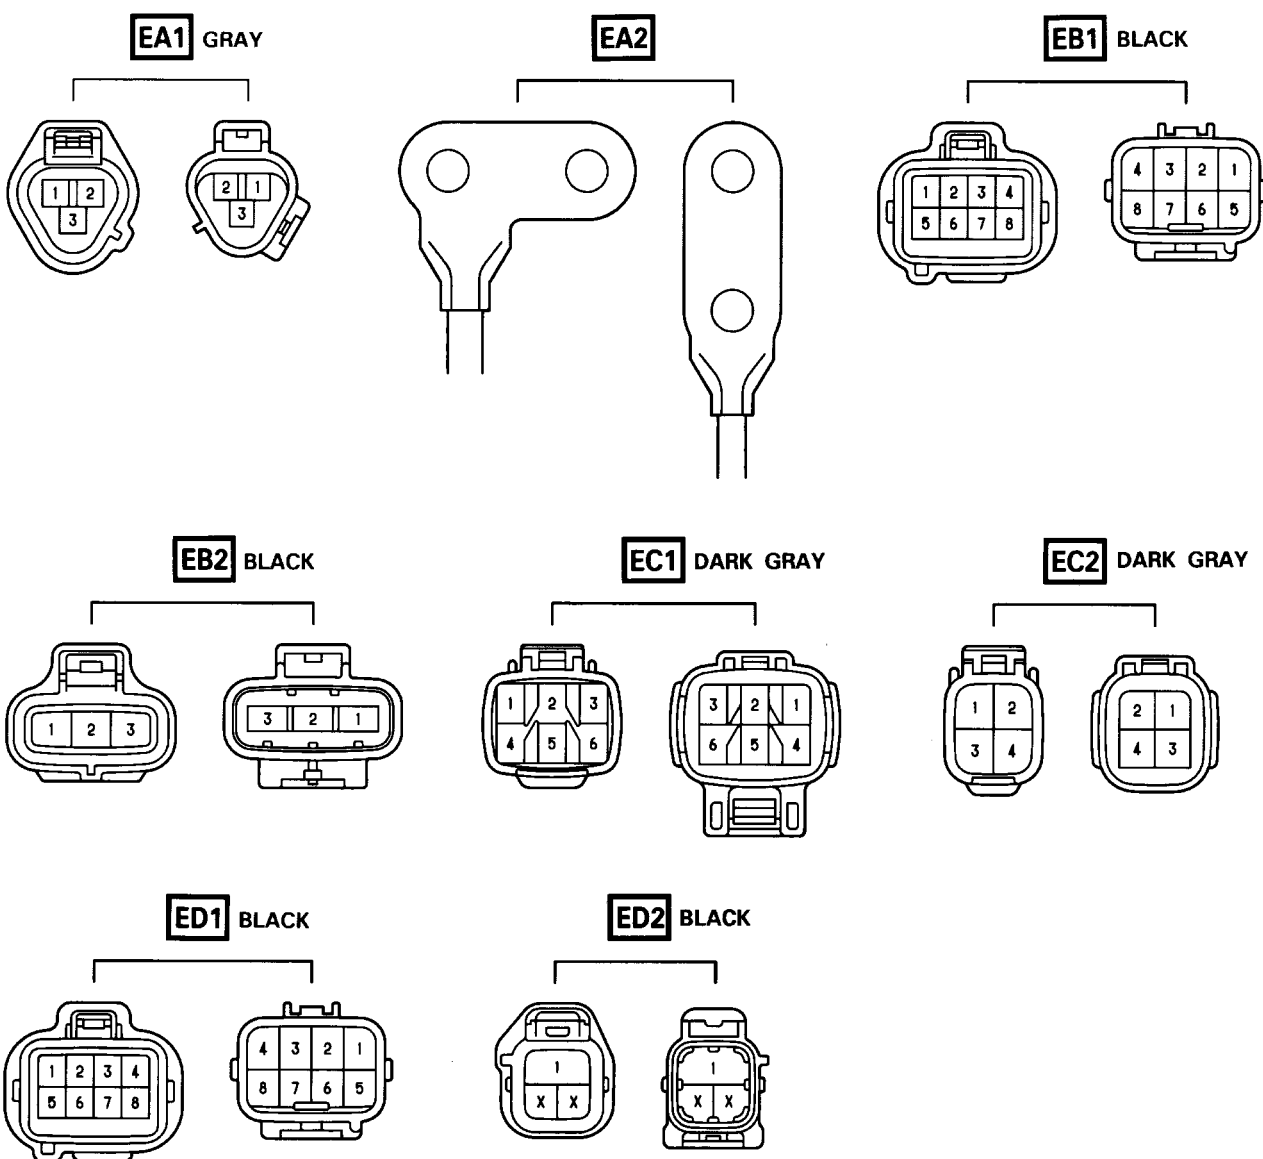


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	ENGINE ROOM NO. 2 WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF RIGHT FENDER APRON)
EA2	ENGINE ROOM NO. 2 WIRE AND ENGINE ROOM MAIN WIRE (UNDER THE MASS AIR FLOW METER)
EB1	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO. 2)
EB2	
EC1	ENGINE WIRE AND ENGINE NO. 4 WIRE (FRONT SIDE OF CYLINDER HEAD COVER LH)
EC2	
ED1	ENGINE NO. 2 WIRE AND ENGINE WIRE (REAR SIDE OF AIR INTAKE CHAMBER)
ED2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

[2JZ-GE]

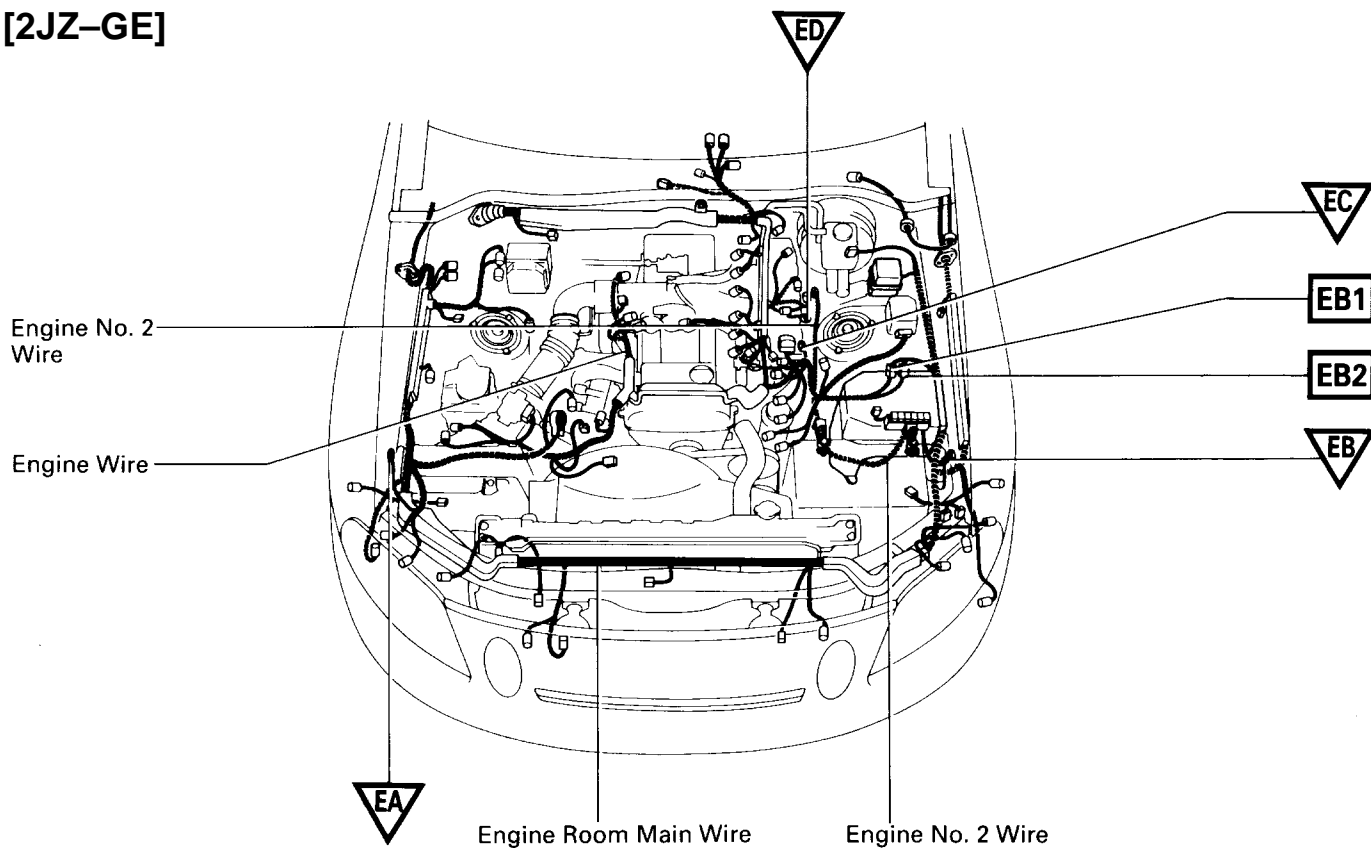

○ : Location of Splice Points

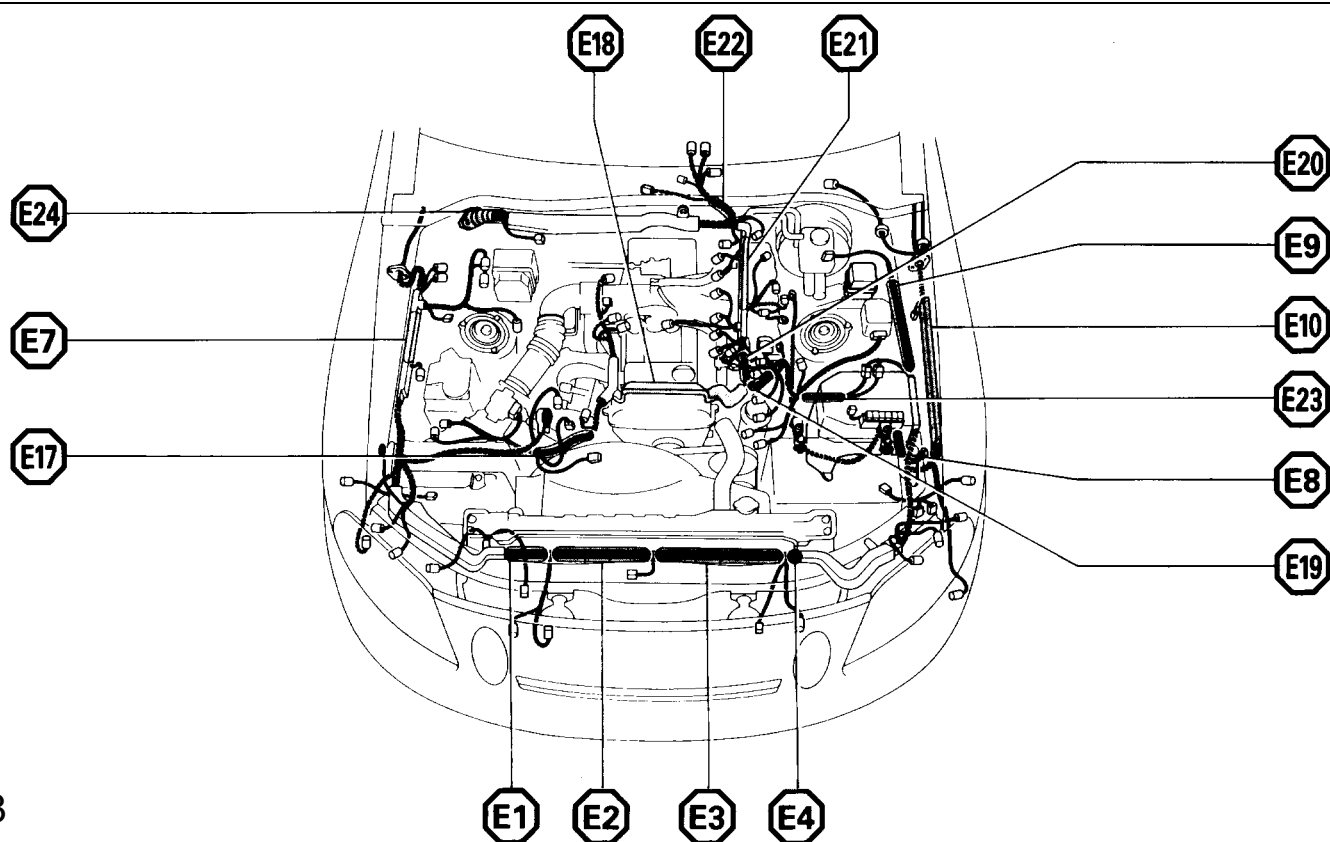


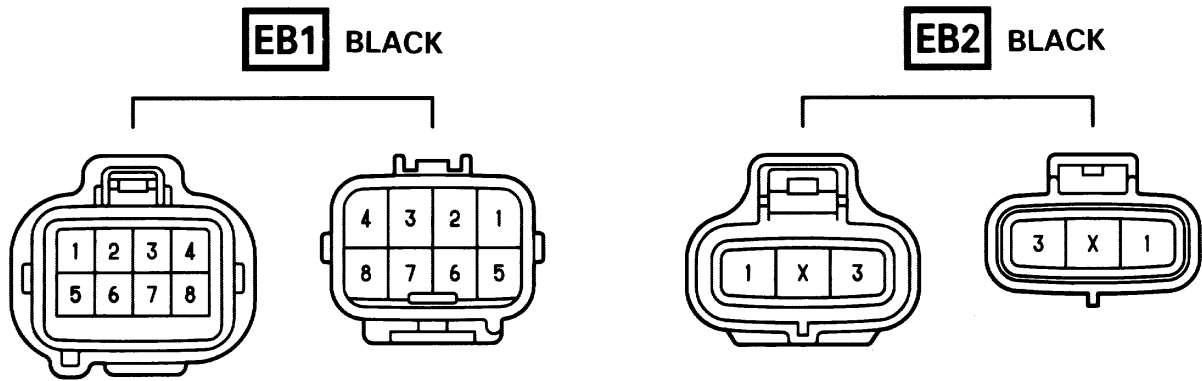


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IB1	ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO. 2)
IB2	


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

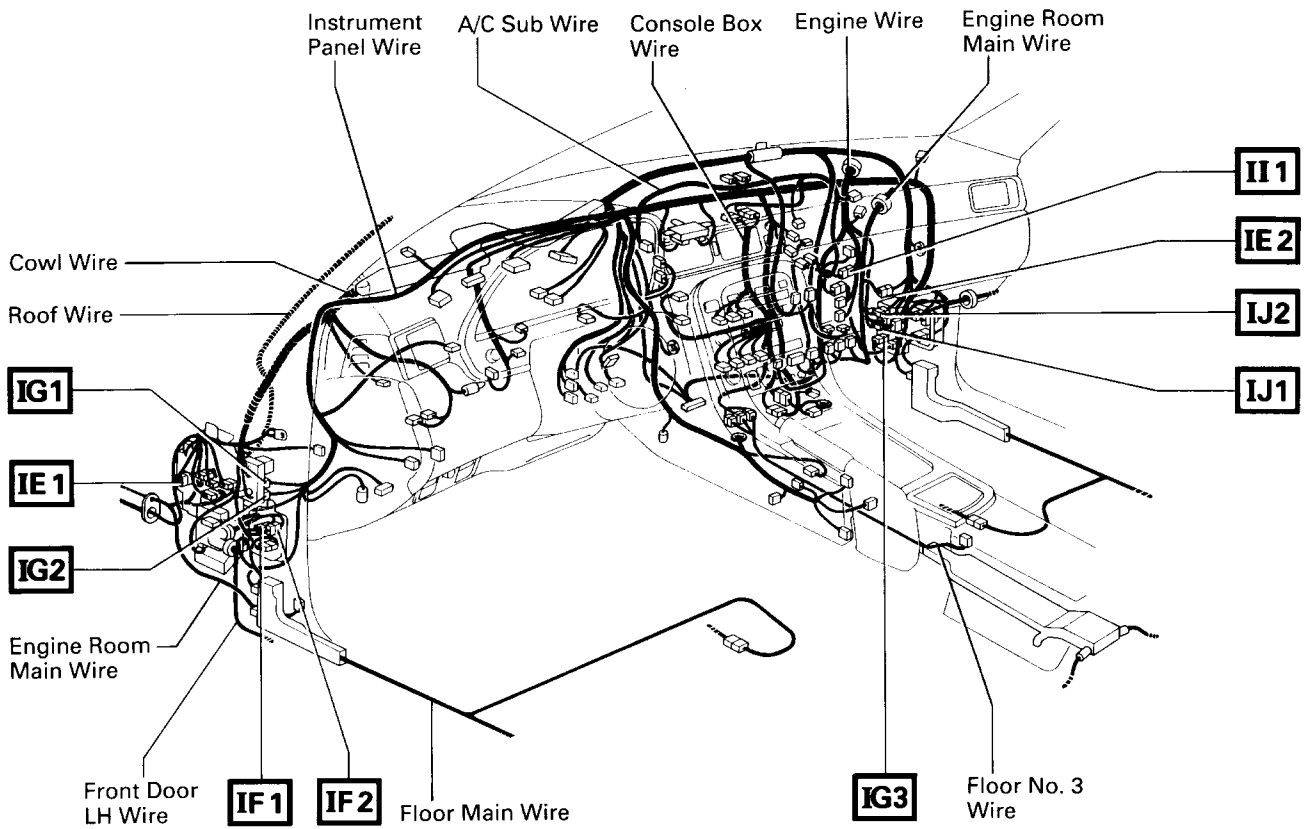

▽ : Location of Ground Points

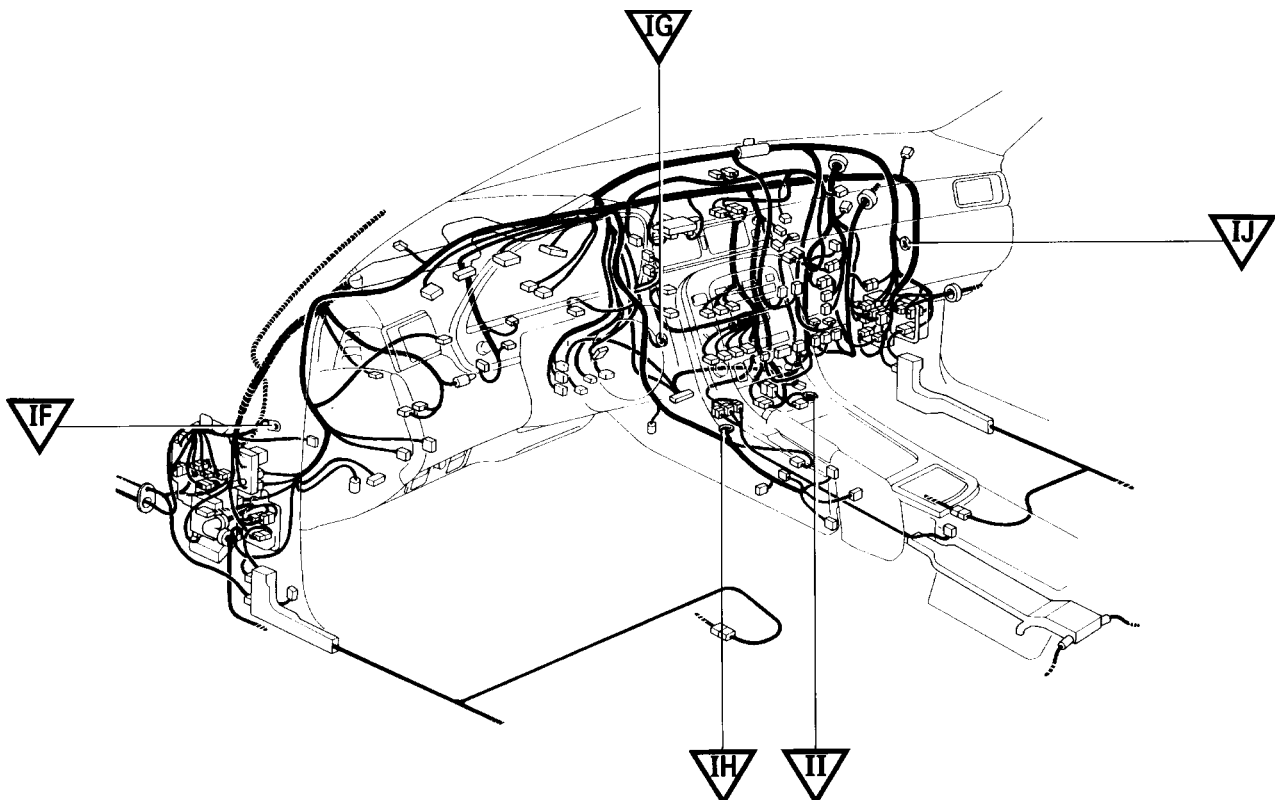


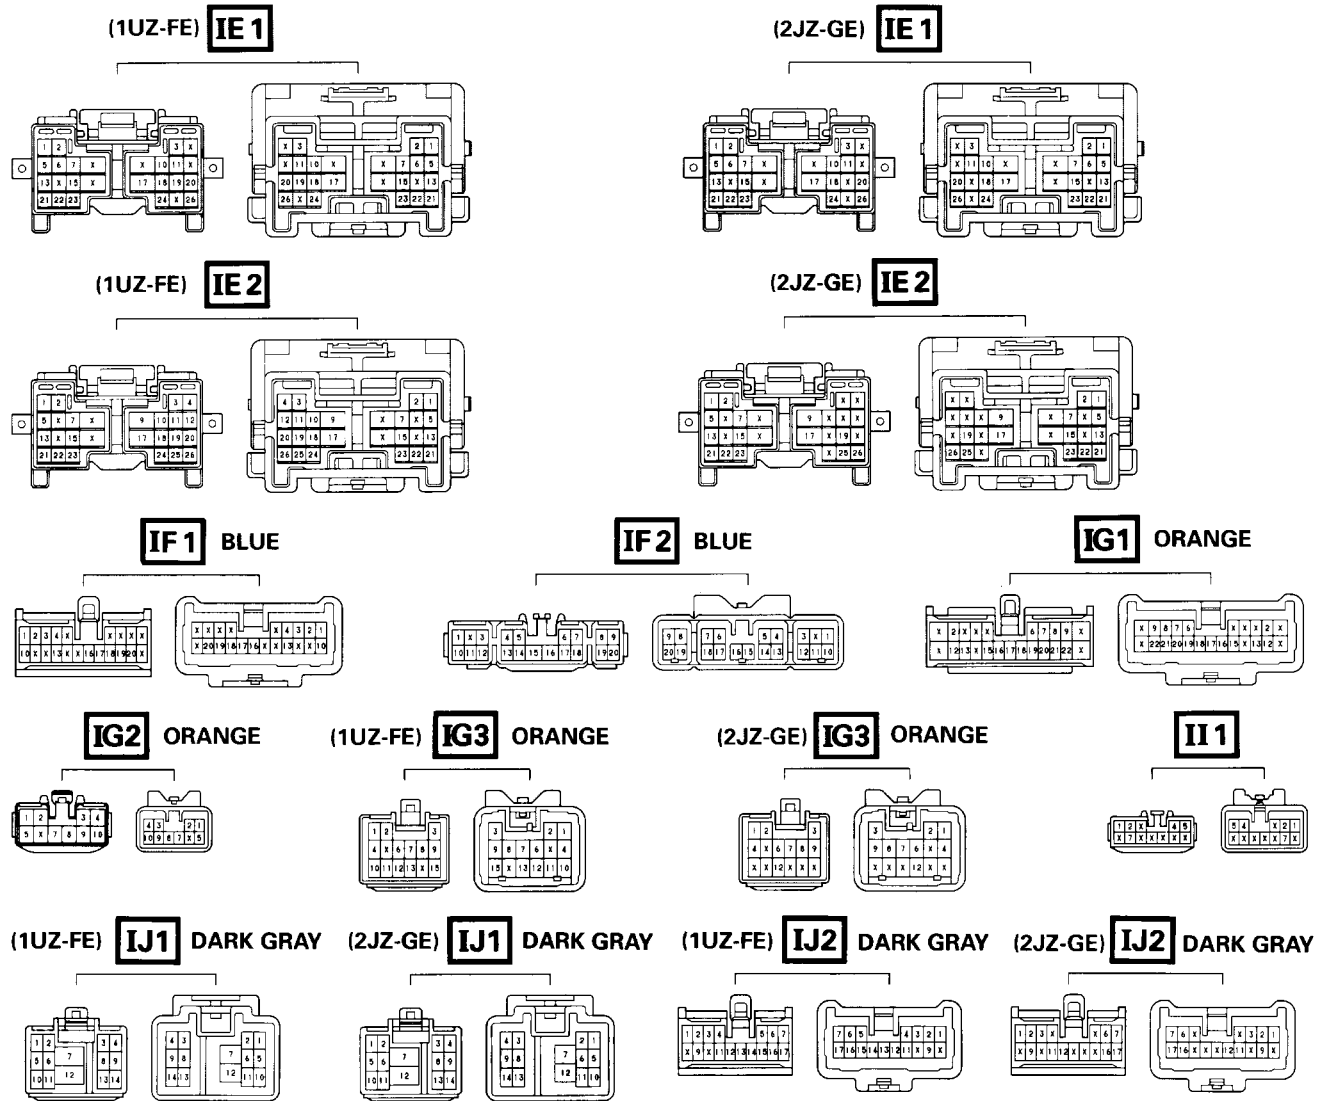


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IE2	ENGINE ROOM MAIN WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IF1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IF2	
IG1	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IG2	
IG3	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)
II1	ENGINE WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IJ1	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IJ2	


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

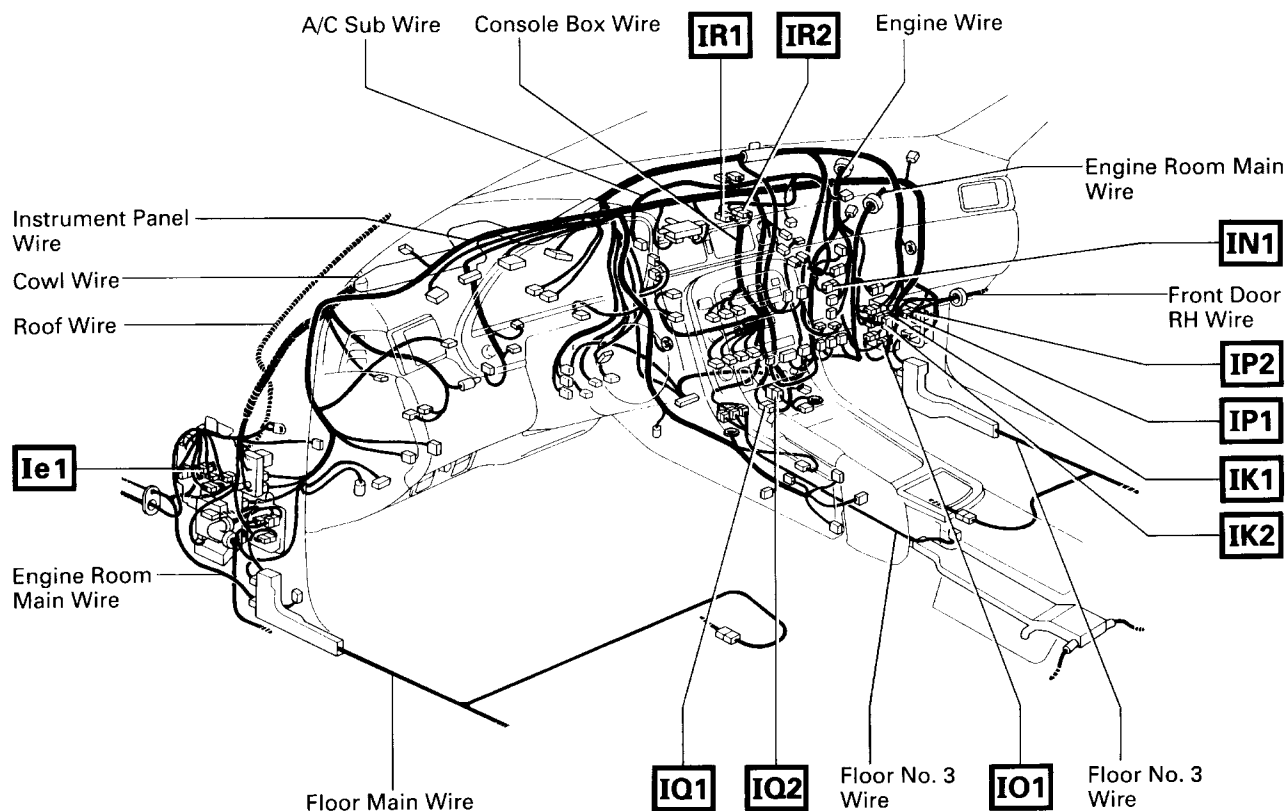

○ : Location of Splice Points

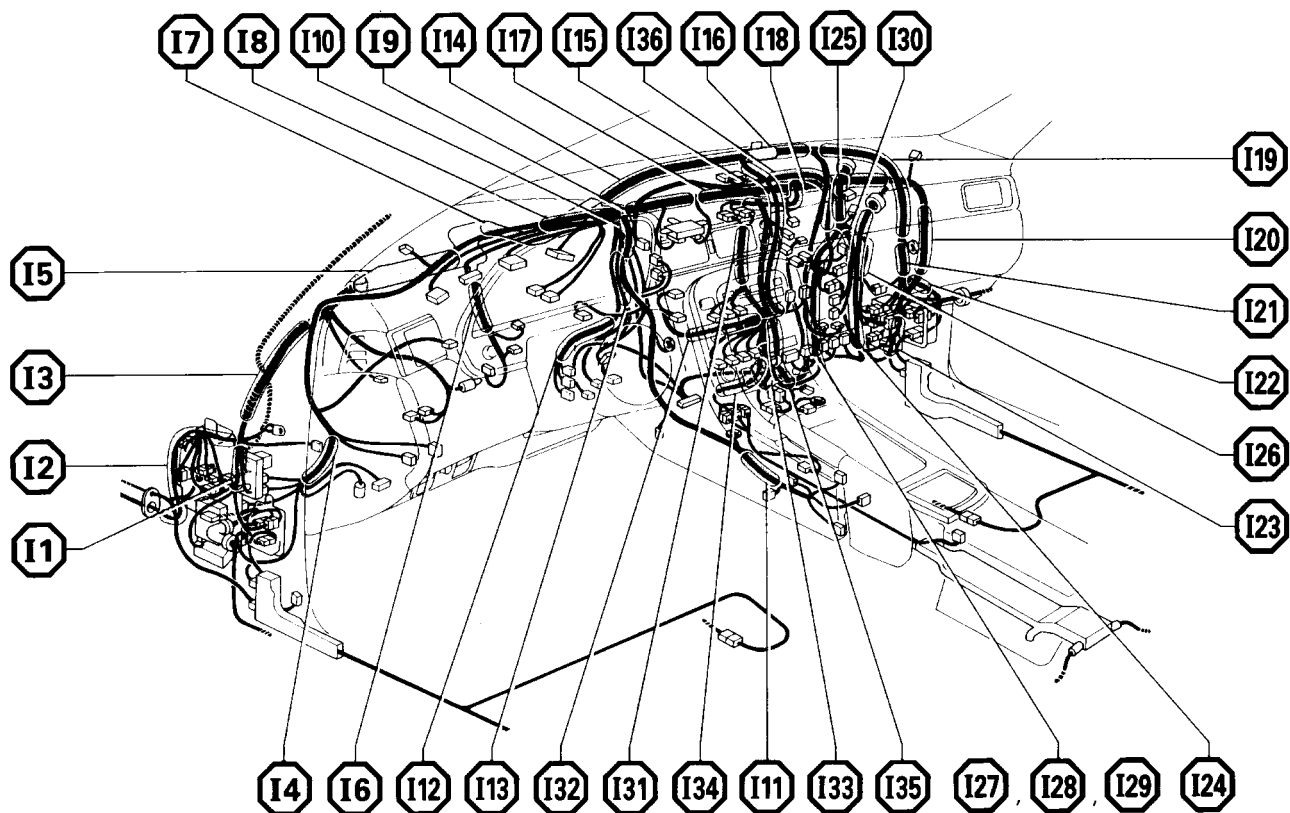

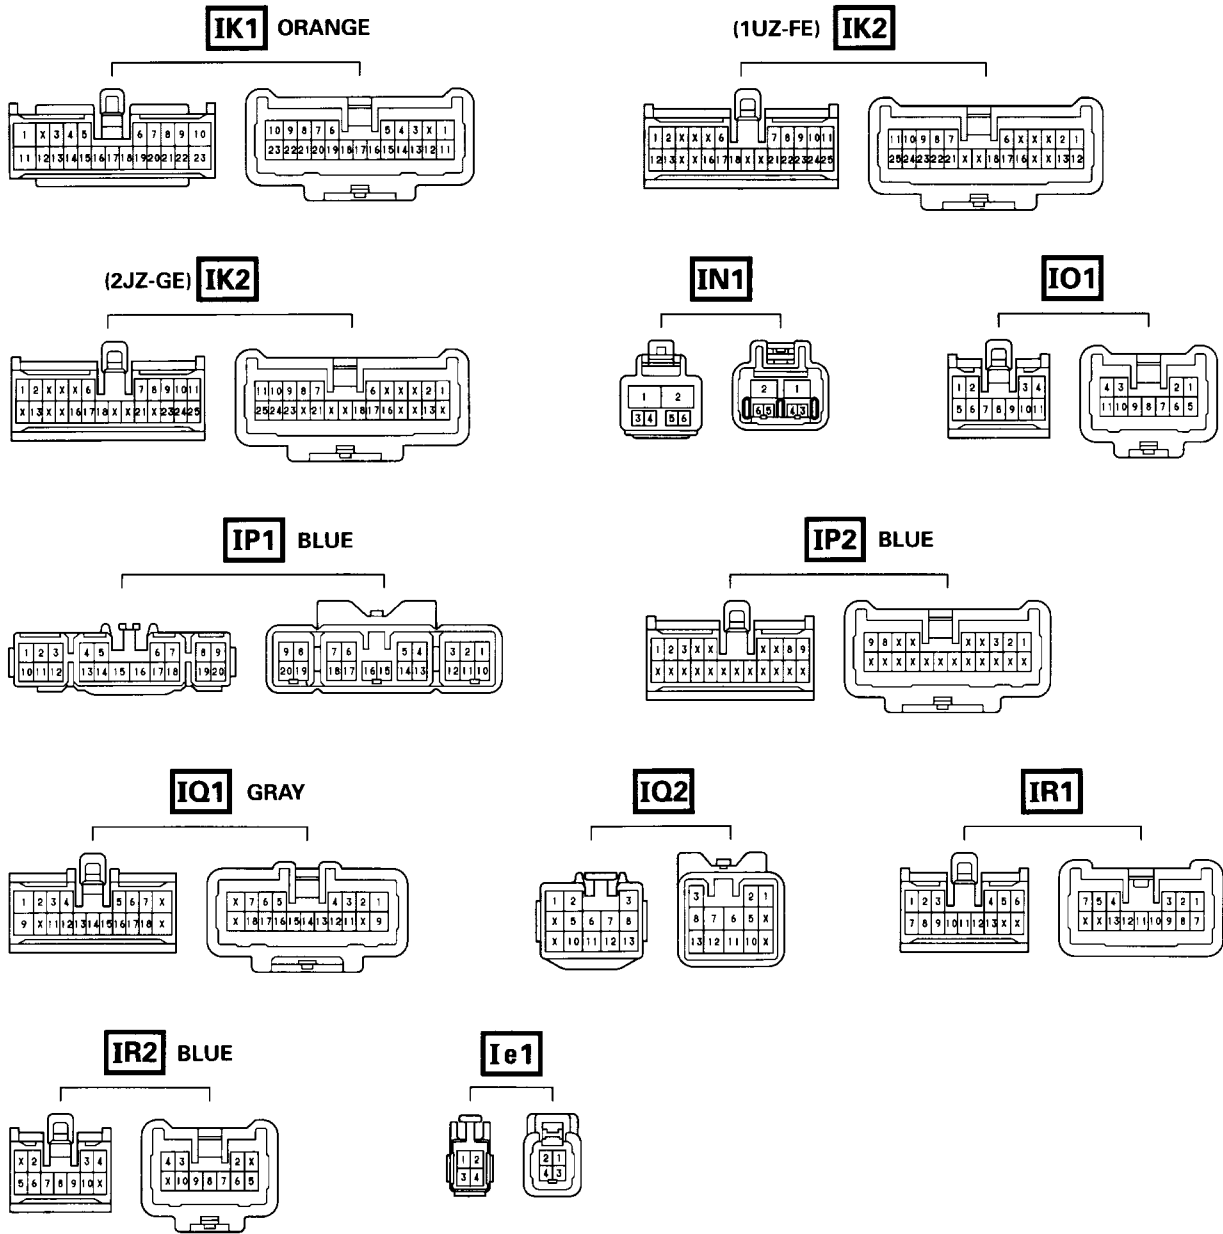


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IK1	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IK2	
IN1	ENGINE ROOM MAIN WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IO1	ENGINE ROOM MAIN WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IP1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IP2	
IQ1	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT CENTER)
IQ2	
IR1	CONSOLE BOX WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IR2	
Ie1	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)


G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

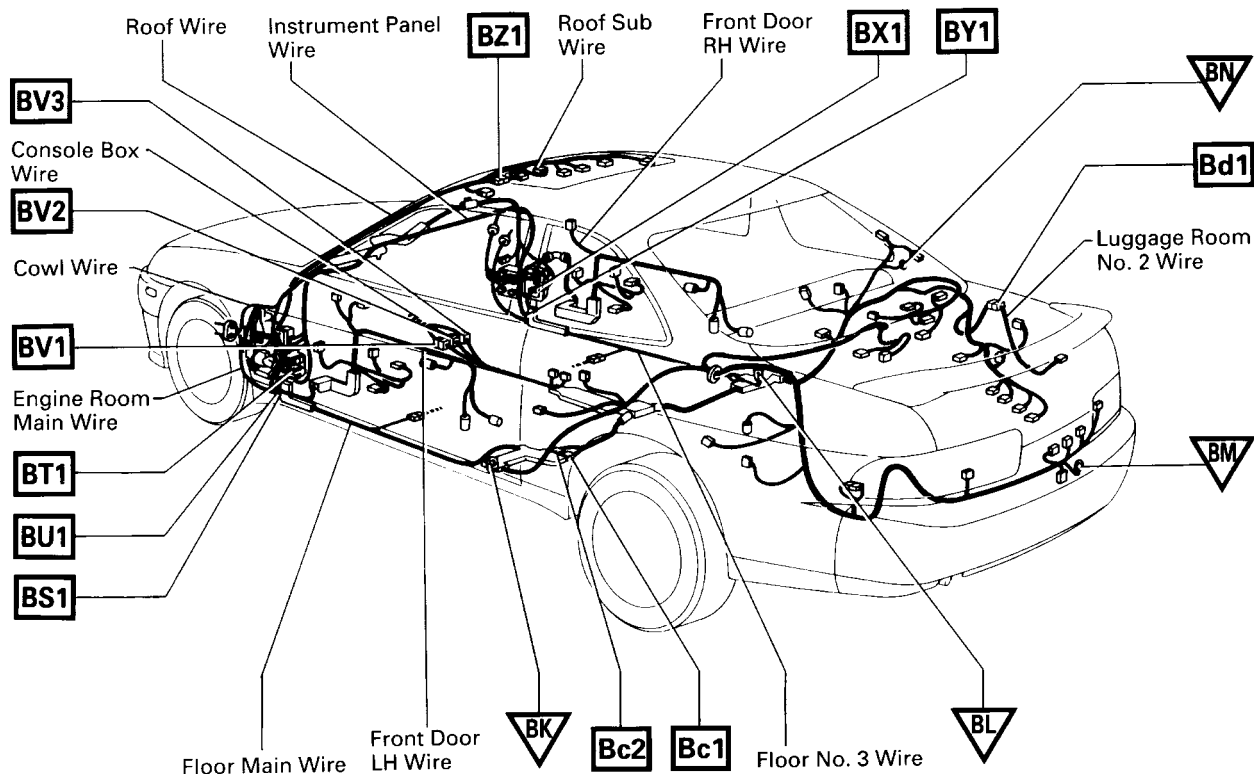

○ : Location of Splice Points

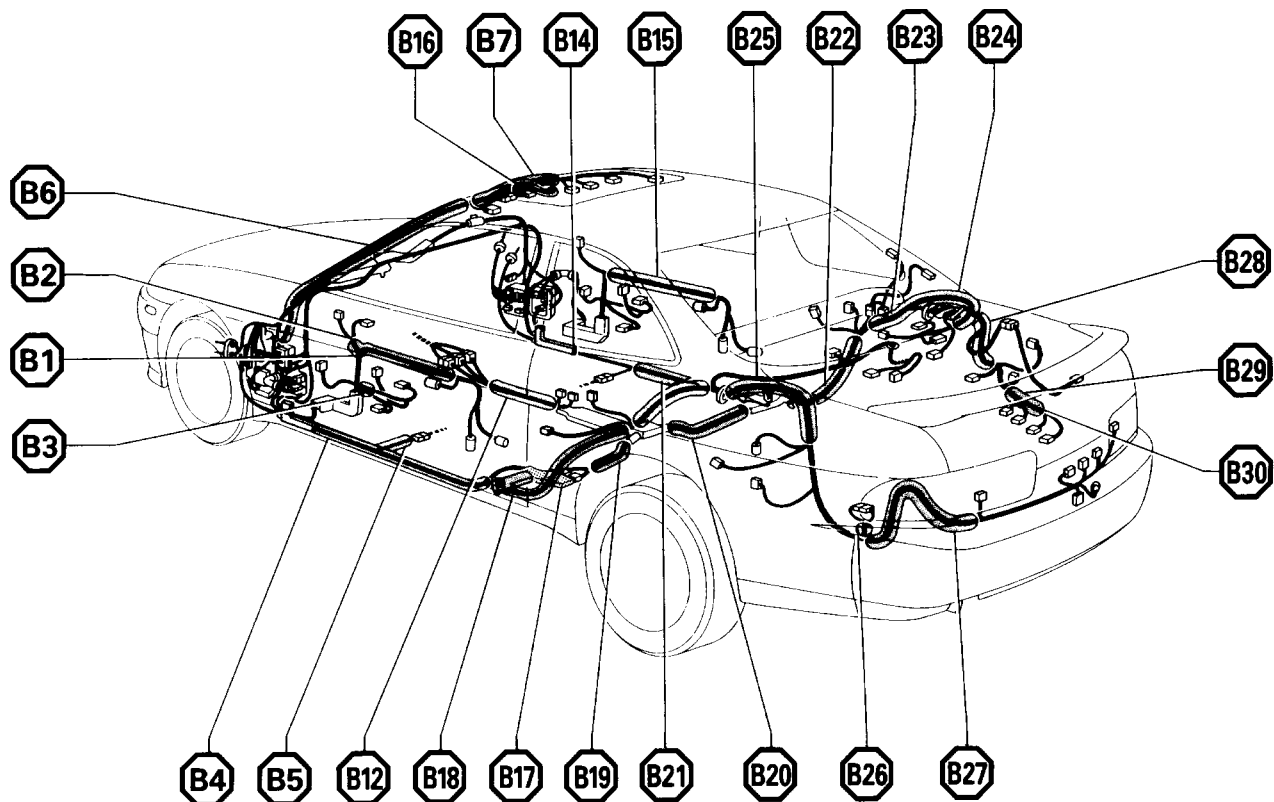


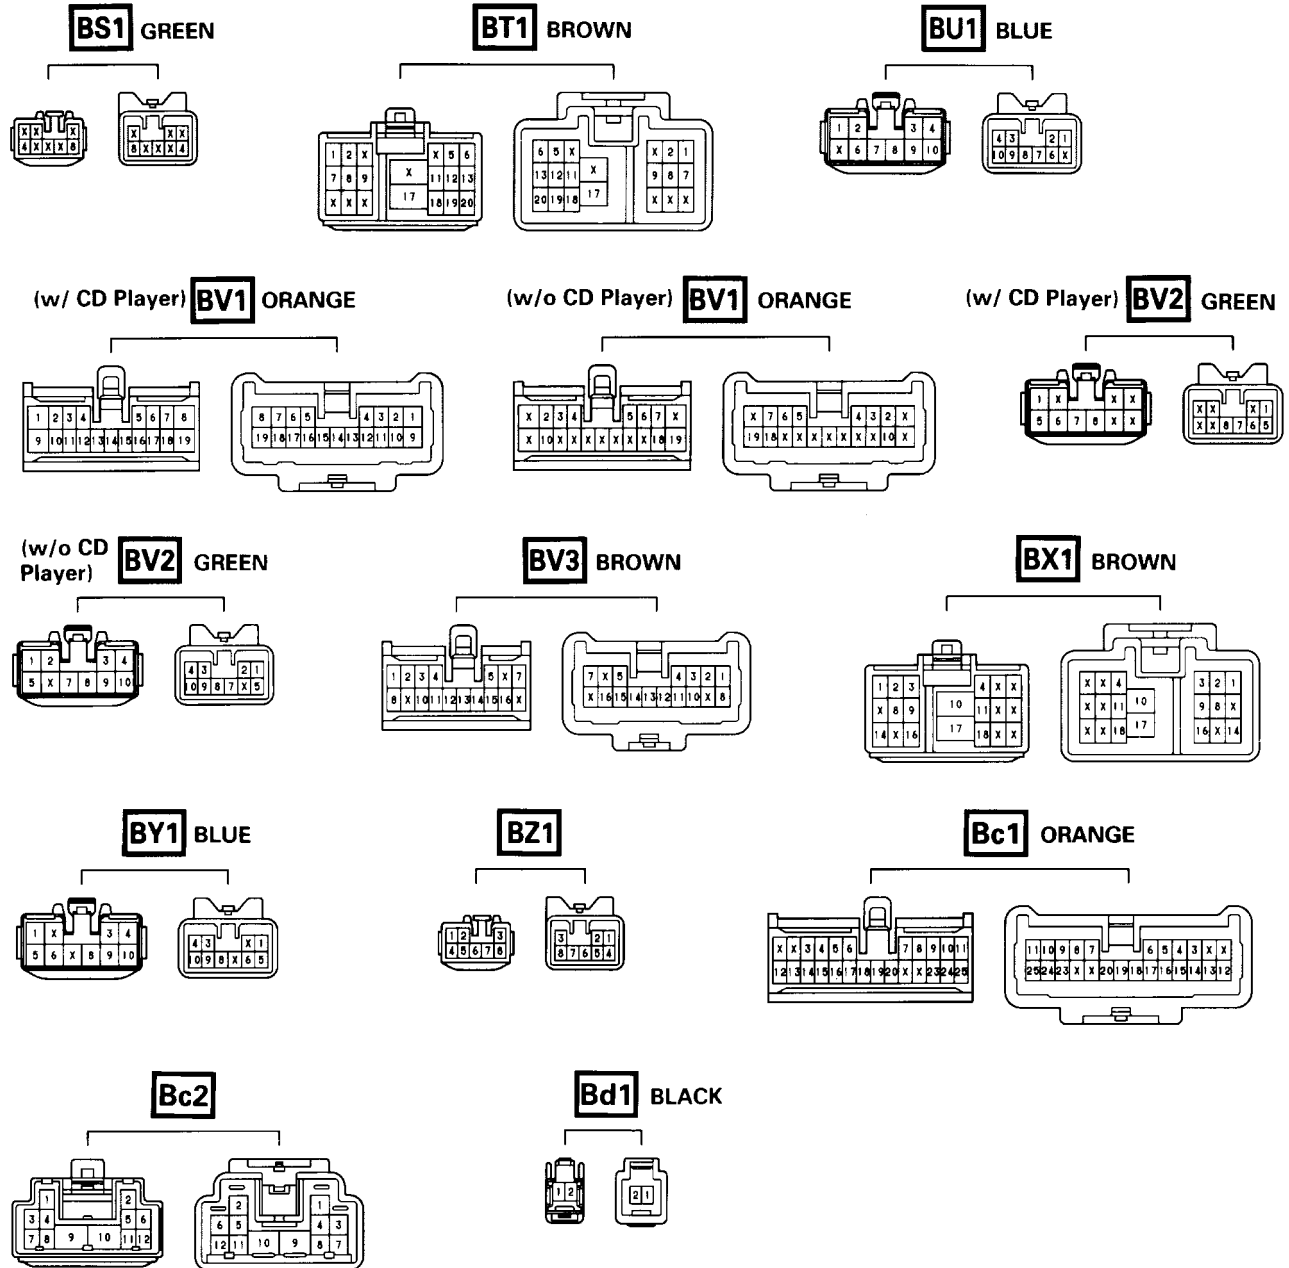


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BS1	ENGINE ROOM MAIN WIRE AND FLOOR MAIN WIRE (LEFT KICK PANEL)
BT1	FLOOR MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BU1	INSTRUMENT PANEL WIRE AND FLOOR MAIN WIRE (LEFT KICK PANEL)
BV1	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BV2	
BV3	
BX1	FLOOR NO. 3 WIRE AND COWL WIRE (RIGHT KICK PANEL)
BY1	INSTRUMENT PANEL WIRE AND FLOOR NO. 3 WIRE (RIGHT KICK PANEL)
BZ1	ROOF WIRE AND ROOF SUB WIRE (FRONT SIDE OF ROOF LEFT)
Bc1	FLOOR NO. 3 WIRE AND FLOOR MAIN WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
Bc2	
Bd1	FLOOR NO. 3 WIRE AND LUGGAGE ROOM NO. 2 WIRE (RIGHT SIDE OF LUGGAGE COMPARTMENT)


G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

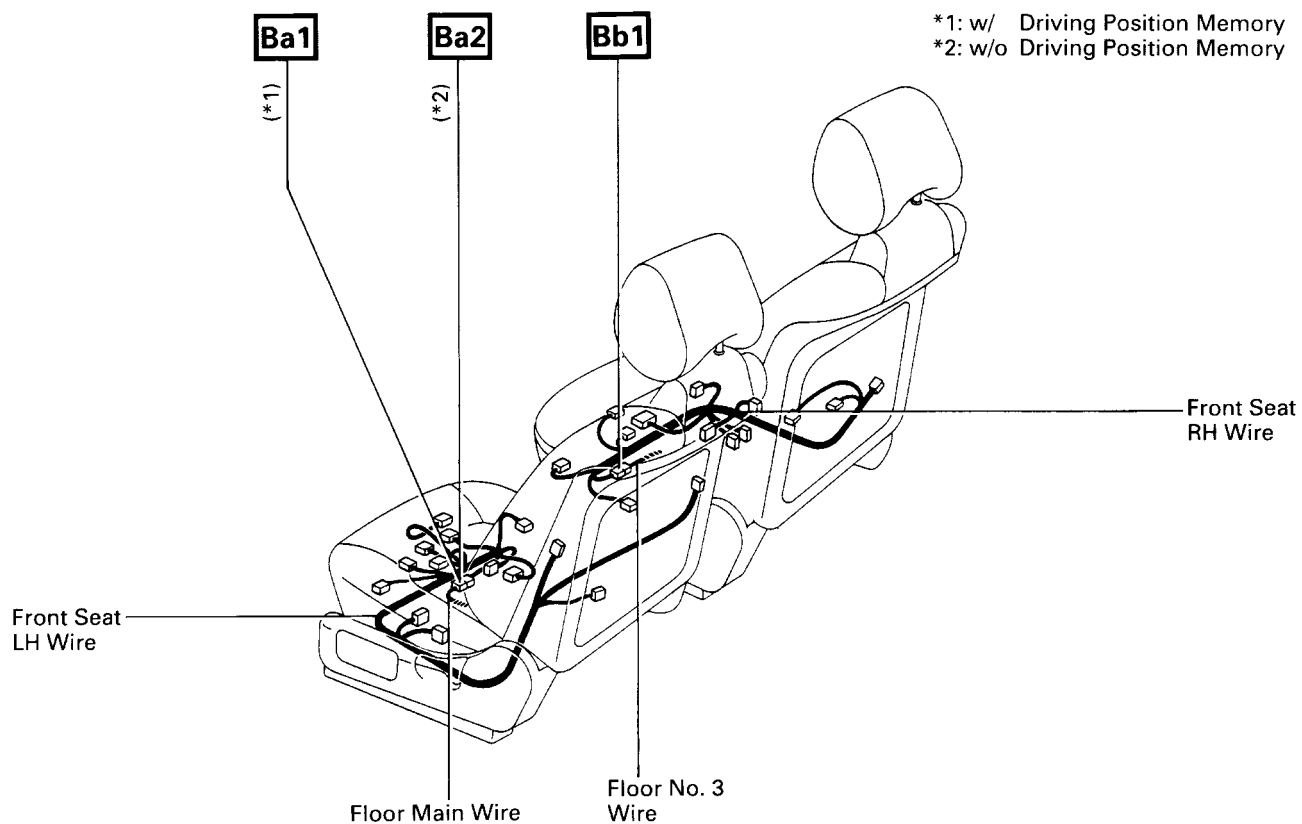

○ : Location of Splice Points

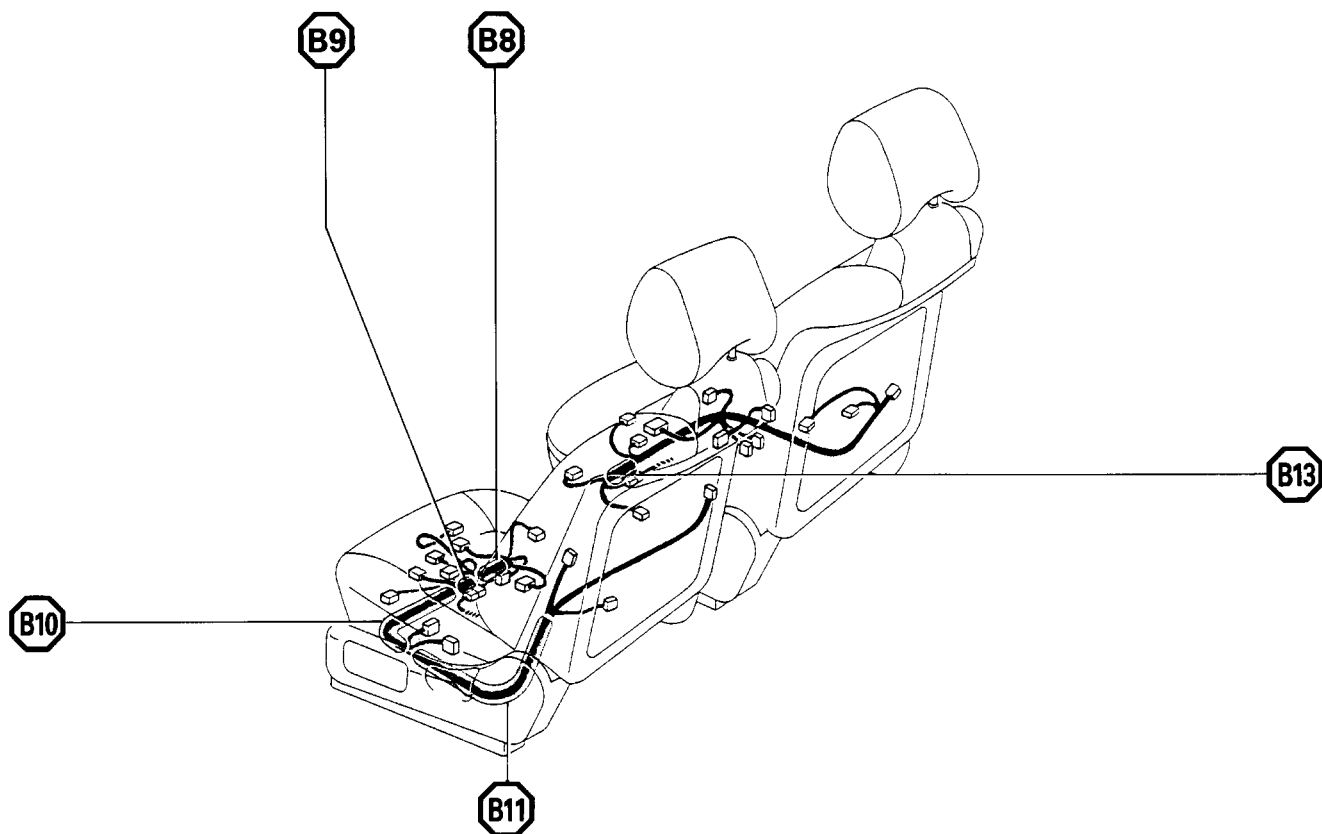

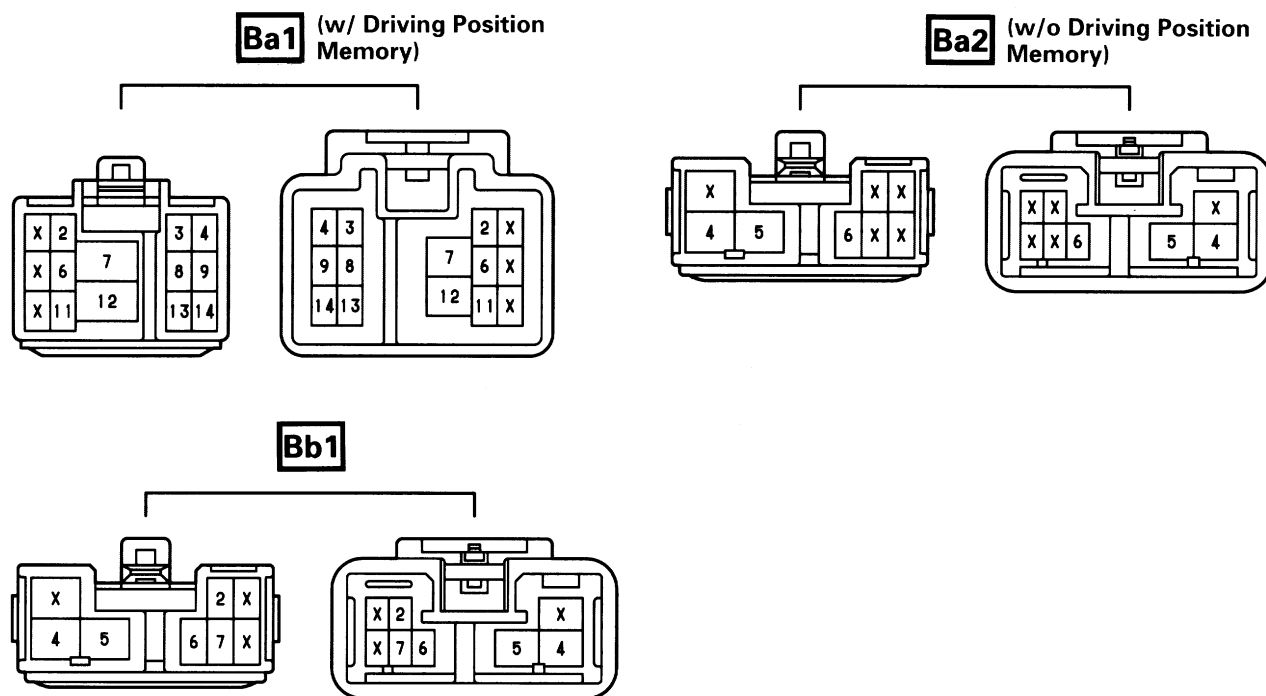

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
Ba1	FLOOR MAIN WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
Ba2	FLOOR NO. 3 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)
Bb1	FLOOR NO. 3 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)