









## : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)
4	23	R/B NO. 4 (FRONT SIDE OF J/B NO. 1)
6	24	R/B NO. 6 (ENGINE COMPARTMENT LEFT)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	20	FRONT DOOR LH WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1F	20	ROOF WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1G	20	COWL NO. 2 WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J		
1K		
3A	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D		
3F		
3G		
3H		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ED1	36 (1UZ-FE)	ENGINE NO. 2 WIRE AND ENGINE WIRE (REAR SIDE OF AIR INTAKE CHAMBER)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IE2	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IF2	40	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IG1	40	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IG3	40	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)
IJ1	40	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK1	40	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IK2		
IN1	42	ENGINE ROOM MAIN WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IP1	42	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	42	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT CENTER)
IQ2		
BS1	44	ENGINE ROOM MAIN WIRE AND FLOOR MAIN WIRE (LEFT KICK PANEL)
BT1	44	FLOOR MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BU1	44	INSTRUMENT PANEL WIRE AND FLOOR MAIN WIRE (LEFT KICK PANEL)
BV2	44	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BX1	44	FLOOR NO. 3 WIRE AND COWL WIRE (RIGHT KICK PANEL)
BZ1	44	ROOF WIRE AND ROOF SUB WIRE (FRONT SIDE OF ROOF LEFT)
Ba1	46	FLOOR MAIN WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
Ba2		
Bb1	46	FLOOR NO. 3 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)
Bc2	44	FLOOR NO. 3 WIRE WIRE AND FLOOR MAIN WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
Bd1	44	FLOOR NO. 3 WIRE AND LUGGAGE ROOM NO. 2 WIRE (RIGHT SIDE OF LUGGAGE COMPARTMENT)

## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	36 (1UZ-FE)	FRONT SIDE OF RIGHT FENDER
	38 (2JZ-GE)	
EB	36 (1UZ-FE)	FRONT SIDE OF LEFT FENDER
	38 (2JZ-GE)	
EC	38 (2JZ-GE)	FRONT SIDE OF INTAKE MANIFOLD
ED	36 (1UZ-FE)	REAR SIDE OF CYLINDER HEAD RH
	38 (2JZ-GE)	
EE	36 (1UZ-FE)	REAR SIDE OF CYLINDER HEAD LH
IF	40	LEFT KICK PANEL
IG	40	INSTRUMENT PANEL BRACE LH
IH	40	UNDER THE ASHTRAY LH
II	40	UNDER THE ASHTRAY RH
IJ	40	RIGHT KICK PANEL
BK	44	UNDER THE CENTER PILLAR LH
BL	44	UNDER THE CENTER PILLAR RH
BM	44	BACK PANEL CENTER
BN	44	RIGHT SIDE OF REAR PILLAR

## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E1	36 (1UZ-FE)	ENGINE ROOM MAIN WIRE	I19	42	COWL WIRE
	38 (2JZ-GE)		I21		
E2	36 (1UZ-FE)		I23	42	INSTRUMENT PANEL WIRE
	38 (2JZ-GE)		I24	42	ENGINE ROOM MAIN WIRE
E4	36 (1UZ-FE)		I25	42	ENGINE WIRE
	38 (2JZ-GE)		I28		
E5	36 (1UZ-FE)		I34	42	CONSOLE BOX WIRE
E6			B1	44	FRONT DOOR LH WIRE
E7	36 (1UZ-FE)		B3		
	38 (2JZ-GE)		B4	44	FLOOR MAIN WIRE
E8	36 (1UZ-FE)		B6	44	ROOF WIRE
	38 (2JZ-GE)		B7		
E9	36 (1UZ-FE)		B8	46	FRONT SEAT LH WIRE
	38 (2JZ-GE)		B10		
E16	36 (1UZ-FE)		B11		
E19	38 (2JZ-GE)	ENGINE WIRE	B13	46	FRONT SEAT RH WIRE
E24			B15	46	FRONT DOOR RH WIRE
I2	42	COWL WIRE	B16	44	ROOF SUB WIRE
I3			B18	44	FLOOR MAIN WIRE
I5			B22	44	FLOOR NO. 3 WIRE
I7			B23		
I9	42	INSTRUMENT PANEL WIRE	B25	44	FLOOR MAIN WIRE
I13	42	COWL WIRE	B27		
I14			B28	44	FLOOR NO. 3 WIRE
I16			B29		
I18	42	INSTRUMENT PANEL WIRE			