



H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

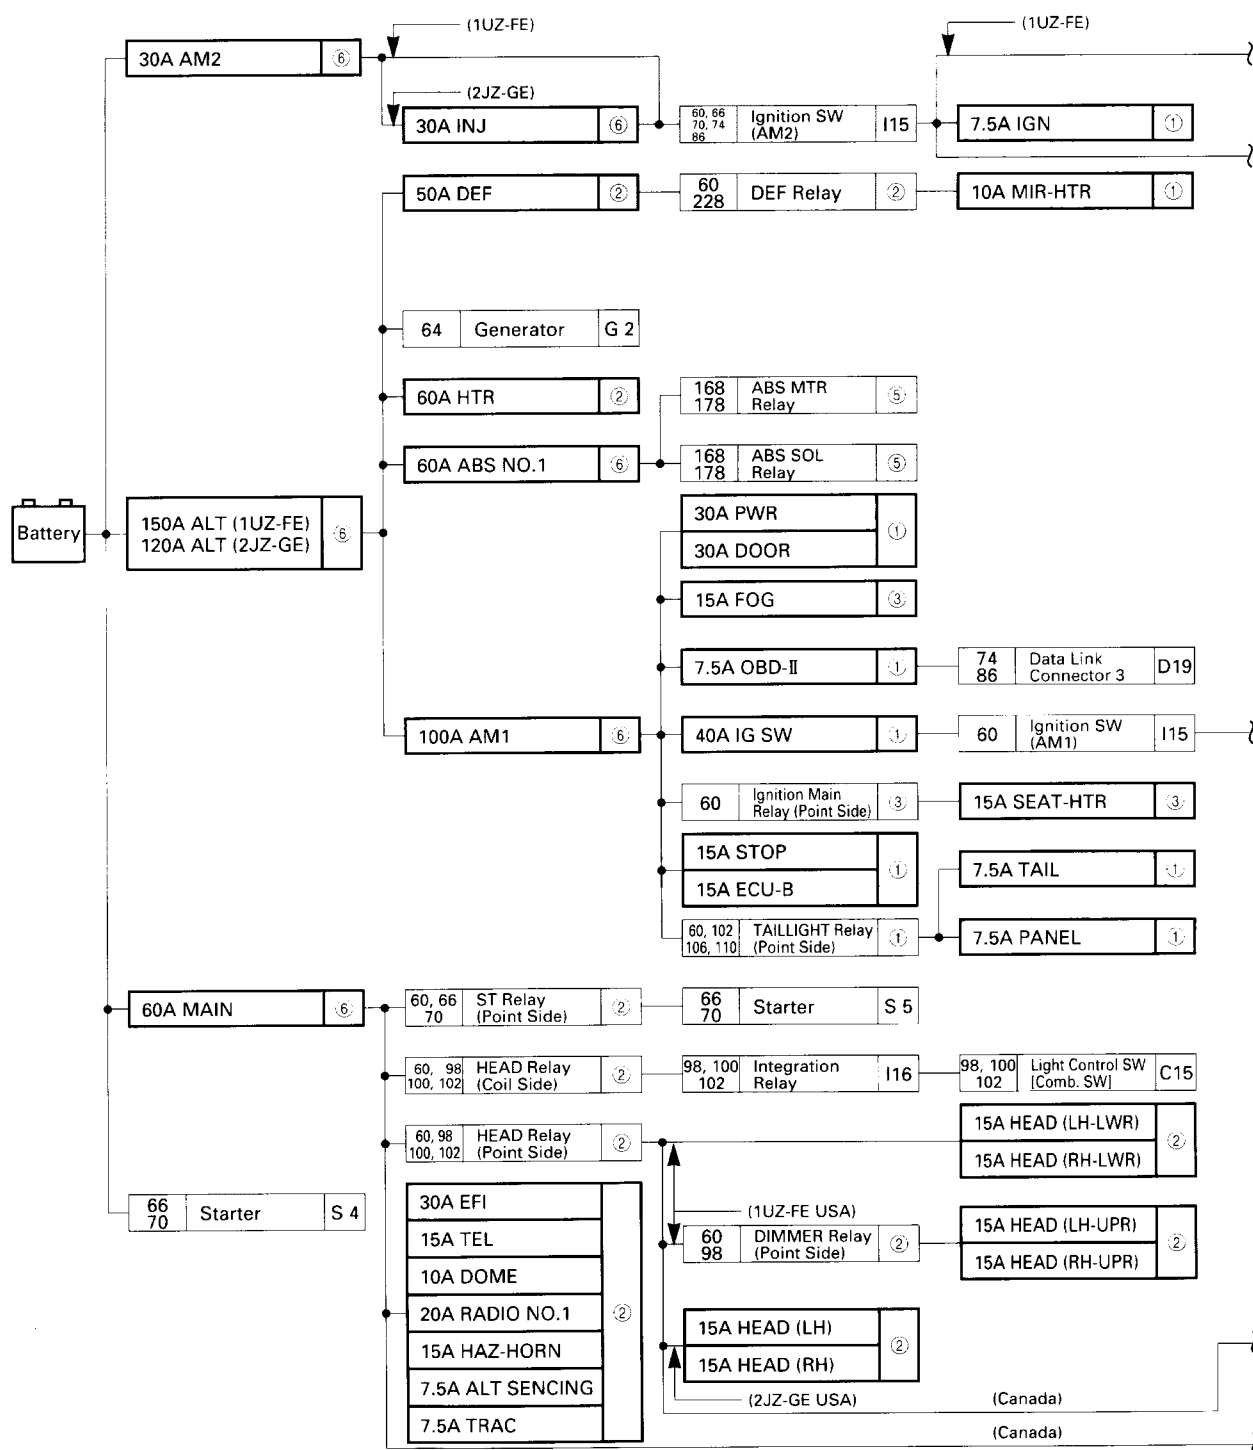

[LOCATION] ①: J/B No.1 (See page 20) ②: R/B No.2 (See page19) ③: R/B No.4 (See page23)

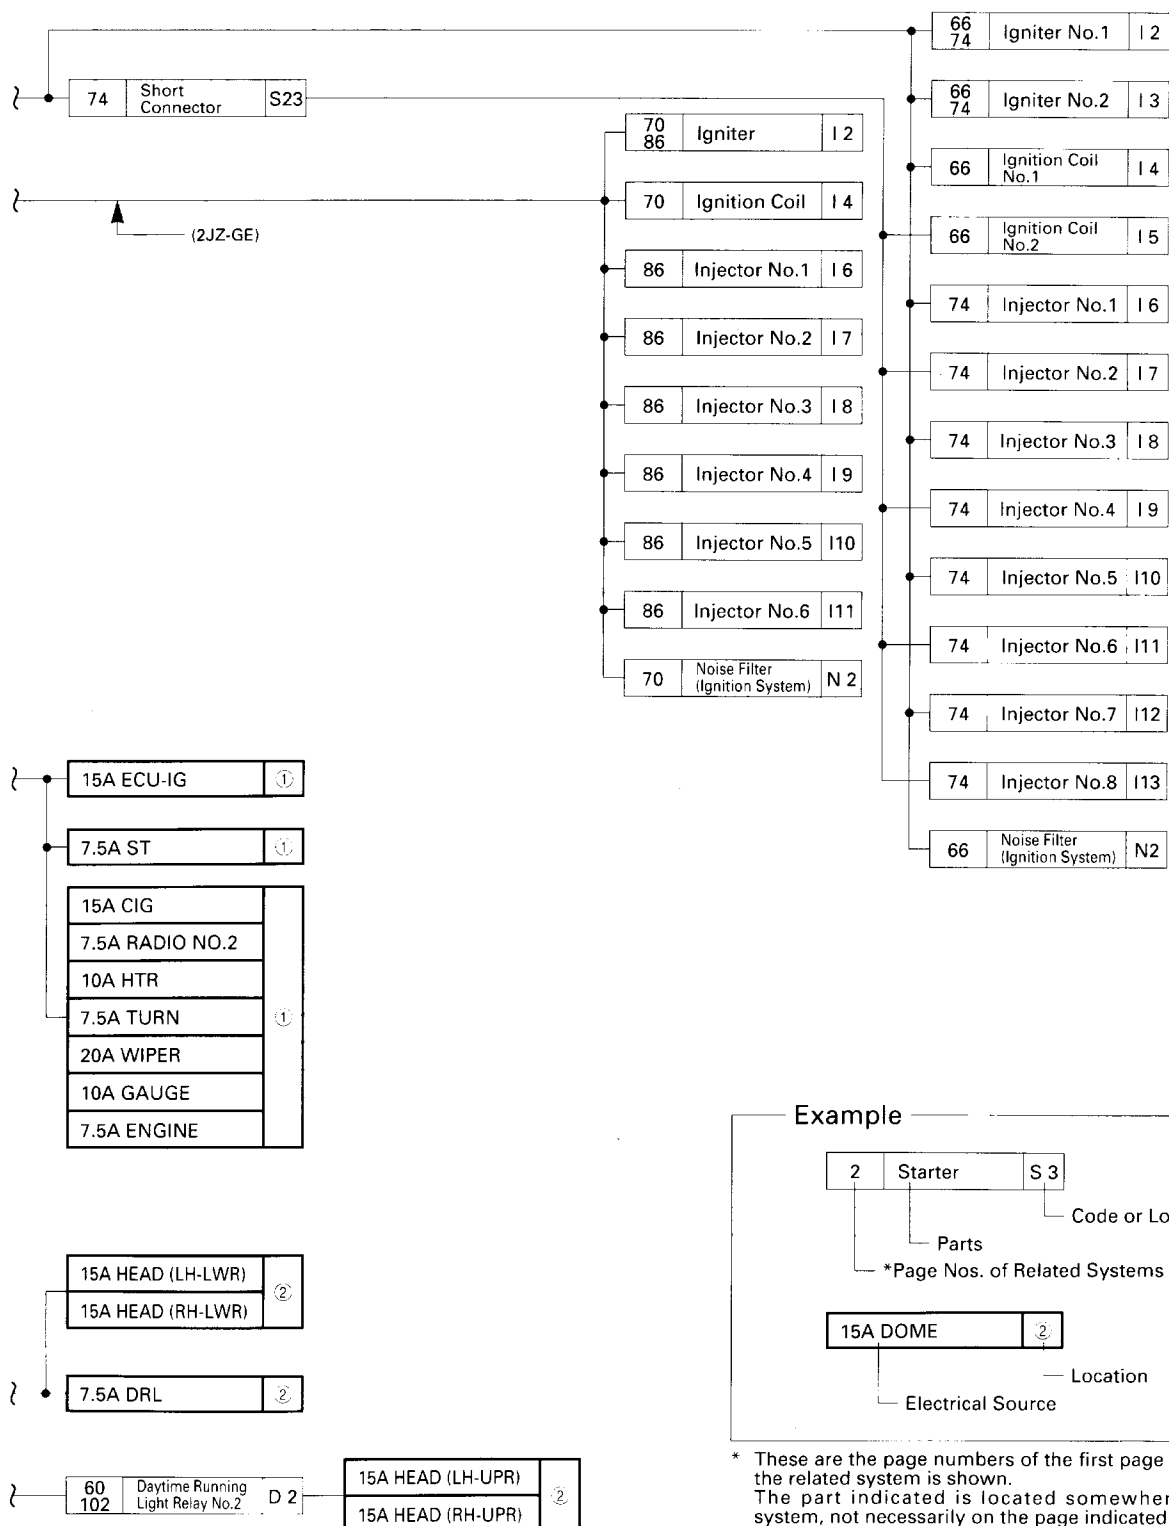

⑤: R/B No.6 (See page 24)

⑥: Fuse Block (F9 See page 19)

*1: 2JZ-GE
*2: 1UZ-FE

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

50

④: R/B No. 5 (See page 23) ⑤: R/B No. 6 (See page 24)

H POWER SOURCE (Current Flow Chart)

*1: 2JZ-GE
*2: 1UZ-FE

Location			*Page Nos. of Related Systems	114	114	114	114	74	255	110 152 160	74, 86, 152, 160, 168, 262	70, 74, 86, 152, 160	86 262	70 86	106	106	124	124	137	137	74 86
			Parts	Door Courtesy Light LH	Door Courtesy Light RH	Door Lock Motor, Door Unlock Detection SW LH and Door Open Detection SW LH	Door Lock Motor, Door Unlock Detection SW RH and Door Open Detection SW RH	EGR Valve	Engine Oil Level Warning SW	Electronically Controlled Transmission Pattern Select SW	Engine Control Module	Engine Control Module	Engine Control Module	Engine Control Module	Front Side Marker Light LH	Front Side Marker Light RH	Front Turn Signal Light LH	Front Turn Signal Light RH	Fuel Lid Opener SW	Fuel Lid Opener Solenoid	Fuel Pump ECU
			Code or Location																		
			CB or Fuse	D11	D12	D16	D17	E 2	E 7	E 9	E11	E12	E13	E14	F 5	F 6	F 7	F 8	F10	F13	F15
①	50A	DEF																			
	30A	DOOR																	●	●	
	30A	PWR																			
	15A	STOP								●		●									
	15A	ECU-B																			
	10A	MIR-HTR								●		●									
	10A	HTR								●		●									
	7.5A	TURN														●	●				
	20A	WIPER																			
	10A	GAUGE						●	●	●											
	15A	ECU-IG																			
	7.5A	ENGINE																			
	7.5A	IGN								●		●									
	15A	CIG																			
	7.5A	RADIO NO.2																			
	7.5A	TAIL								●		●		●	●						
	7.5A	PANEL							●												
7.5A	ST										●		●								
②	15A	TEL																			
	10A	DOME	●	●	●	●															
	20A	RADIO NO.1																			
	15A	HAZ-HORN															●	●			
	30A	EFI					●			●	●	●	●								●
	7.5A	ALT SENCING																			
	15A	HEAD (LH) *1																			
	15A	HEAD (RH) *1																			
	15A	HEAD (LH-LWR) *2																			
	15A	HEAD (RH-LWR) *2																			
	15A	HEAD (LH-UPR) *2																			
	15A	HEAD (RH-UPR) *2																			
	60A	HTR																			
	7.5A	TRAC																			
	7.5A	DRL (Canada)																			
③	15A	SEAT-HTR																			
	15A	FOG																			

* There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily, on the page indicated here.

[LOCATION] ①: J/B No.1 (See page 20) ②: R/B No.2 (See page 19) ③: R/B No.4 (See page 23)

H POWER SOURCE (Current Flow Chart)

*1: 2JZ-GE
*2: 1UZ-FE

Location	*Page Nos. of Related Systems		244	74 86	228	255	152 160	60, 66, 70, 74, 86, 121, 137, 152, 160, 184, 190, 200, 255	190 200 255	222	114	148	148	148	148	190 198	190	190	190	190 230	198	190 198
	Parts		Mobilephone	Mass Air Flow Meter	Noise Filter (Defogger System)	Oil Pressure SW	O/D Main SW	Park/Neutral Position SW, Back-Up Light SW and A/T Indicator SW	Parking Brake SW	PPS ECU	Personal Light	Power Window Control SW RH	Power Window Master SW and Door Lock Control SW LH	Power Window Motor LH	Power Window Motor RH	Power Seat Control SW (Driver's Seat)	Power Seat Control SW (Passenger's Seat)	Power Seat ECU (Driver's Seat)		Power Seat ECU (Passenger's Seat)	Power Seat Motor (Driver's Seat Front Vertical Control)	Power Seat Motor (Driver's Seat Lumbar Support Control)
	Code or Location		M 5	M 6	N 1	O 2	O 5	P 1	P 4	P 5	P 6	P 7	P 8	P 9	P 10	P 11	P 12	P 13	P 14	P 15	P 16	P 17
CB or Fuse																						
①	50A	DEF			●																	
	30A	DOOR														●	●	●		●	●	●
	30A	PWR										●	●	●	●							
	15A	STOP																●				
	15A	ECU-B																				
	10A	MIR-HTR																				
	10A	HTR																				
	7.5A	TURN																				
	20A	WIPER																				
	10A	GAUGE				●	●	●	●									●				
	15A	ECU-IG	●							●								●		●		
	7.5A	ENGINE																				
	7.5A	IGN																				
	15A	CIG																				
	7.5A	RADIO NO.2																				
	7.5A	TAIL																				
	7.5A	PANEL																				
	7.5A	ST						●														
②	15A	TEL																				
	10A	DOME									●								●	●		
	20A	RADIO NO.1																				
	15A	HAZ-HORN																				
	30A	EFI		●																		
	7.5A	ALT SENCING																				
	15A	HEAD (LH) *1																				
	15A	HEAD (RH) *1																				
	15A	HEAD (LH-LWR) *2																				
	15A	HEAD (RH-LWR) *2																				
	15A	HEAD (LH-UPR) *2																				
	15A	HEAD (RH-UPR) *2																				
	60A	HTR																				
	7.5A	TRAC																				
	7.5A	DRL (Canada)																				
③	15A	SEAT-HTR																				
	15A	FOG																				

* There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily, on the page indicated here.

[LOCATION] ①: J/B No.1 (See page 20) ②: R/B No.2 (See page 19) ③: R/B No.4 (See page 23)

198	198	198	190	190	190	190	131	106	106	110 242 247	110 242 252	206	110 255	121	124	118	106	121	124	118	106	228	211 228	211 228	211	226	224	114
Power Seat Motor (Driver's Seat Rear Vertical Control)	Power Seat Motor (Driver's Seat Reclining Motor Control)	Power Seat Motor (Driver's Seat Slide Control)	Power Seat Motor (Passenger's Seat Reclining Control)	Power Seat Motor (Passenger's Seat Front Vertical Control)	Power Seat Motor (Passenger's Seat Rear Vertical Control)	Power Seat Motor (Passenger's Seat Lumber Support Control)	Automatic Light Control Sensor	Parking Light LH	Parking Light RH	Radio and Player (w/ CD Player)	Radio and Player (w/o CD Player)	Remote Control Mirror ECU	Rheostat	Back-Up Light LH (Rear Comb. Light LH)	Rear Turn Signal Light LH (Rear Comb. Light LH)	Stop Light LH (Rear Comb. Light LH)	Taillight LH (Rear Comb. Light LH)	Back-Up Light RH (Rear Comb. Light RH)	Rear Turn Signal Light RH (Rear Comb. Light RH)	Stop Light RH (Rear Comb. Light RH)	Taillight RH (Rear Comb. Light RH)	Rear Window Defogger	Remote Control Mirror LH	Remote Control Mirror RH	Remote Control Mirror SW	Seat Heater SW (M/T)	Shift Lock ECU	Step Light
P18	P19	P20	P21	P23	P24	P25	P26	P27	P28	R 3	R 4	R 6	R 8	R 9			R10			R13	R15	R16	R17	S 8	S 9	S12		
●	●	●	●	●	●	●															●							
							●					●				●				●			●			●		
							●																					
								●																				
										●	●	●											●	●	●		●	
								●	●	●	●	●	●										●	●	●		●	

H POWER SOURCE (Current Flow Chart)

*1: 2JZ-GE
*2: 1UZ-FE

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		74, 86, 118, 152, 160, 168, 178, 184, 190, 224		247		247		226		226		226		226		86 255		137		137 144 148 232		137 148 232 255		200		200		110 226		168		110 255		244		230		190 230		74, 86, 152, 160, 184, 222, 255	
											Stop Light SW		Stereo Power Amplifier		Seat Heater (Driver's Seat Back)		Seat Heater (Driver's Seat Cushion)		Seat Heater (Passenger's Seat Back)		Seat Heater (Passenger's Seat Cushion)		Short Connector		Theft Deterrent Horn		Theft Deterrent and Door Lock Control ECU		Theft Deterrent and Door Lock Control ECU		Tilt and Power Telescopic ECU		Traction Cut SW and Seat Heater SW		Throttle Driver		Trip SW and Theft Deterrent Indicator Light		Telephone Transceiver and Speaker Relay		Tension Reducer Solenoid LH		Tension Reducer Solenoid RH		Vehicle Speed Sensor No.1					
			S13		S14		S15		S16		S17		S18		S19		S23		T 1		T 7		T 8		T 9		T10		T11		T12		T14		T15		T17		T18		V 1									
①	50A	DEF																																																
	30A	DOOR																																																
	30A	PWR																																																
	15A	STOP																																																
	15A	ECU-B																																																
	10A	MIR-HTR																																																
	10A	HTR																																																
	7.5A	TURN																																																
	20A	WIPER																																																
	10A	GAUGE																																																
	15A	ECU-IG																																																
	7.5A	ENGINE																																																
	7.5A	IGN																																																
	15A	CIG																																																
	7.5A	RADIO NO.2																																																
	7.5A	TAIL																																																
	7.5A	PANEL																																																
7.5A	ST																																																	
②	15A	TEL																																																
	10A	DOME																																																
	20A	RADIO NO.1																																																
	15A	HAZ-HORN																																																
	30A	EFI																																																

* There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily, on the page indicated here.

[LOCATION] ①: J/B No.1 (See page 20) ②: R/B No.2 (See page 19) ③: R/B No.4 (See page 23)

④: R/B No. 5 (See page 23) ⑤: R/B No. 6 (See page 24)

H POWER SOURCE (Current Flow Chart)

*1: 2JZ-GE
*2: 1UZ-FE

Location	*Page Nos. of Related Systems		168 178
	Parts	Code or Location	ABS SOL Relay
	CB or Fuse		⑤
①	50A	DEF	
	30A	DOOR	
	30A	PWR	
	15A	STOP	
	15A	ECU-B	
	10A	MIR-HTR	
	10A	HTR	
	7.5A	TURN	
	20A	WIPER	
	10A	GAUGE	●
	15A	ECU-IG	
	7.5A	ENGINE	
	7.5A	IGN	
	15A	CIG	
	7.5A	RADIO NO.2	
	7.5A	TAIL	
	7.5A	PANEL	
	7.5A	ST	
②	15A	TEL	
	10A	DOME	
	20A	RADIO NO.1	
	15A	HAZ-HORN	
	30A	EFI	
	7.5A	ALT SENCING	
	15A	HEAD (LH) *1	
	15A	HEAD (RH) *1	
	15A	HEAD (LH-LWR) *2	
	15A	HEAD (RH-LWR) *2	
	15A	HEAD (LH-UPR) *2	
	15A	HEAD (RH-UPR) *2	
	60A	HTR	
	7.5A	TRAC	
	7.5A	DRL (Canada)	
③	15A	SEAT-HTR	
	15A	FOG	

* There are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily, on the page indicated here.

[LOCATION] ①: J/B No.1 (See page 20) ②: R/B No.2 (See page 19) ③: R/B No.4 (See page 23)
④: R/B No.5 (See page 23) ⑤: R/B No.6 (See page 24)