



## SERVICE HINTS

### HEAD RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

### C15 LIGHT CONTROL SW [COMB. SW]

13-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

### C15 DIMMER SW [COMB. SW]

7-18 : CLOSED WITH DIMMER SW AT **FLASH** POSITION

9-18 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13 B	30	F 9	26	H 3	26
C15	30	H 1	26	H 4	26
C25 D	30	H 2	26	I16	31

## ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3A	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IE2	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IG1	40	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IG3	40	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)

 
## ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36	FRONT SIDE OF LEFT FENDER
IF	40	LEFT KICK PANEL


## ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	36	ENGINE ROOM MAIN WIRE	I 3	42	COWL WIRE
E 2			I 7		
E 3					


C13 ⑨ BLUE




C15

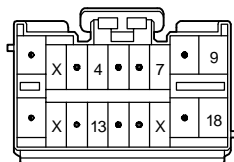


C25 ⑩ ORANGE

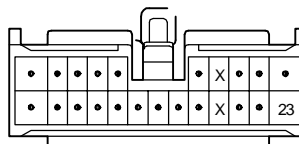


F 9

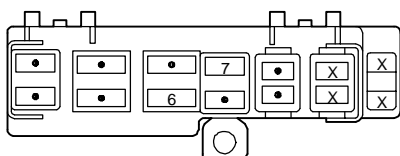

H1, H2 BLACK

 

H3, H4 BROWN

 

I16

