


REMOTE CONTROL MIRROR (w/o DRIVING POSITION MEMORY)

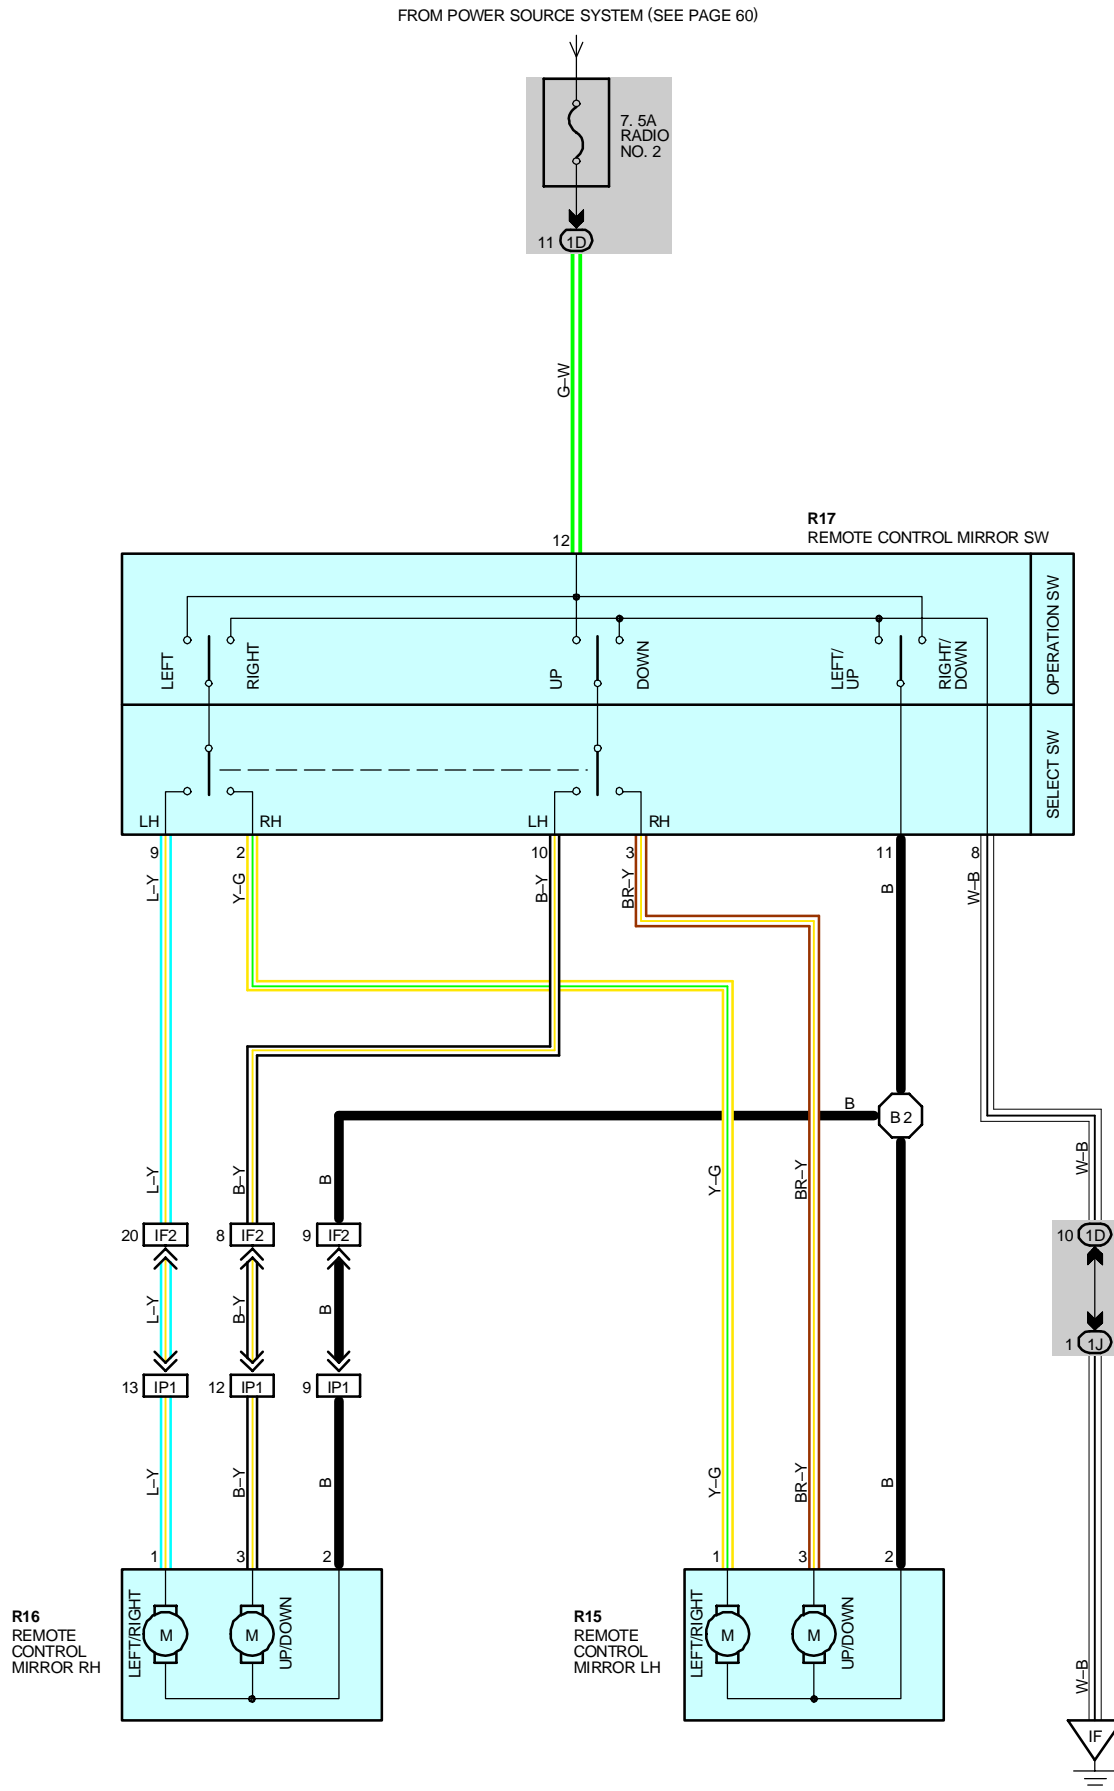



REMOTE CONTROL MIRROR (w/o DRIVING POSITION MEMORY)

SERVICE HINTS

R17 REMOTE CONTROL MIRROR SW

- 12-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION
- 11-8 : CONTINUITY WITH OPERATION SW AT **LEFT** OR **UP** POSITION
- 3-11 : CONTINUITY WITH OPERATION SW AT **RIGHT** OR **DOWN** POSITION
- 8-GROUND : ALWAYS CONTINUITY



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
R15	33	R16	33	R17	33



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1D	20	FRONT DOOR LH WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF2	40	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IP1	42	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)



: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
IF	40	LEFT KICK PANEL



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B2	44	FRONT DOOR LH WIRE			

R 15, R 16

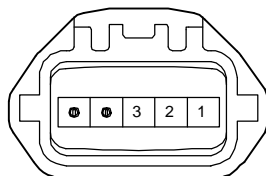

R 17

