





RADIO AND PLAYER (w/o CD PLAYER)

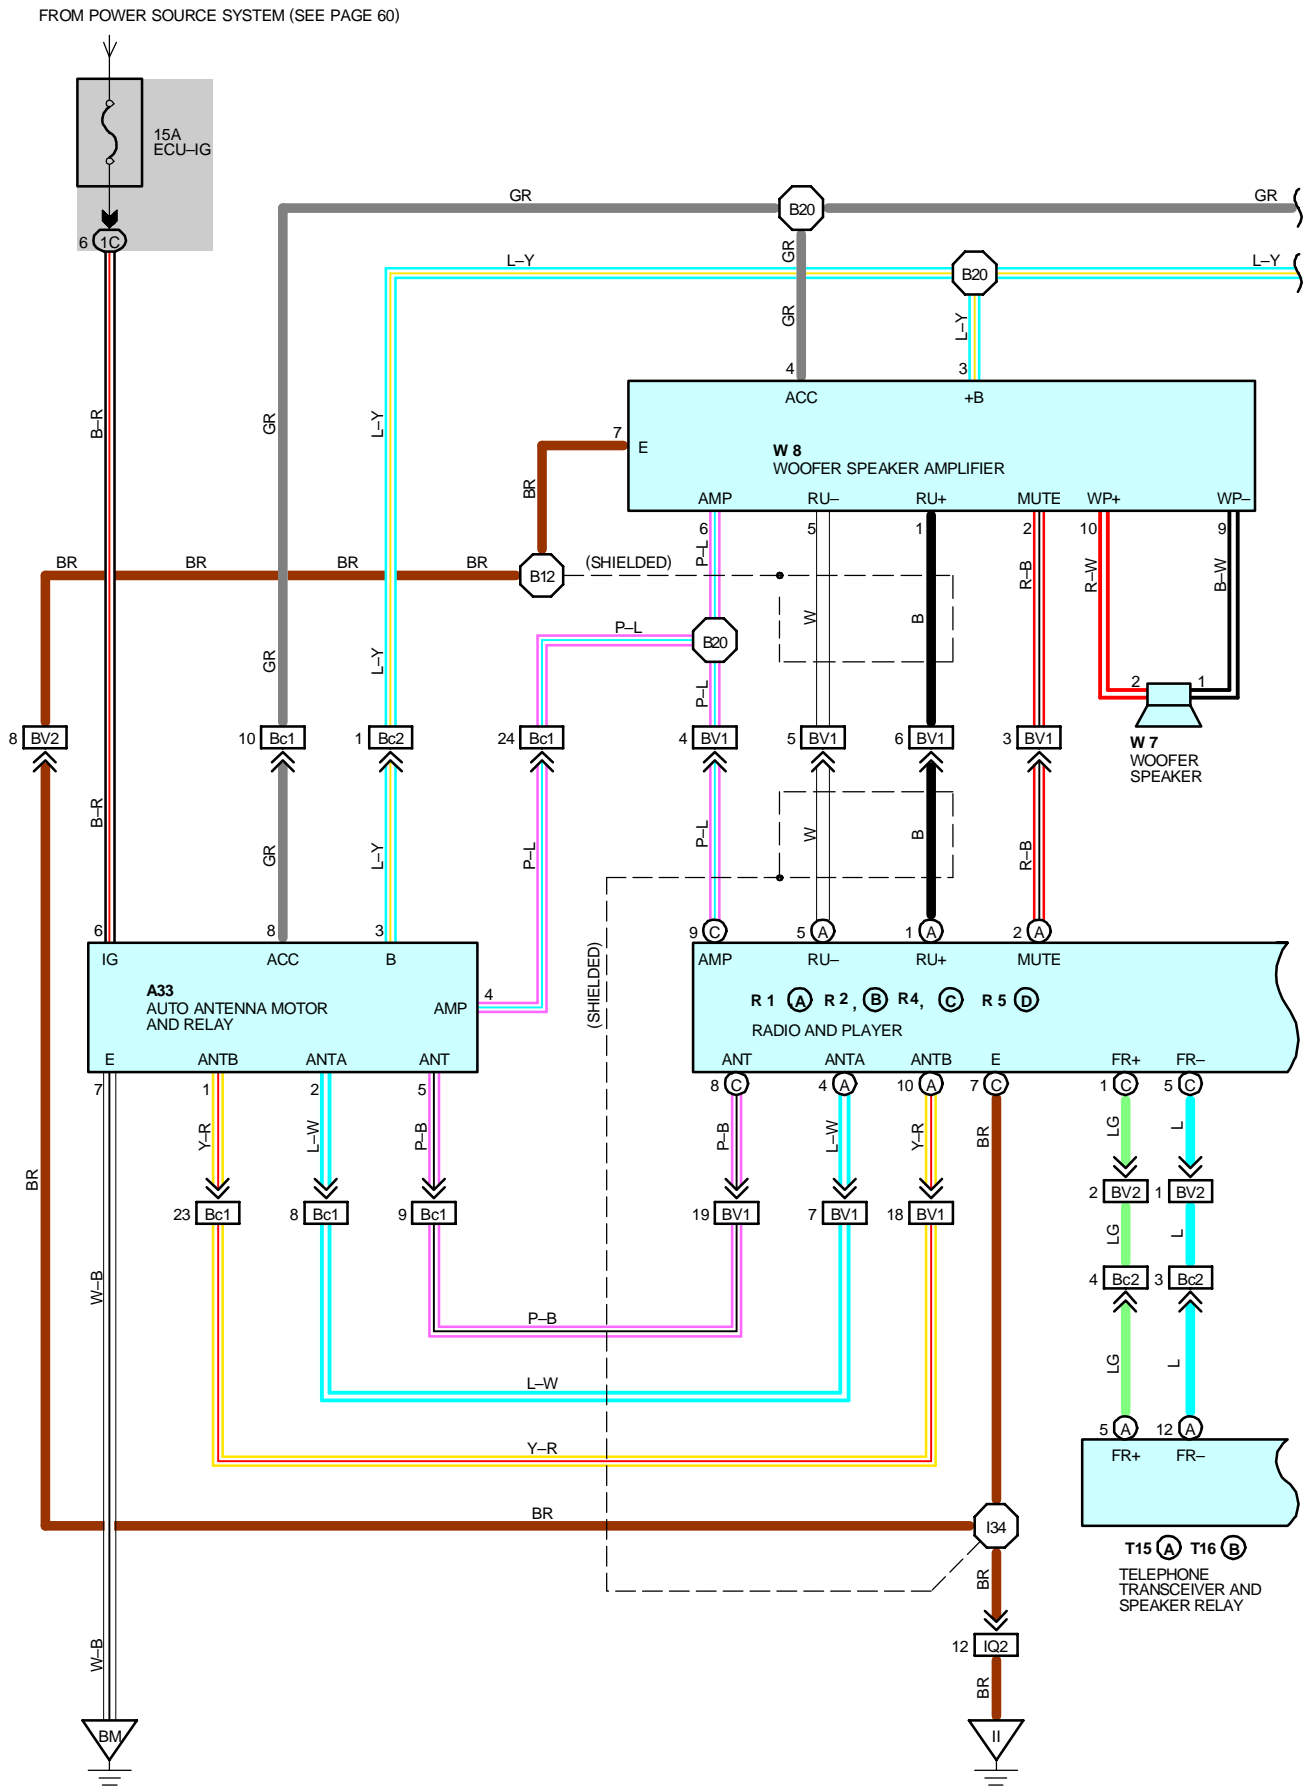

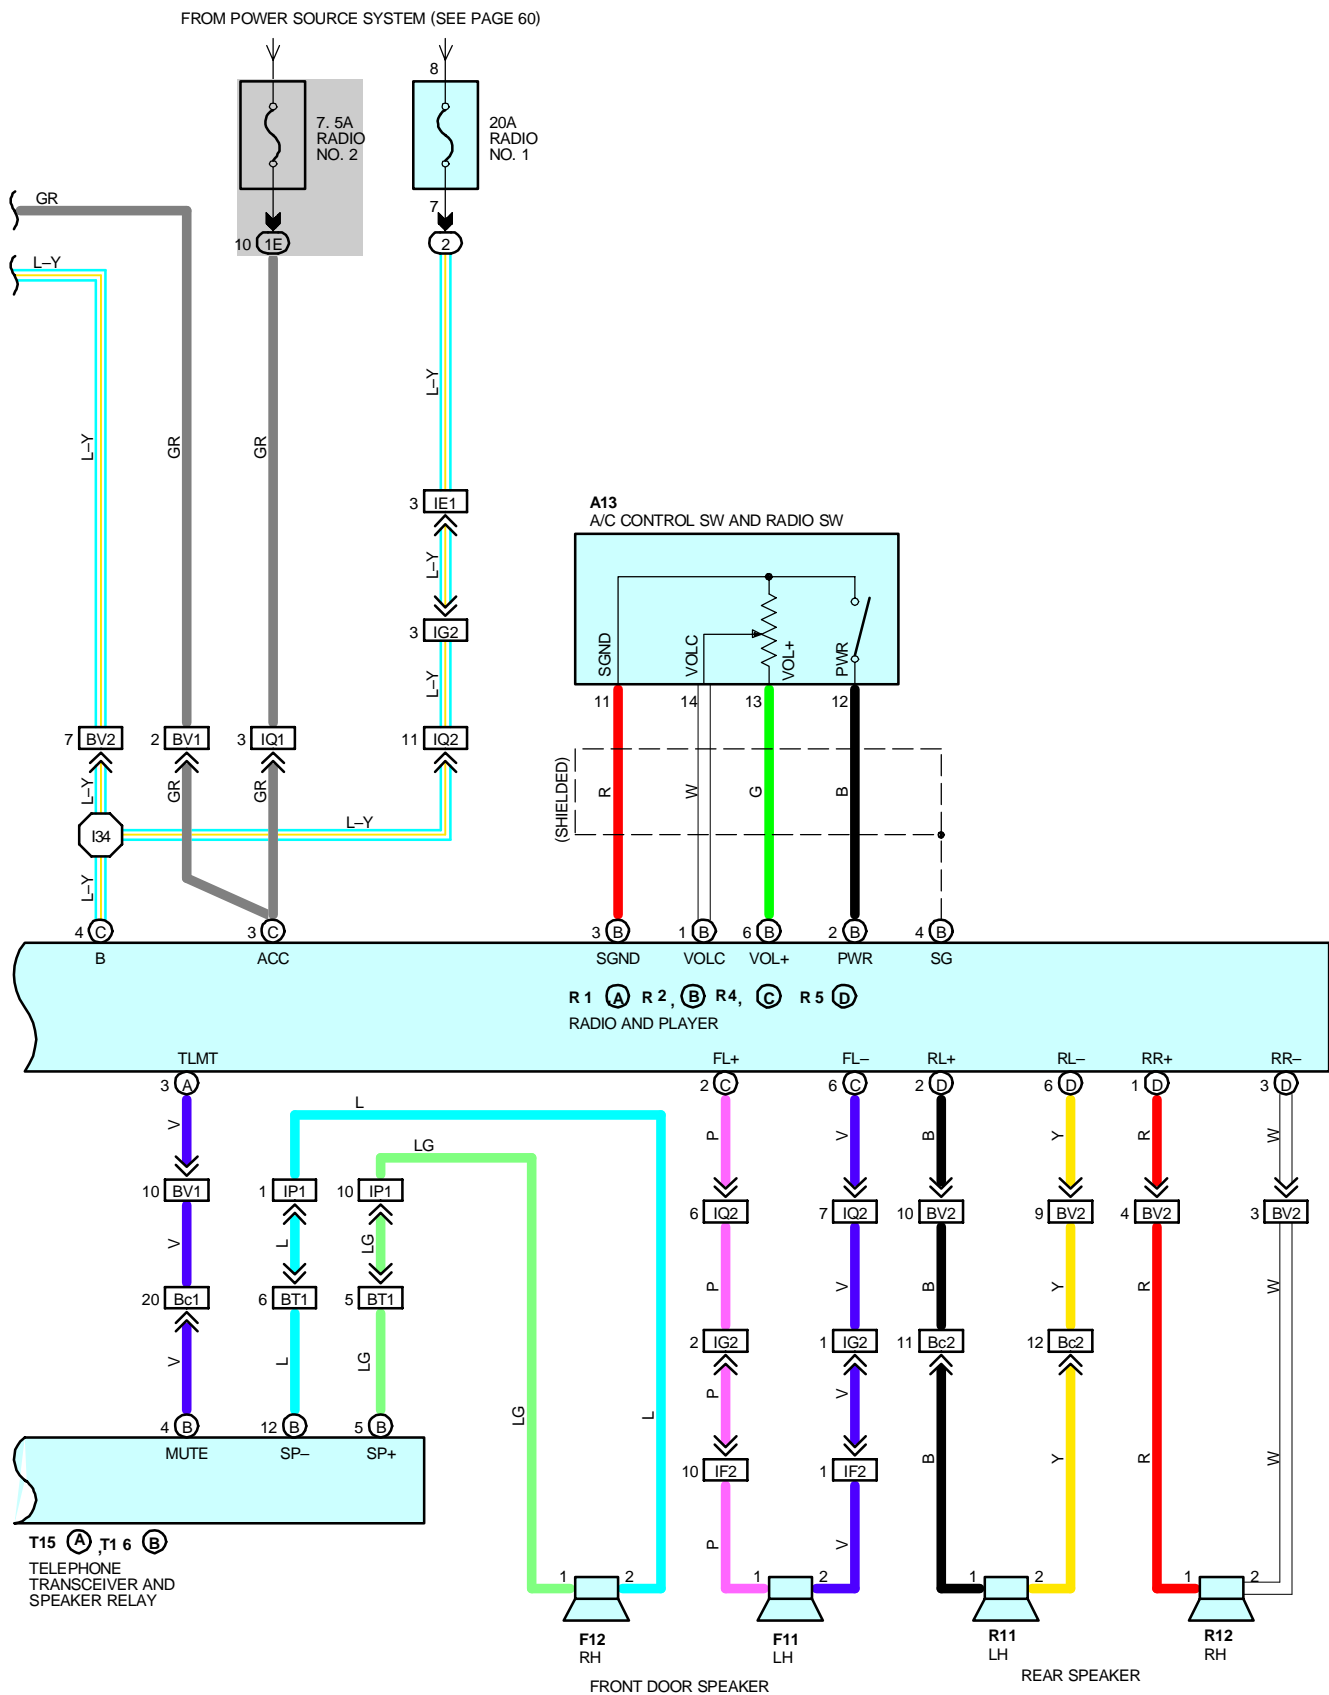



RADIO AND PLAYER (w/o CD PLAYER)

SERVICE HINTS

R4 (C) RADIO AND PLAYER

(C) 3-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT ACC OR ON POSITION

(C) 4-GROUND: ALWAYS APPROX. 12 VOLTS

(C) 7-GROUND: ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A13	30	R2	B 31	T15	A 33
A33	32	R4	C 31	T16	B 33
F11	32	R5	D 31	W7	33
F12	32	R11	33	W8	33
R1	A 31	R12	33		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	FLOOR MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IF2	40	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IG2	40	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)
IP1	42	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
IQ1	42	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT CENTER)
IQ2	42	
BT1	44	FLOOR MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BV1	44	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BV2	44	
Bc1	44	FLOOR NO. 3 WIRE AND FLOOR MAIN WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)
Bc2	44	

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
II	40	UNDER THE ASHTRAY RH
BM	44	BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I34	42	CONSOLE BOX WIRE	B20	44	FLOOR NO. 3 WIRE
B12	44	FLOOR NO. 3 WIRE			

