


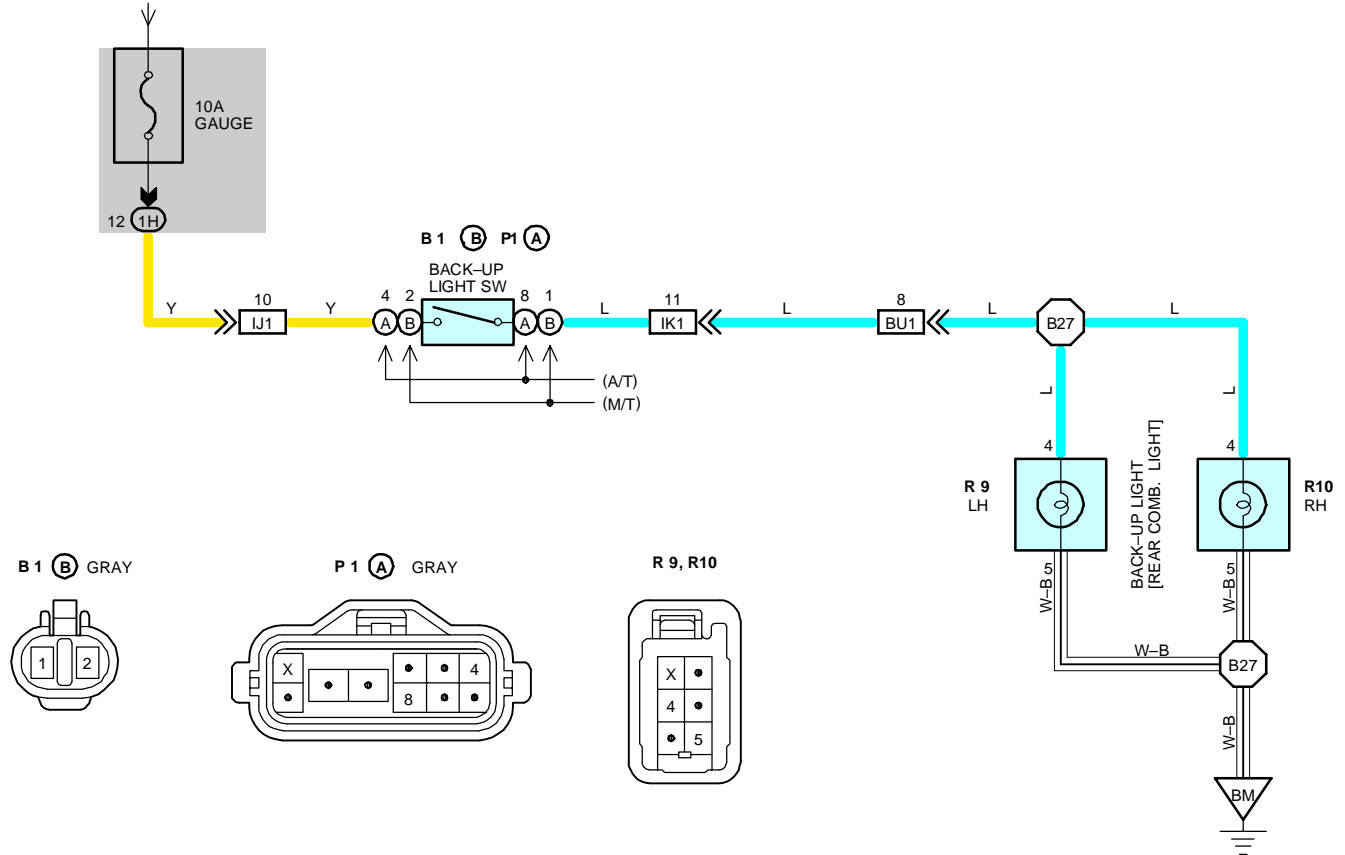

FROM POWER SOURCE SYSTEM (SEE PAGE 60)



SERVICE HINTS

B 1 (B), P 1 (A) BACK-UP LIGHT SW

(B) 2-1, (A) 4-8 : CLOSED WITH SHIFT LEVER IN R POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	B	28(2JZ-GE)	R 9	33	
P 1	A	27(1UZ-FE), 29(2JZ-GE)	R10	33	

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1H	20	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IJ1	40	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
IK1	40	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
BU1	44	INSTRUMENT PANEL WIRE AND FLOOR MAIN WIRE (LEFT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BM	44	BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B27	44	FLOOR MAIN WIRE			