


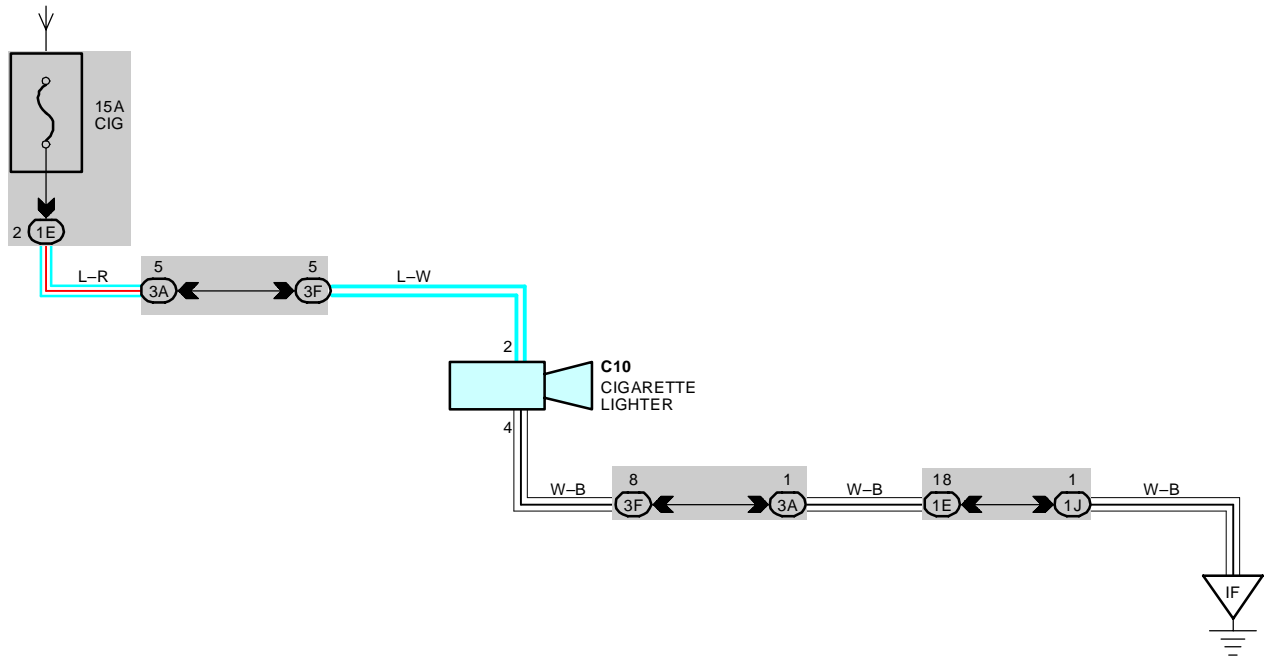

FROM POWER SOURCE SYSTEM (SEE PAGE 60)



SERVICE HINTS

C10 CIGARETTE LIGHTER

2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC** OR **ON** POSITION

4-GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C10	30				

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
3A	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3F		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	40	LEFT KICK PANEL

C10 BLUE

