



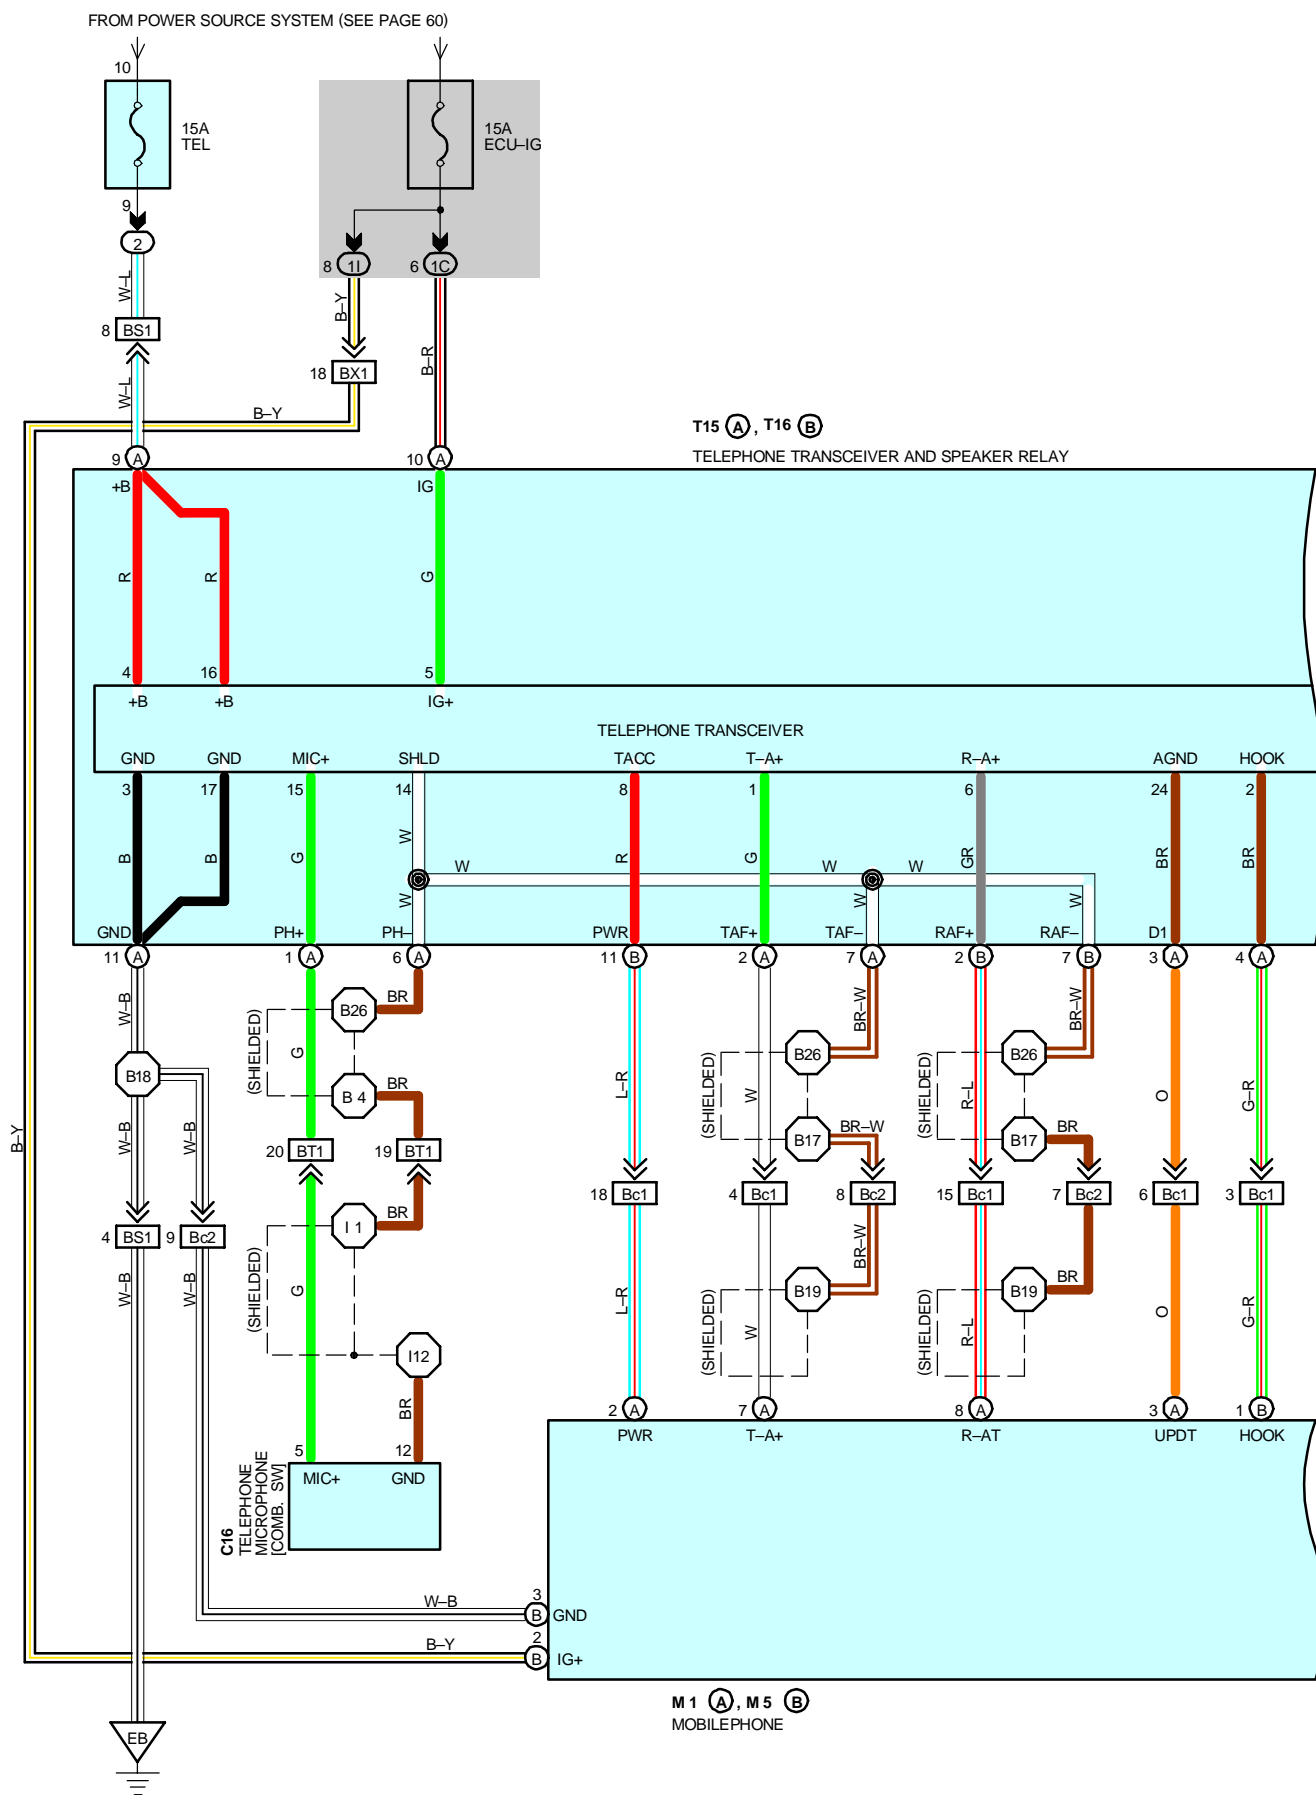

# CELLULAR MOBILE TELEPHONE

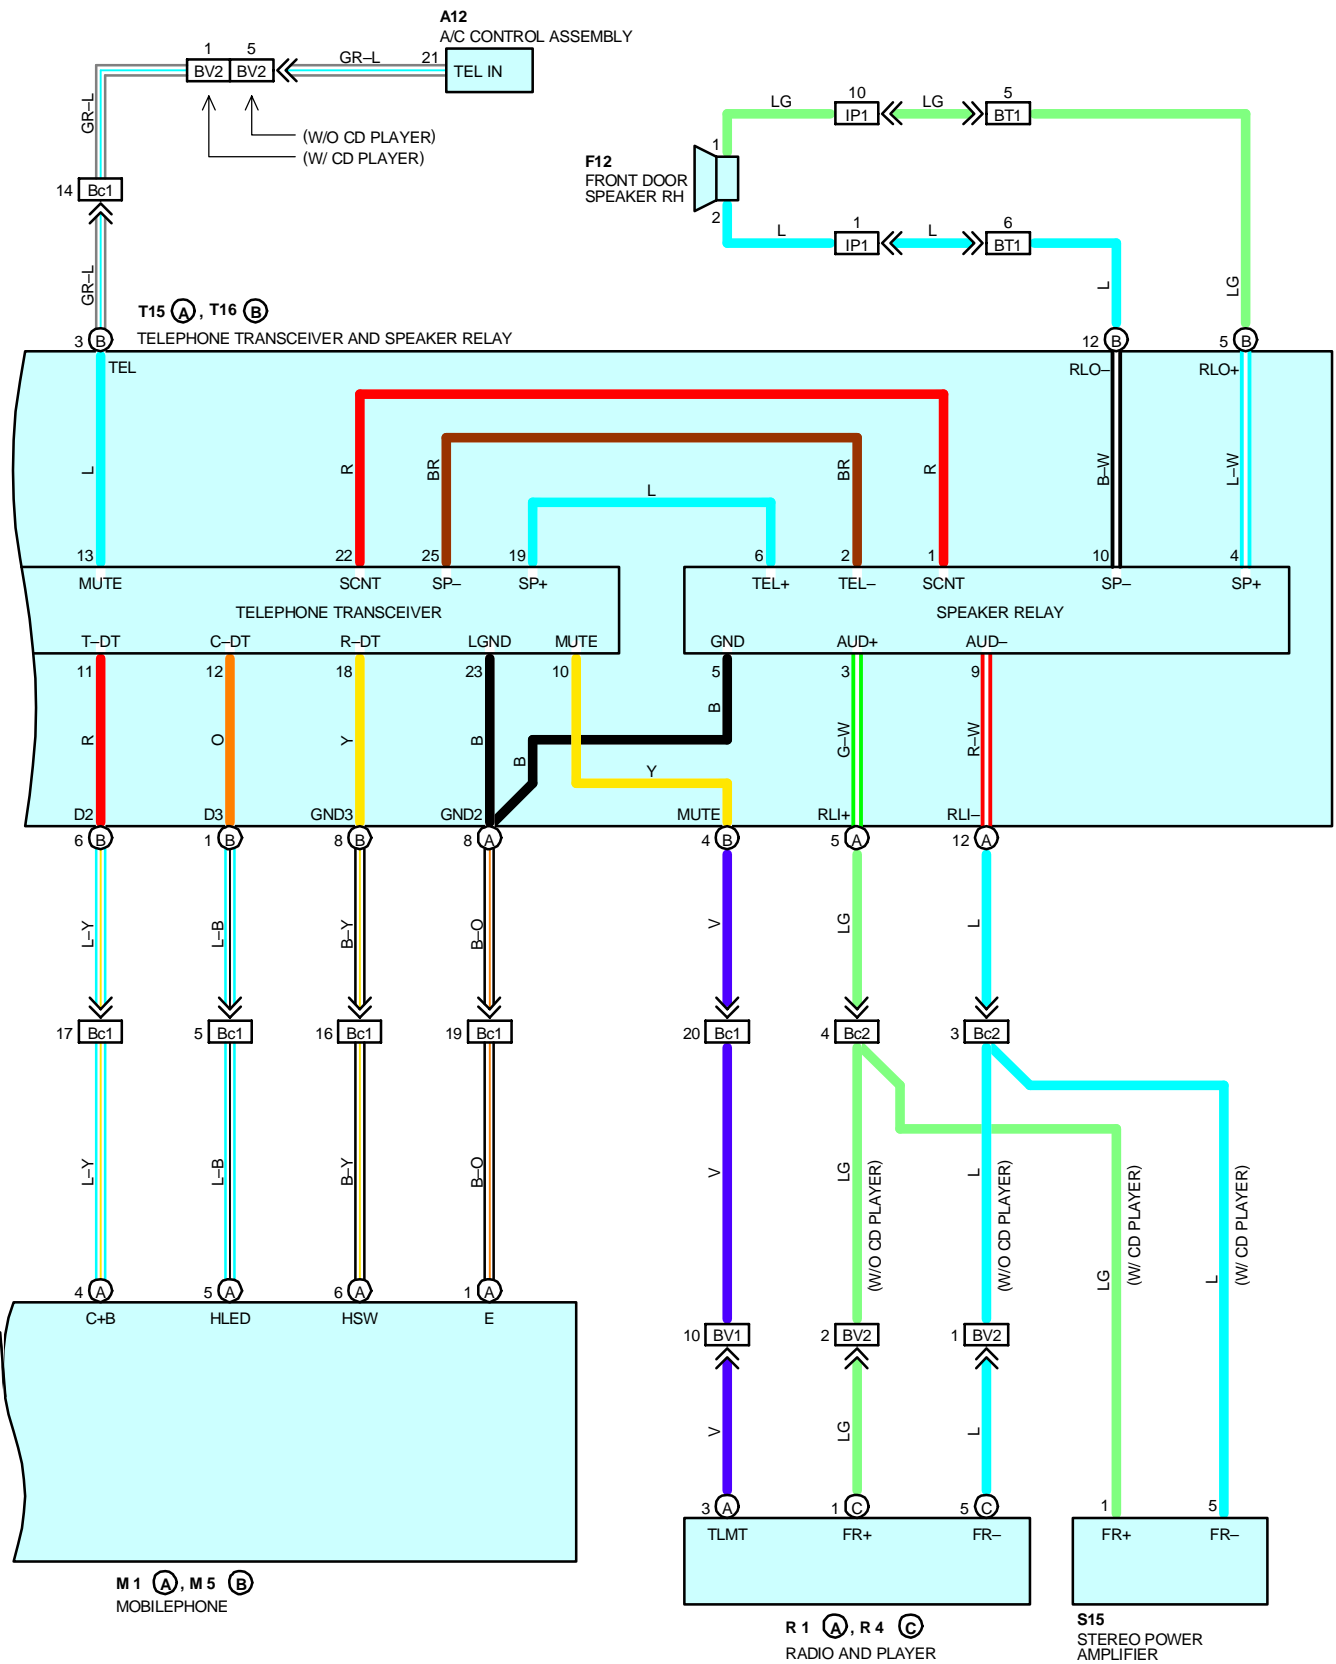





# CELLULAR MOBILE TELEPHONE

## SERVICE HINTS

### T15 (A) TELEPHONE TRANSCEIVER AND SPEAKER RELAY

(A) 9-GROUND : ALWAYS APPROX. 12 VOLTS

(A) 10-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A) 11-GROUND : ALWAYS CONTINUITY

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A12	30	M5	B 33	T15	A 33
C16	30	R1	A 31	T16	B 33
F12	32	R4	C 31		
M1	A 33	S15	33		

### ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	FLOOR MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1I	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IP1	42	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BS1	44	ENGINE ROOM MAIN WIRE AND FLOOR MAIN WIRE (LEFT KICK PANEL)
BT1	44	FLOOR MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
BV1		
BV2	44	FLOOR NO. 3 WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT PANEL CENTER)
BX1	44	FLOOR NO. 3 WIRE AND COWL WIRE (RIGHT KICK PANEL)
Bc1		
Bc2	44	FLOOR NO. 3 WIRE AND FLOOR MAIN WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	36 (1UZ-FE) 38 (2JZ-GE)	FRONT SIDE OF LEFT FENDER

### ○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I1			B18	44	FLOOR MAIN WIRE
I12	42	COWL WIRE	B19	44	FLOOR MO 3. WIRE
B4			B26	44	FLOOR MAIN WIRE
B17	44	FLOOR MAIN WIRE			

