




ELECTRIC TENSION REDUCER

FROM POWER SOURCE SYSTEM (SEE PAGE 60)

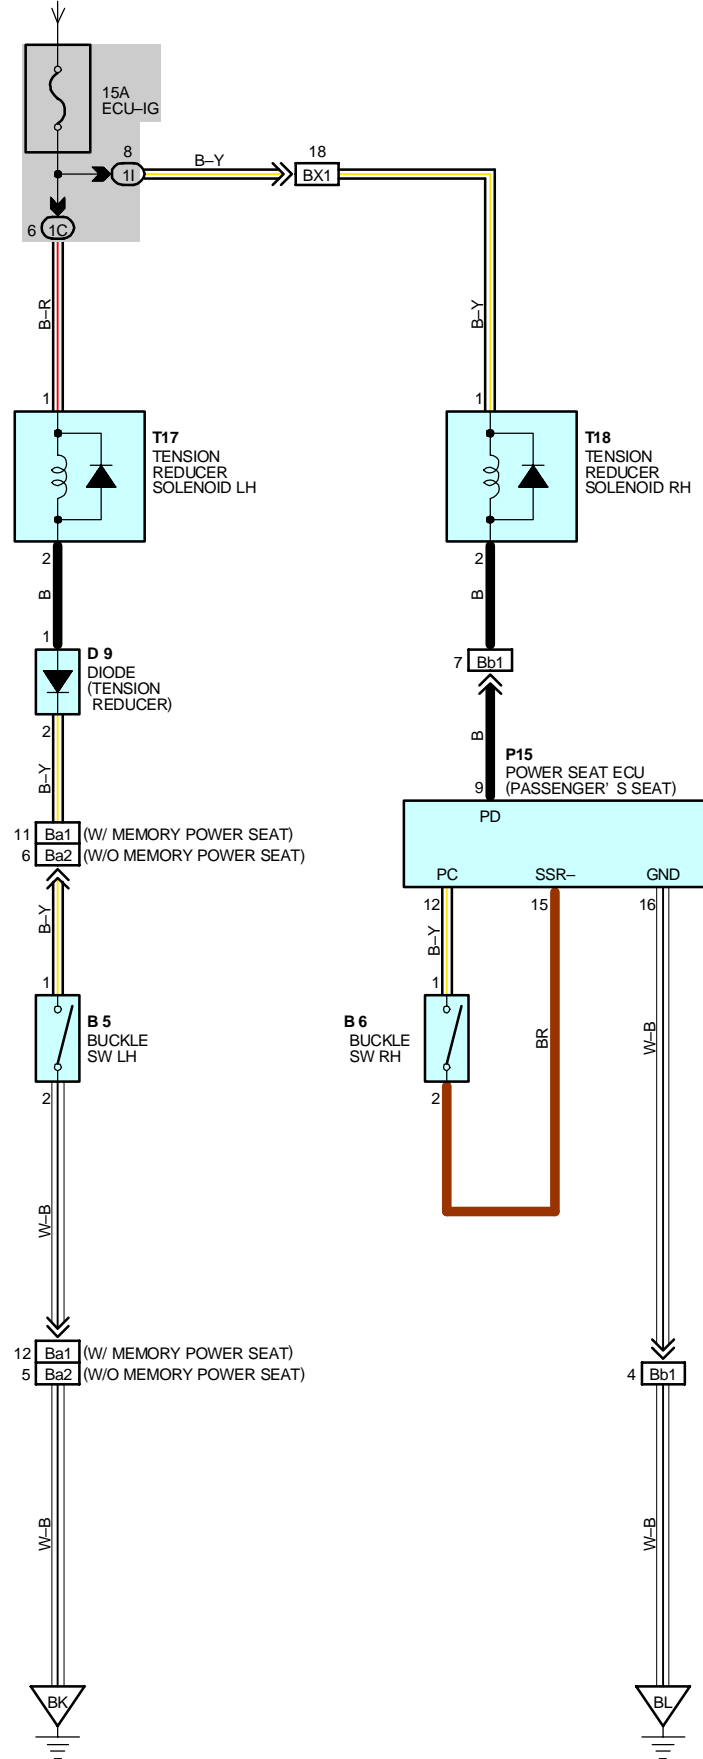

SERVICE HINTS

B 5 BUCKLE SW LH

1-2-CLOSED WITH DRIVER'S SEAT BELT IN USE

B 6 BUCKLE SW RH

1-2-CLOSED WITH PASSENGER'S SEAT BELT IN USE

T17, T18 TENSION REDUCER SOLENOID LH, RH

2-GROUND:APPROX. 121 VOLTS WITH IGNITION SW AT ON POSITON

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 5	34	D 9	30	T17	33
B 6	34	P15	34	T18	33

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	FLOOR MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
1I	20	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
bx1	44	FLOOR NO.3 WIRE AND COWL WIRE (RIGHT KICK PANEL)
Ba1	46	FLOOR MAIN WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)
Ba2		
Bb1	46	FLOOR NO.3 WIRE AND FRONT SEAT RH WIRE (UNDER THE FRONT RH SEAT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BK	44	UNDER THE CENTER PILLAR LH
BL	44	UNDER THE CENTER PILLAR RH

B 5, B 6 ORANGE

D 9 BLACK

P15

T17, T18

