



SERVICE HINTS

FOG LIGHT RELAY

(5) 3–(5) 5 : CLOSED WITH DIMMER SW AT **LOW** POSITION AND FOG LIGHT SW **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C15	30	F19	26(1UZ-FE), 28(2JZ-GE)		
C16	30	F20	26(1UZ-FE), 28(2JZ-GE)		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO.2 (ENGINE COMPARTMENT LEFT)
4	23	R/B NO.4 (FRONT SIDE OF J/B NO.1)
5	23	R/B NO.5 (REAR SIDE OF J/B NO.1)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1J	20	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1K		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO.4)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	36(1UZ-FE)	FRONT SIDE OF RIGHT FENDER
	38(2JZ-GE)	
IF	40	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	36(1UZ-FE)	ENGINE ROOM MAIN WIRE	E10	36(1UZ-FE)	ENGINE ROOM MAIN WIRE
	38(2JZ-GE)			38(2JZ-GE)	

