







INTERIOR LIGHT

SERVICE HINTS

INTEGRATION RELAY (J/B NO.1)

(1B) 5-GROUND : ALWAYS APPROX. 12 VOLTS

(1D) 8-GROUND : CONTINUITY WITH FRONT LH DOOR OPEN

(1I) 6-GROUND : CONTINUITY WITH FRONT RH DOOR OPEN

D16, D17 DOOR OPEN DETECTION SW LH, RH

3-6 : CLOSED WITH DOOR OPEN

L 7 LUGGAGE COMPARTMENT LIGHT SW

1-GROUND : CLOSED WITH LUGGAGE COMPARTMENT DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C25	30	I14	31	P 6	33
D11	32	I16	A 31	S12	31
D12	32		B 31	V 9	33
D16	32	L 6	32	V10	33
D17	32	L 7	32		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO.2 (ENGINE COMPARTMENT LEFT)
4	23	R/B NO.4 (FRONT SIDE OF J/B NO.1)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
1D	20	FRONT DOOR LH WIRE AND J/B NO.1 (LEFT KICK PANEL)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1F	20	ROOF WIRE AND J/B NO.1 (LEFT KICK PANEL)
1H	20	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1I		
1J		
1K		
3A	22	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IF2	40	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
IP1	42	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BX1	44	FLOOR NO.3 WIRE AND COWL WIRE (RIGHT KICK PANEL)
Bc1	44	FLOOR NO.3 WIRE AND FLOOR MAIN WIRE (UNDER LEFT SIDE OF REAR SEAT CUSHION)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	40	LEFT KICK PANEL
IJ	40	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	42	COWL WIRE	B 6	44	ROOF WIRE
I22			B 7		
B 1	44	FRONT DOOR LH WIRE	B15	44	FRONT DOOR RH WIRE

