







ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

5-3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

C15 LIGHT CONTROL SW [COMB. SW]

3-4 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A11	30	E 9	30	R 3	A 31
A13	30	F9	26 (1UZ-FE), 28 (2JZ-GE)	R 4	B 31
A19	30	G 3	31	R 5	C 31
C10	30	G 4	31	R 8	31
C12	A 30	H 9	31	T11	31
C15	30	I16	A 31	T14	31
C25	D 30		B 31		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K		
3A	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)
3C		
3E		
3F		
3G		
3H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IQ1	42	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT CENTER)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IF	40	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 8	42	INSTRUMENT PANEL WIRE	I32	42	CONSOLE BOX WIRE

