




# POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 60)

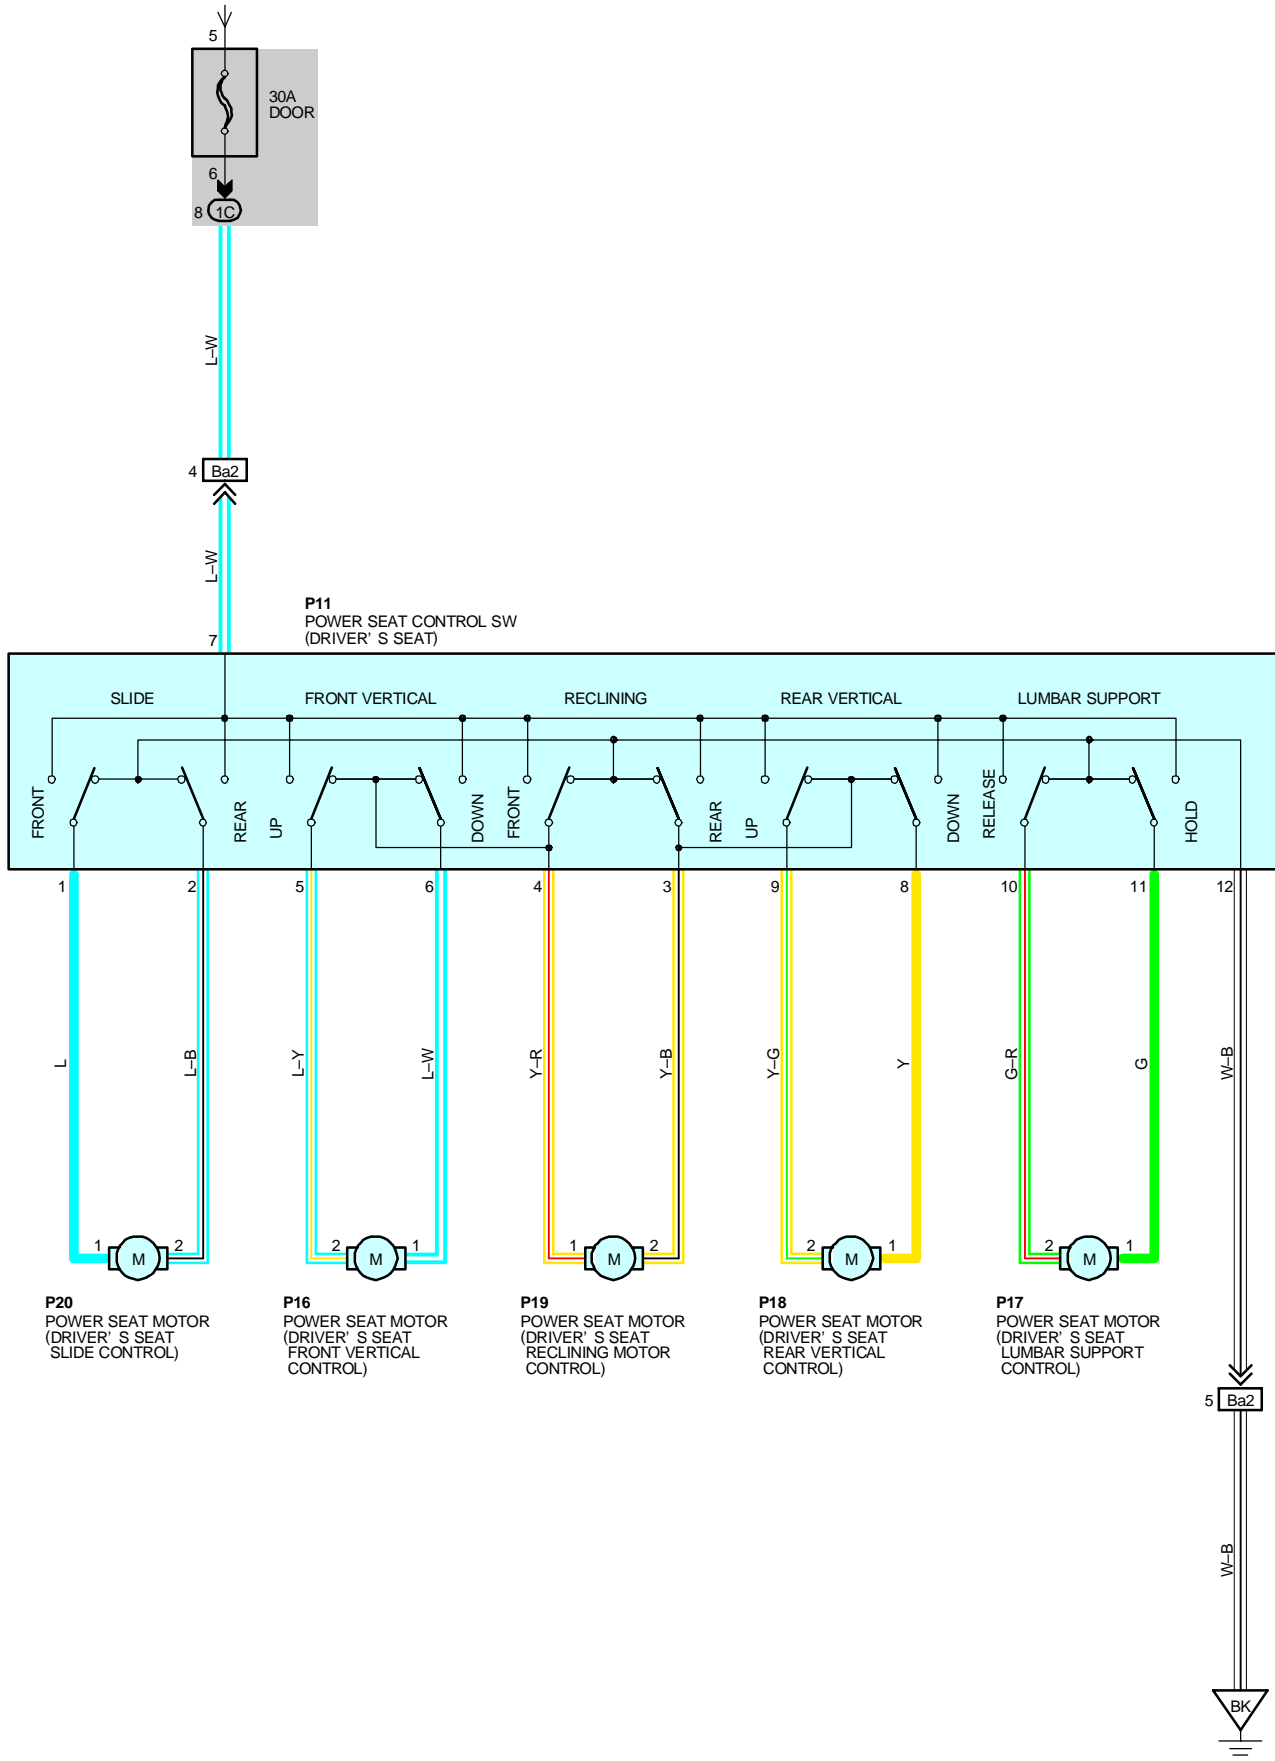

## (2JZ-GE w/o DRIVING POSITION MEMORY)

### SERVICE HINTS

#### P11 POWER SEAT CONTROL. SW (DRIVER'S SEAT)

12-GROUND: ALWAYS CONTINUITY

7-GROUND: ALWAYS APPROX. 12 VOLTS

### ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
P11	34	P17	34	P19	34
P16	34	P18	34	P20	34

### ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1C	20	FLOOR MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)

### □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
Ba2	46	FLOOR MAIN WIRE AND FRONT SEAT LH WIRE (UNDER THE FRONT LH SEAT)

### ▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BK	44	UNDER THE CENTER PILLAR LH

