


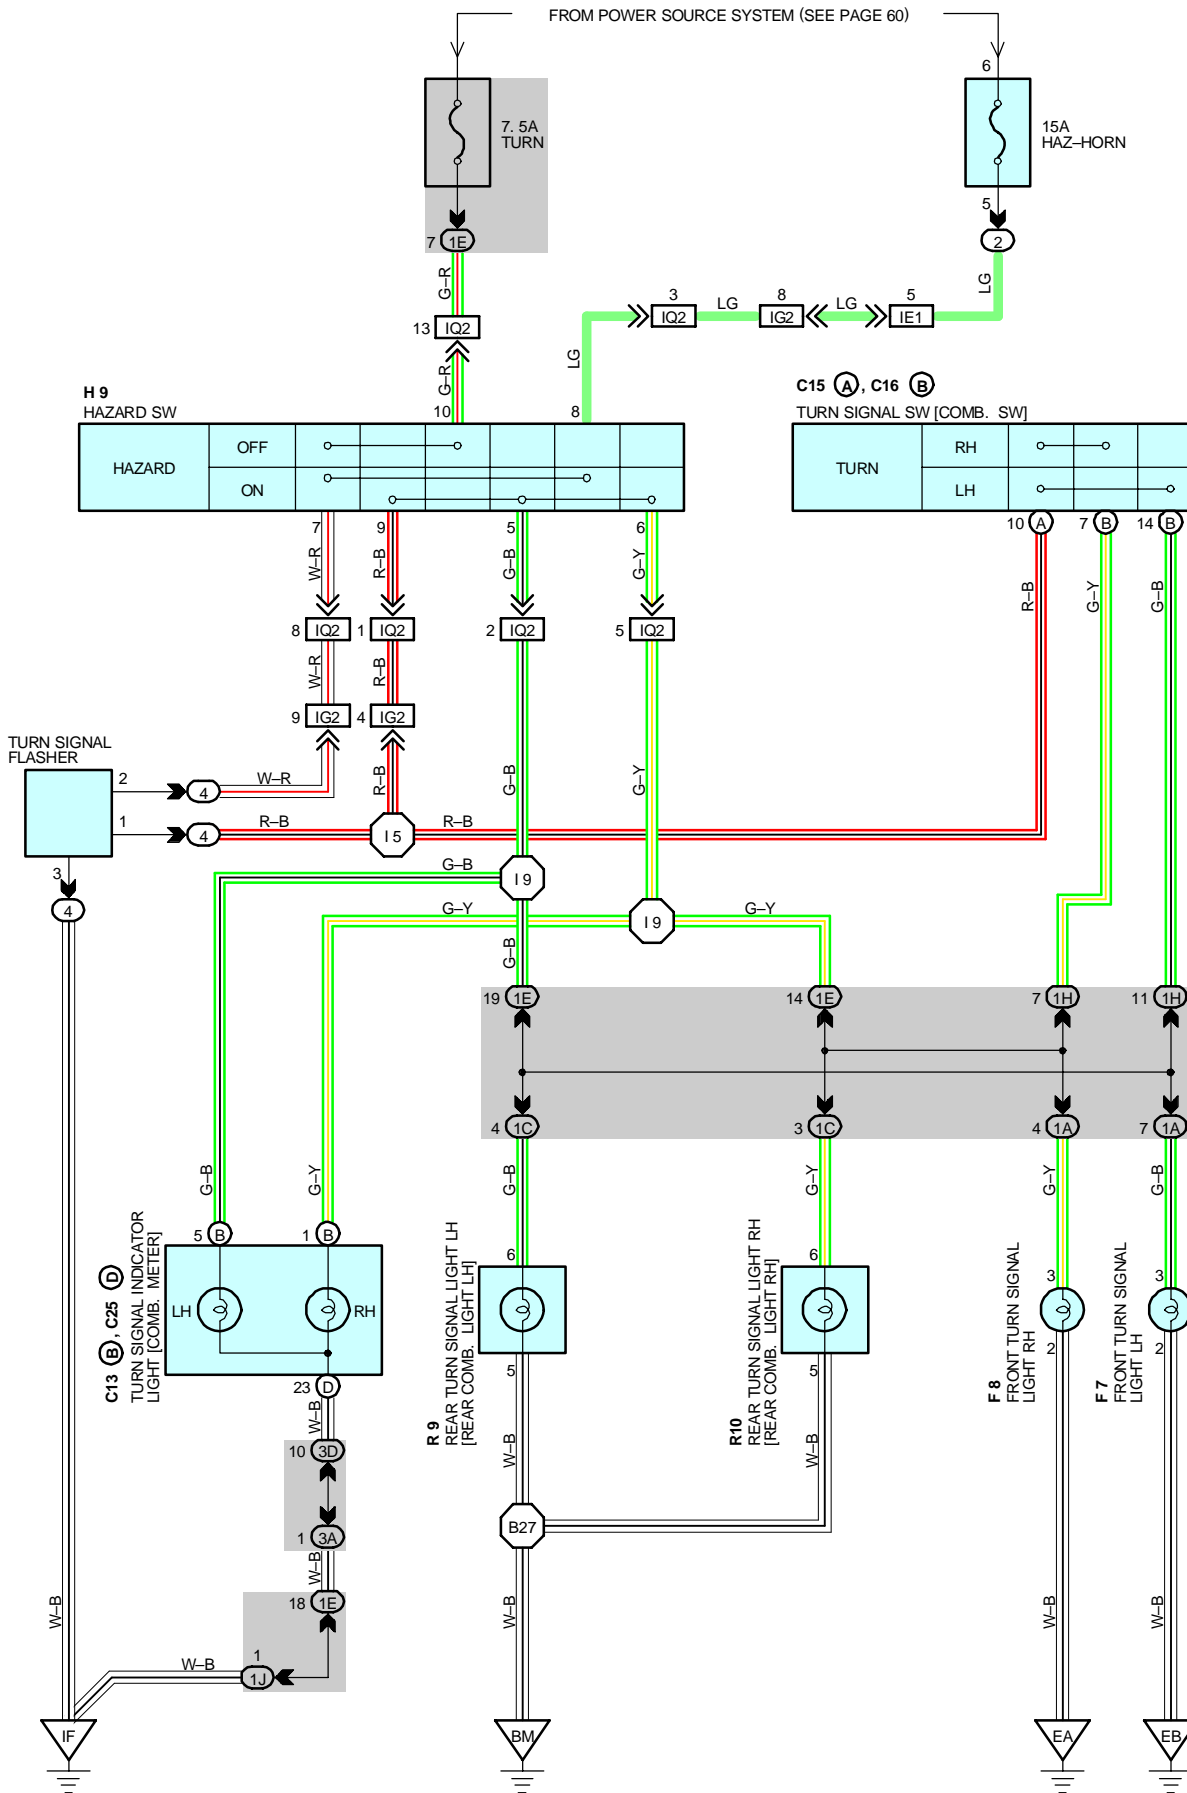

TURN SIGNAL AND HAZARD WARNING LIGHT



SERVICE HINTS

TURN SIGNAL FLASHER

- (4)1-GROUND : CHANGE FROM APPROX. 12 VOLTS TO 0 VOLTS WITH IGNITION SW ON AND TURN SIGNAL SW LEFT OR RIGHT
(4)3-GROUND : ALWAYS CONTINUITY
(4)2-GROUND : APPROX. 12 VOLTS WITH IGNITION SW ON OR HAZARD SW ON

: PARTS LOCATION

CODE			SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
C13	B	30		C25	D	30	H 9	31
C15	A	30		F 7		26(1UZ–FE), 28(2JZ–GE)	R 9	33
C16	B	30		F 8		26(1UZ–FE), 28(2JZ–GE)	R10	33

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO.2 (ENGINE COMPARTMENT LEFT)
4	23	R/B NO.4 (FRONT SIDE OF J/B NO.1)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	ENGINE ROOM MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
1C	20	FLOOR MAIN WIRE AND J/B NO.1 (LEFT KICK PANEL)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1H	20	COWL WIRE AND J/B NO.1 (LEFT KICK PANEL)
1J		
3A	20	INSTRUMENT PANEL WIRE AND J/B NO.3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO.4)
IG2	40	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO.5)
IQ2	42	INSTRUMENT PANEL WIRE AND CONSOLE BOX WIRE (UNDER THE INSTRUMENT CENTER)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	36(1UZ-FE)	FRONT SIDE OF RIGHT FENDER
	38(2JZ-GE)	
EB	36(1UZ-FE)	FRONT SIDE OF LEFT FENDER
	38((2JZ-GE)	
IF	40	LEFT KICK PANEL
BM	44	BACK PANEL CENTER


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 5	42	COWL WIRE	B27	44	FLOOR MAIN WIRE
I 9	42	INSTRUMENT PANEL WIRE			




TURN SIGNAL AND HAZARD WARNING LIGHT


C13 (B) BLUE

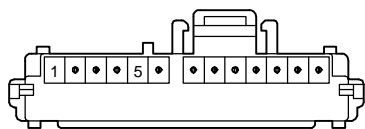


C15 (A)

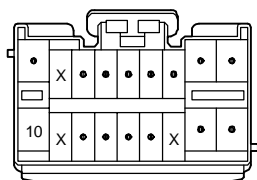

C16 (B) BLACK

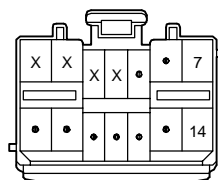


C25 (D) ORANGE

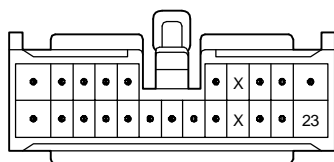

F 7, F 8 GRAY



H 9 BLACK

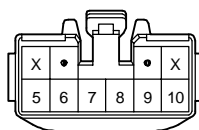

R 9, R10

