


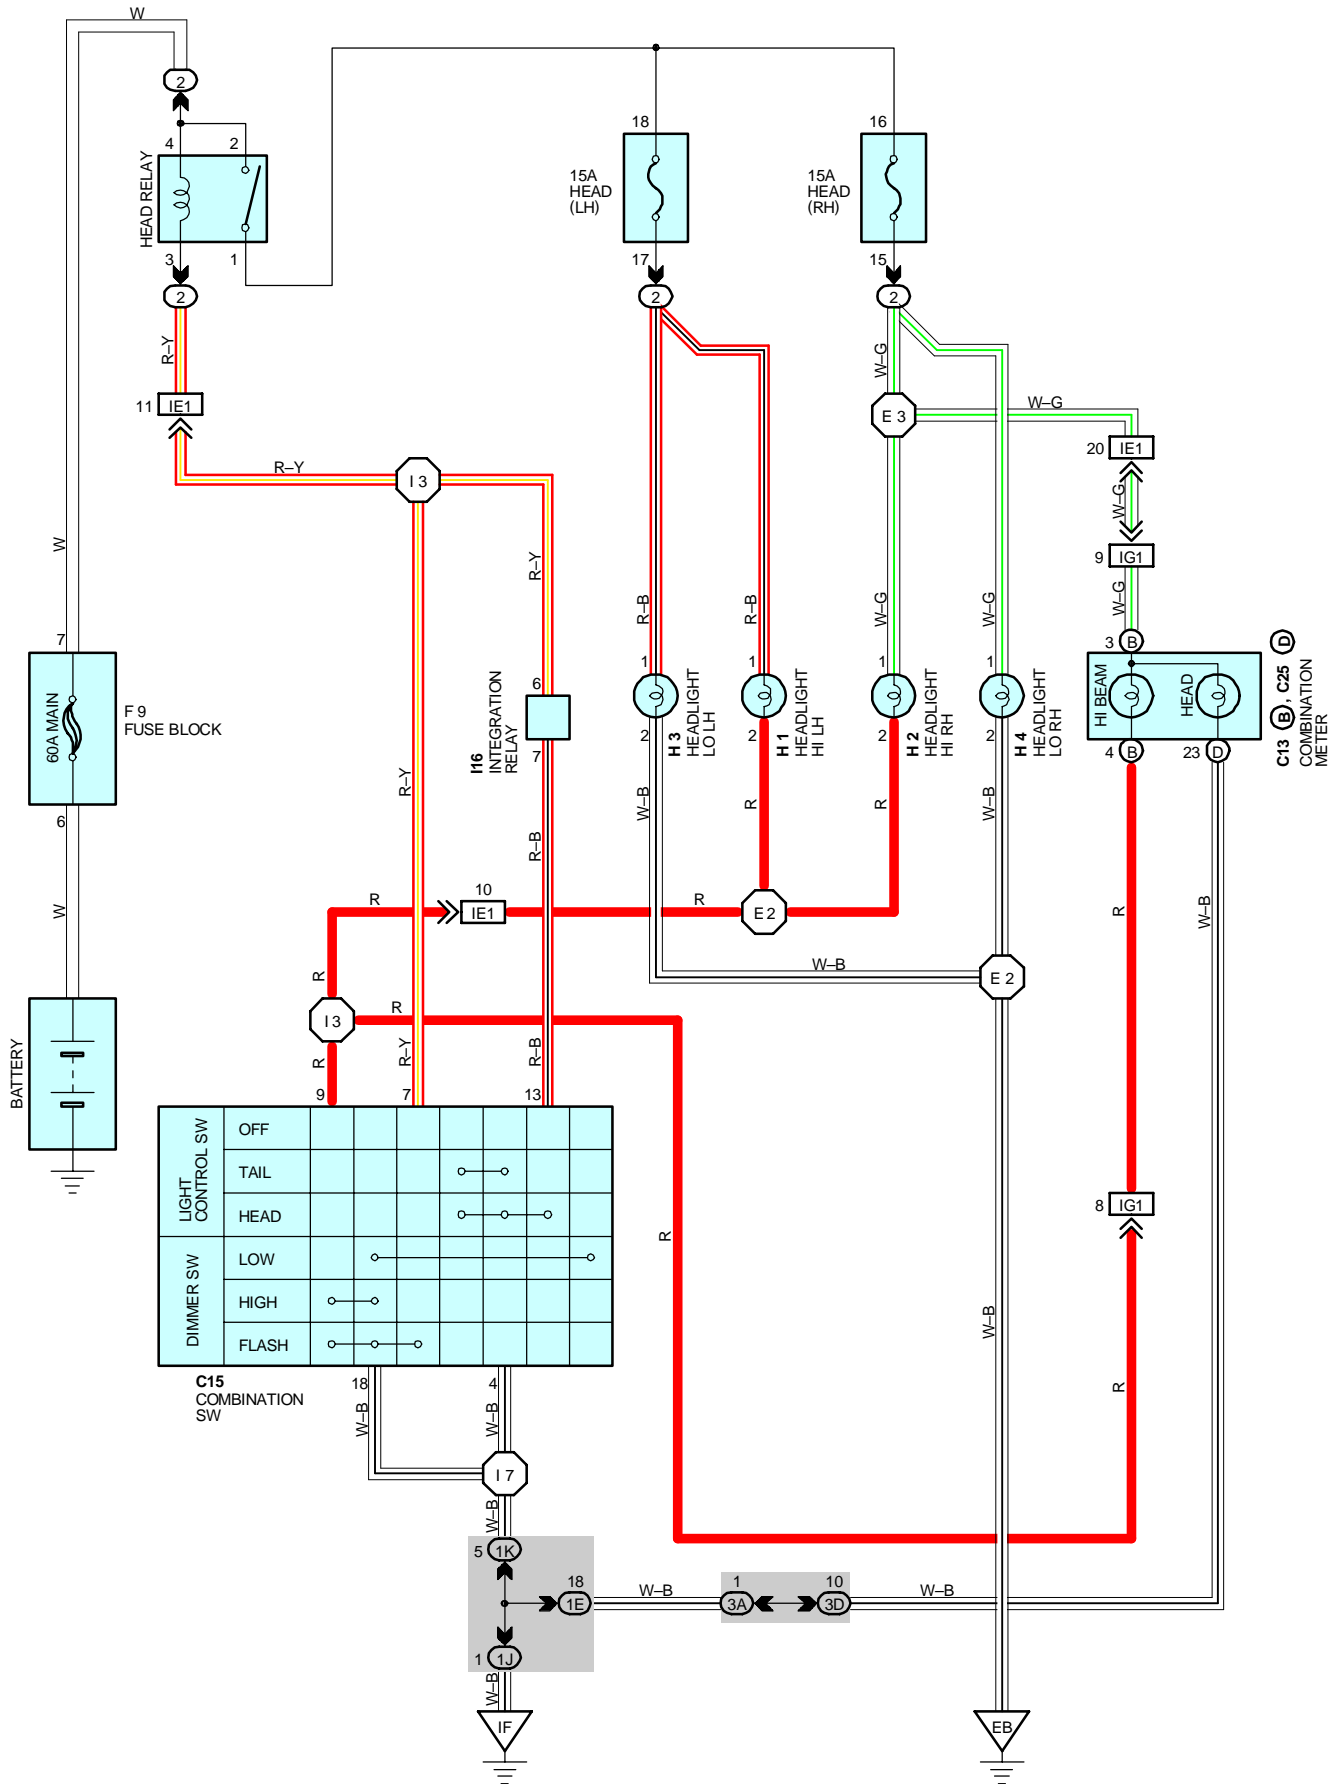

HEADLIGHT (2JZ-GE USA)



SERVICE HINTS

HEAD RELAY

1-2 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

C15 LIGHT CONTROL SW [COMB. SW]

13-4 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

C15 DIMMER SW [COMB. SW]

7-18 : CLOSED WITH DIMMER SW AT **FLASH** POSITION

9-18 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13 B	30	F 9	28	H 3	28
C15	30	H 1	28	H 4	28
C25 D	30	H 2	28	I16	31



: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1J	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1K	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
3A	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D	22	INSTRUMENT PANEL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IE1	40	ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4)
IG1	40	INSTRUMENT PANEL WIRE AND COWL WIRE (R/B NO. 5)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EB	38	FRONT SIDE OF LEFT FENDER
IF	40	LEFT KICK PANEL



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	38	ENGINE ROOM MAIN WIRE	I 3	42	COWL WIRE
E 3	38	ENGINE ROOM MAIN WIRE	I 7	42	COWL WIRE

