



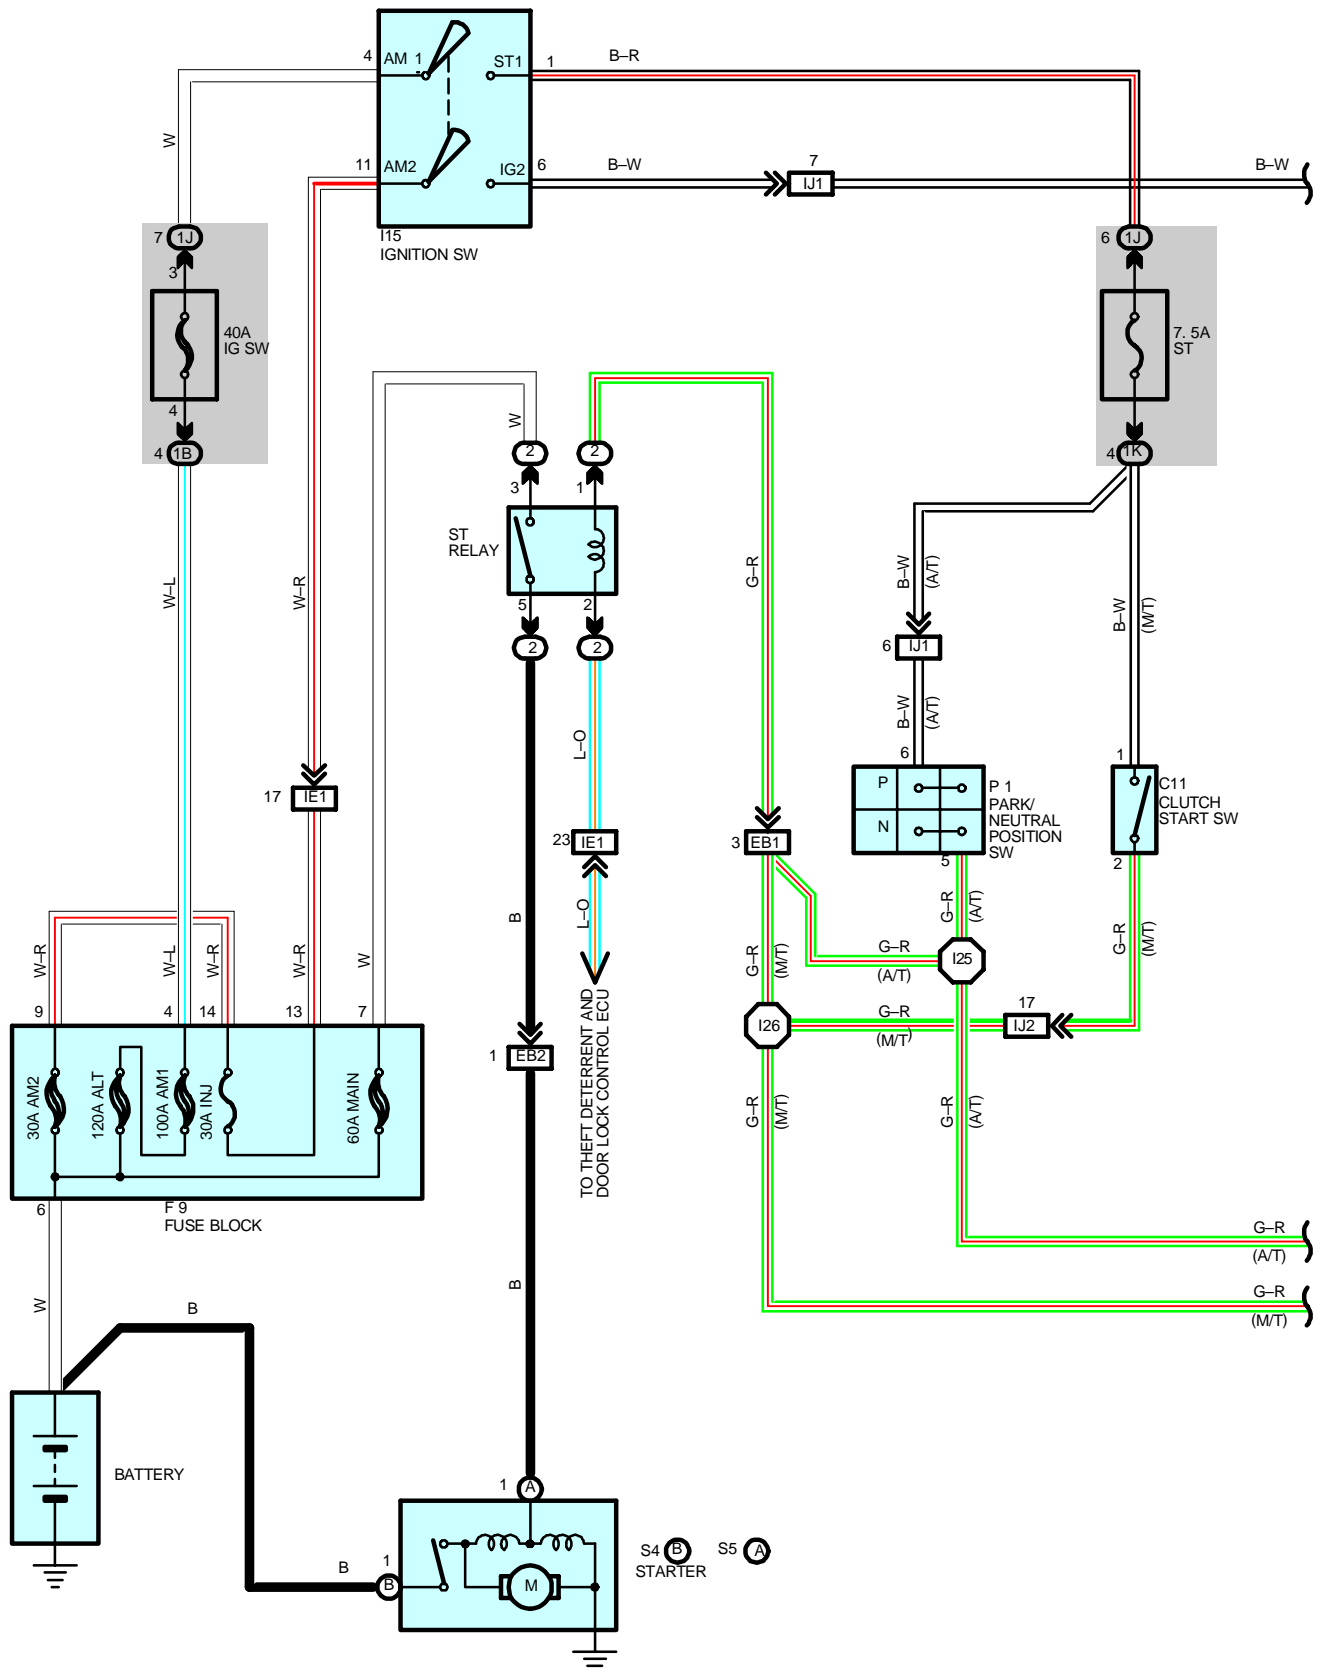

STARTING AND IGNITION (2JZ-GE)

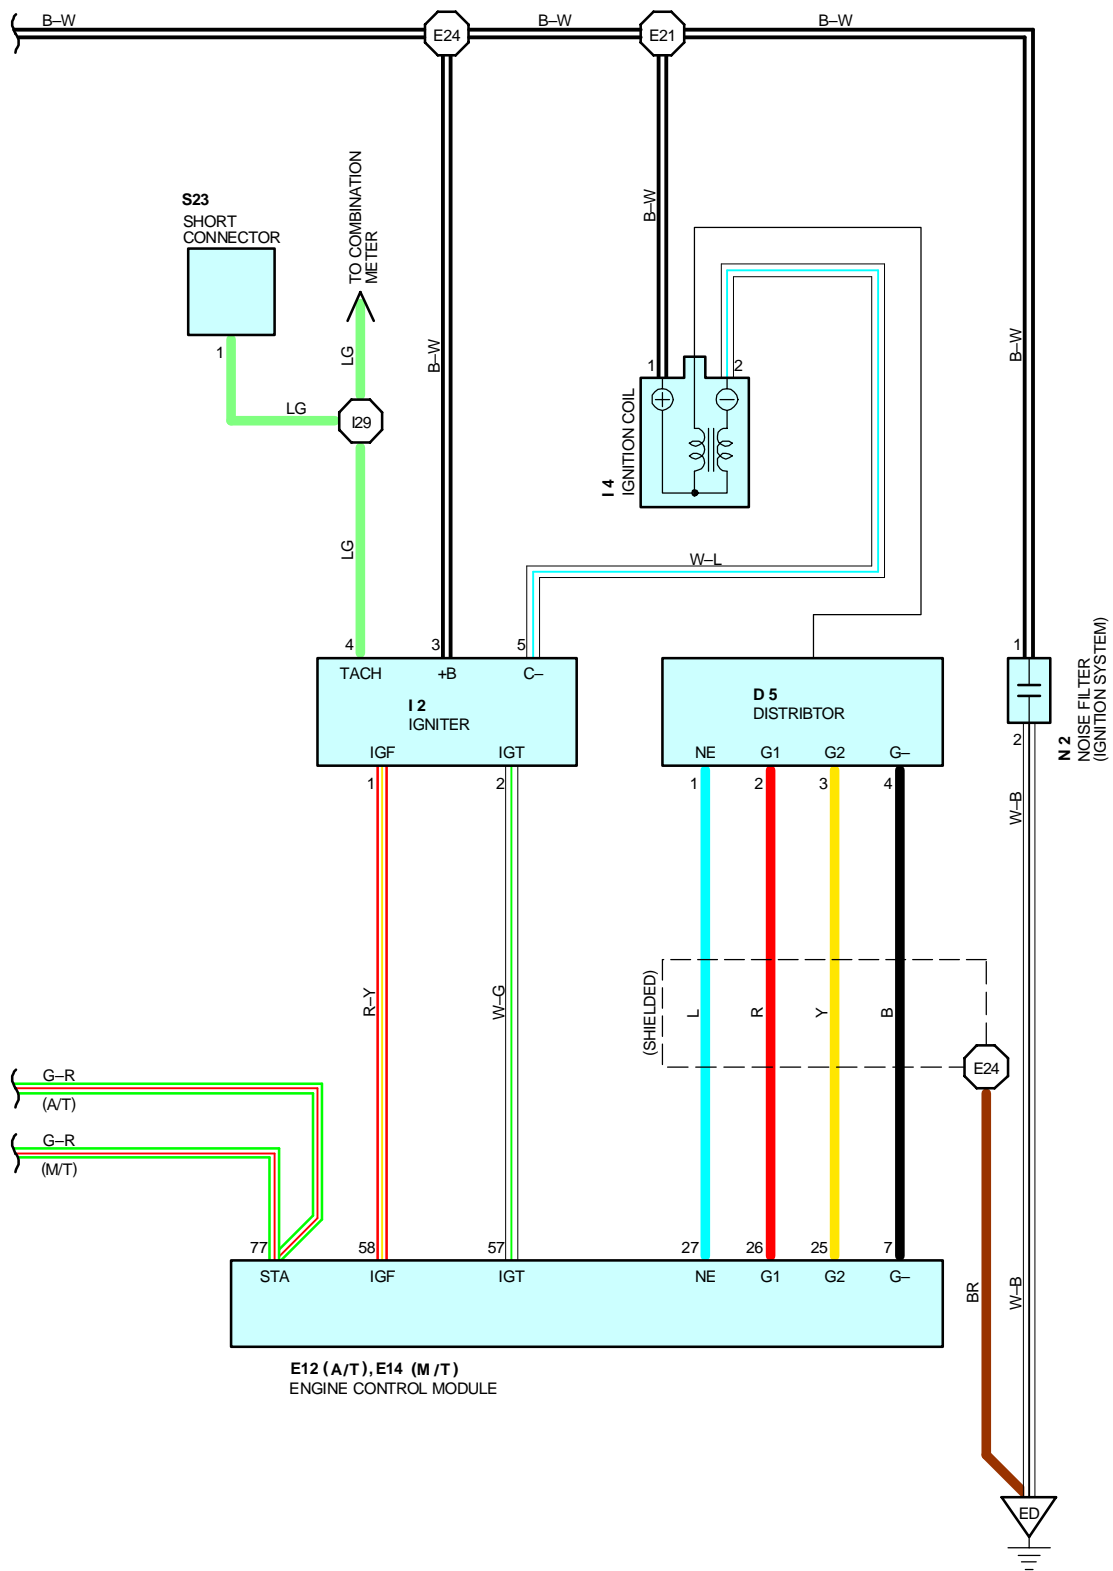





STARTING AND IGNITION (2JZ-GE)

SERVICE HINTS

I15 IGNITION SW

4-1 : CLOSED WITH IGNITION SW AT **ST** POSITION
11-6 : CLOSED WITH IGNITION SW AT **ON** OR **ST** POSITION

P 1 PARK/NEUTRAL POSITION SW

6-5 : CLOSED WITH A/T SHIFT LEVER IN **P** OR **N** POSITION

A 4 (B), S 5 (A) STARTER

POINTS CLOSED WITH PARK/NEUTRAL POSITION SW ON AND IGNITION SW AT **ST** POSITION (A/T)
POINTS CLOSED WITH CLUTCH START SW ON AND IGNITION SW AT **ST** POSITION (M/T)

: PARTS LOCATION

| CODE | SEE PAGE | CODE | SEE PAGE | CODE | SEE PAGE |
|------|----------|------|----------|------|----------|
| C11 | 30 | I 2 | 29 | S 4 | B 29 |
| D 5 | 28 | I 4 | 29 | S 5 | A 29 |
| E12 | 30 | I15 | 31 | S23 | 31 |
| E14 | 30 | N 2 | 29 | | |
| F 9 | 28 | P 1 | 29 | | |

: RELAY BLOCKS

| CODE | SEE PAGE | RELAY BLOCKS (RELAY BLOCK LOCATION) |
|------|----------|-------------------------------------|
| 2 | 19 | R/B NO. 2 (ENGINE COMPARTMENT LEFT) |

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| CODE | SEE PAGE | JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|---|
| IB | 20 | ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL) |
| IJ | 20 | COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL) |
| IK | | |

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION) |
|------|----------|---|
| EB1 | 38 | ENGINE WIRE AND ENGINE ROOM MAIN WIRE (FRONT SIDE OF R/B NO. 2) |
| EB2 | | |
| IE1 | 40 | ENGINE ROOM MAIN WIRE AND COWL WIRE (R/B NO. 4) |
| IJ1 | 40 | ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL) |
| IJ2 | | |

: GROUND POINTS

| CODE | SEE PAGE | GROUND POINTS LOCATION |
|------|----------|-------------------------------|
| ED | 38 | REAR SIDE OF CYLINDER HEAD RH |

: SPLICE POINTS

| CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E21 | 38 | ENGINE WIRE | I26 | 42 | ENGINE WIRE |
| E24 | | | I29 | | |
| I25 | 42 | | | | |

