

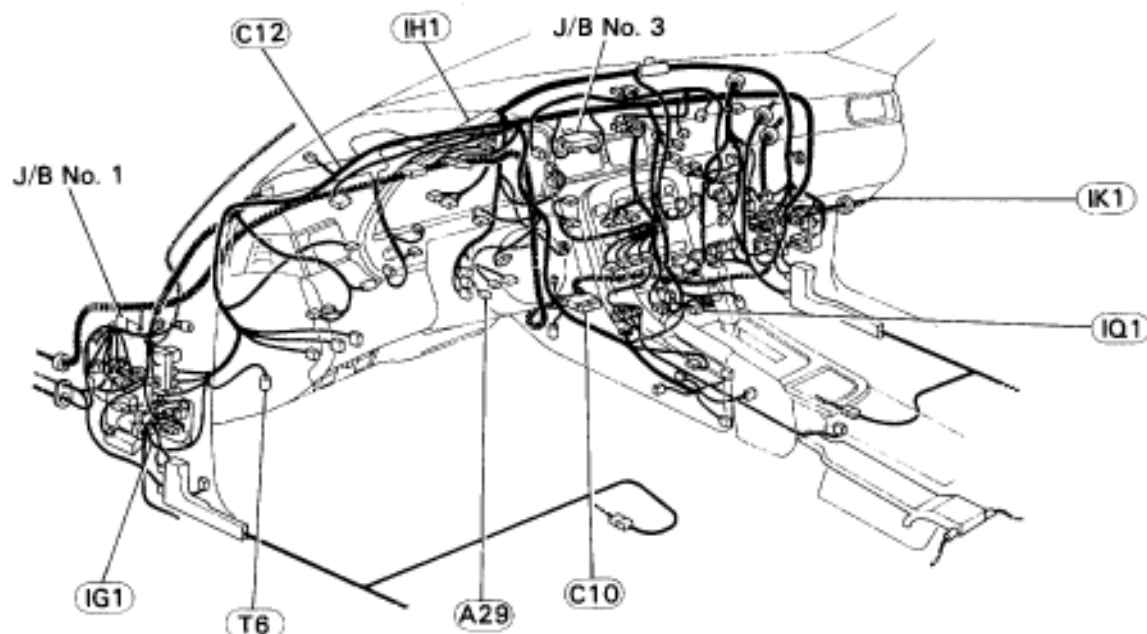
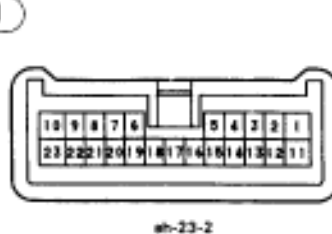
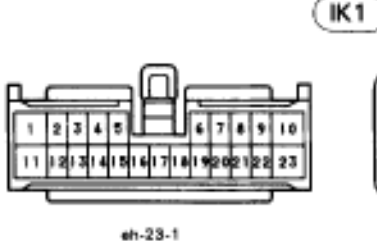
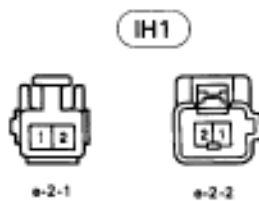
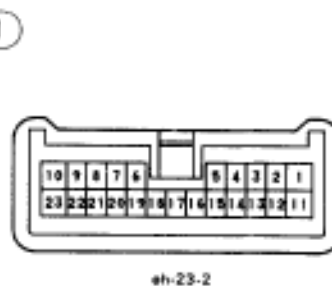



Location of Connectors

LOCATION OF CONNECTORS IN INSTRUMENT PANEL

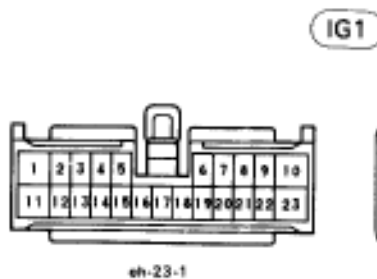


BE6631

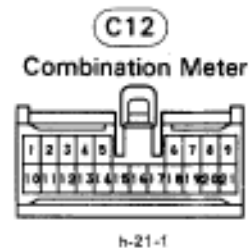

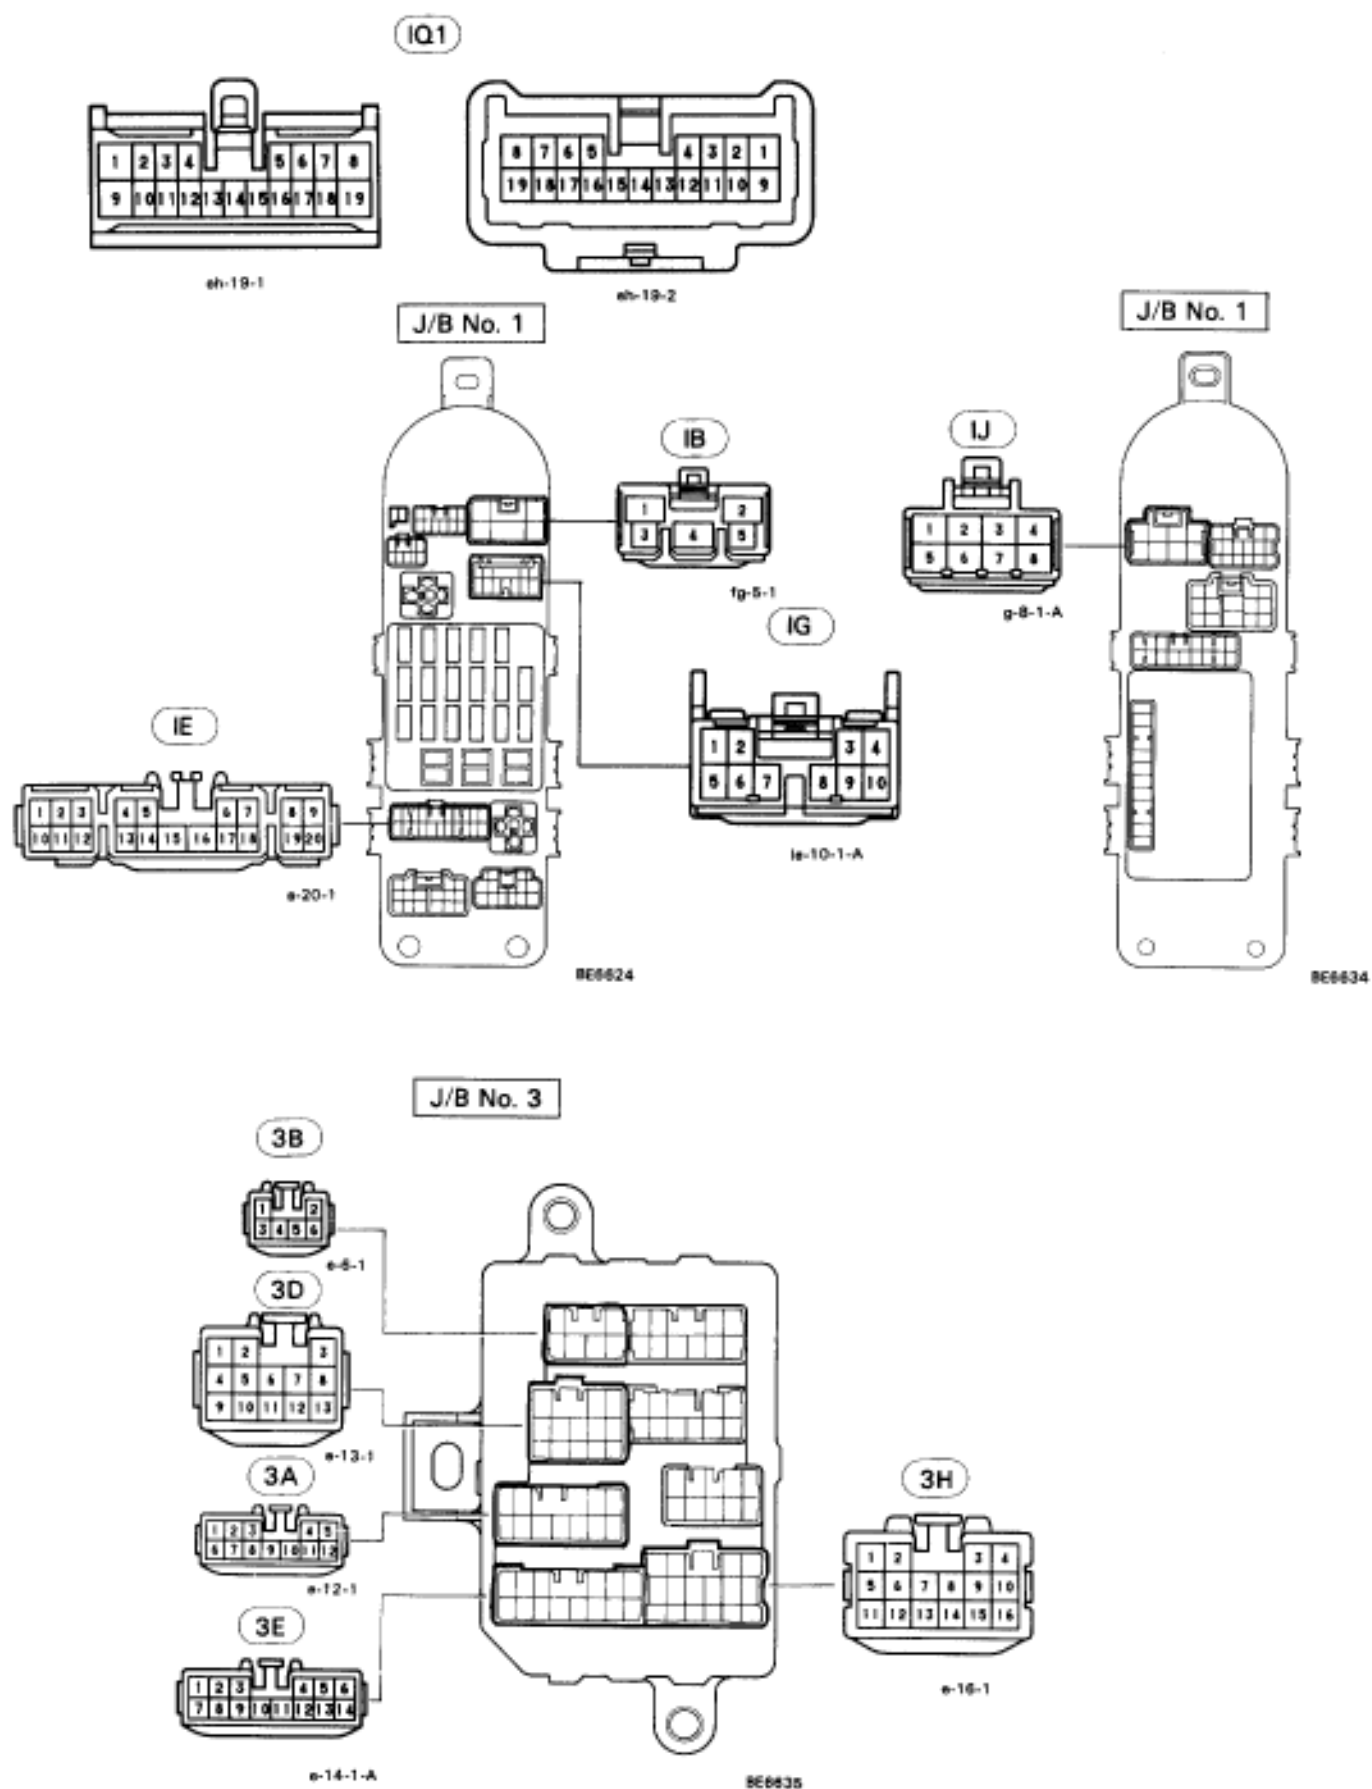

LOCATION OF CONNECTORS IN ENGINE COMPARTMENT

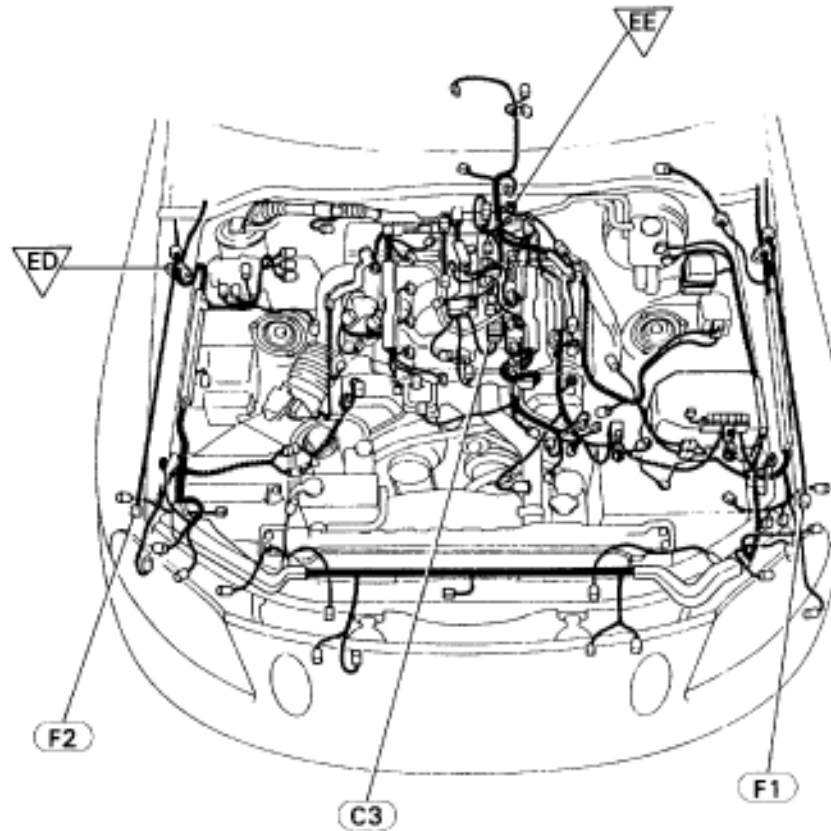


8E683D

C3
Check Connector

F1
Front Airbag Sensor LH

F2
Front Airbag Sensor RH

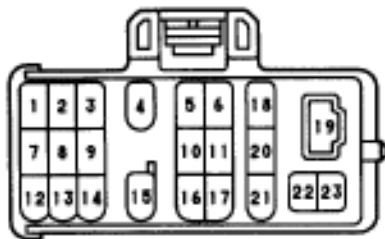

1ej-23-1



1e-2-1-B



1e-2-1-B

MEMO